


DISPLAY DOES NOT DIM (NIGHT SCREEN) WITH TAIL SWITCH ON

INSPECTION PROCEDURE

1 CHECK IMAGE QUALITY SETTING

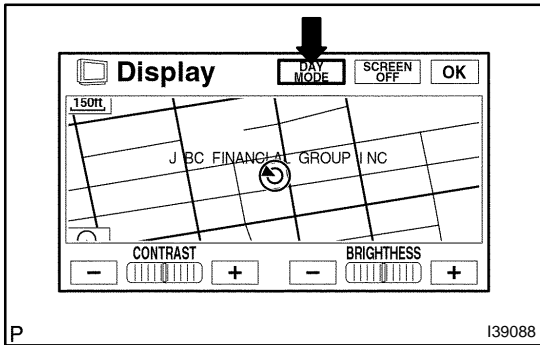


- (a) Enter the display adjustment screen by pressing the "DISPLAY" switch.
- (b) Turn the light control switch to TAIL.
- (c) Check if "DAY MODE" on the display adjustment is ON.
OK: "DAY MODE" is ON.

OK → **TURN FORCED "DAY MODE" SETTING OFF**

NG

2 DISPLAY CHECK MODE(VEHICLE SIGNAL CHECK MODE)

- (a) Enter the "Display Check" mode (Vehicle Signal Check Mode) (see page 05-1857).

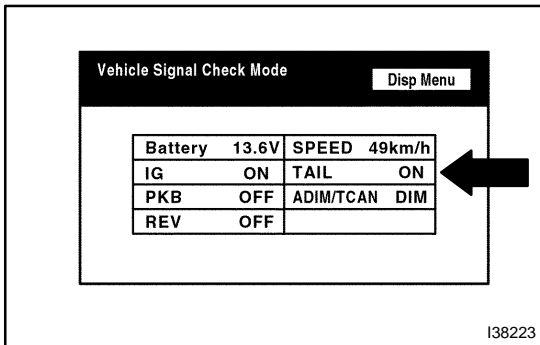

- (b) Turn the light control switch TAIL or ON and OFF.
Standard:

TAIL switch	Display
TAIL or ON	ON
OFF	OFF

HINT:

The display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

OK → **REPLACE MULTI-DISPLAY (SEE PAGE 67-7)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1873)