



VOICE GUIDANCE DOES NOT FUNCTION

INSPECTION PROCEDURE

1 CHECK NAVIGATION SYSTEM SETTING

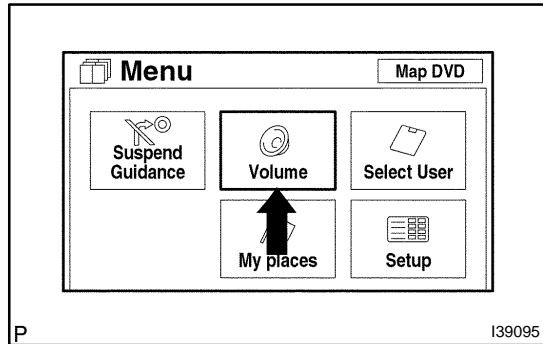

- (a) Enter the "MENU" screen by pressing the "MENU" switch.
- (b) Enter the volume adjustment screen by pressing the "Volume" switch.

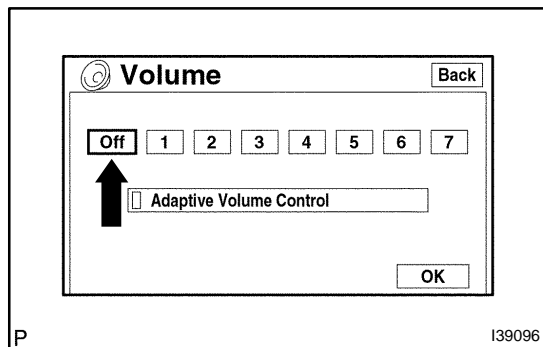


- (c) Check that "OFF" is not selected.
OK: OFF is not selected.


NG → **TURN VOICE GUIDANCE VOLUME UP TO 4 USING VOICE ADJUSTMENT SWITCHES**

OK

2 CHECK NAVIGATION SETTING

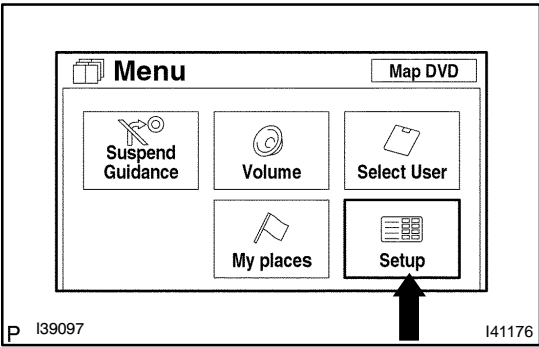

- (a) Enter the "MENU" screen by pressing the "MENU" switch.
- (b) Enter the "Setup" screen by pressing the "Setup" switch.

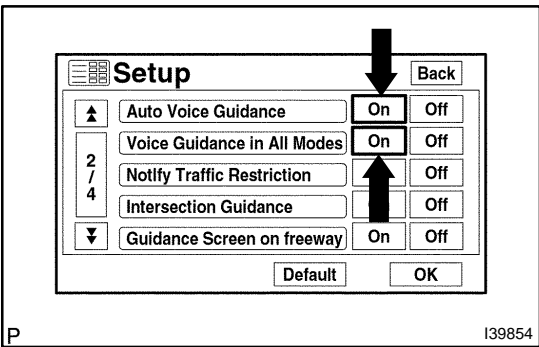


- (c) Check that "Auto Voice Guidance" is not OFF.
OK: Auto voice guidance is not OFF.
- (d) Check if "Voice Guidance in All Modes" is ON.
OK: Voice guidance in all modes is ON.

NG → **TURN AUTO VOICE GUIDANCE TO "ON"**

OK

3 CHECK THE MAP DISC

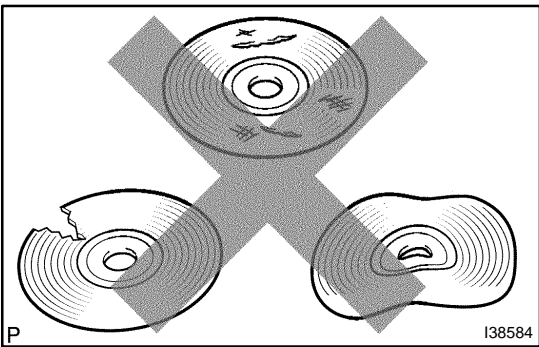

- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG → **REPLACE THE MAP DISC**

OK

4 CHECK RADIO RECEIVER ASSY

- (a) Check if audio sound can be heard from the driver's side speaker.

OK: Audio sound can be heard.

NG

**PROCEED TO NEXT CIRCUIT INSPECTION
SHOWN IN PROBLEM SYMPTOMS TABLE
(SEE PAGE [05-1873](#))**

OK

REPLACE NAVIGATION ECU (SEE PAGE [67-23](#))