


ILLUMINATION FOR PANEL SWITCH DOES NOT COME ON WITH TAIL SWITCH ON

INSPECTION PROCEDURE

1 | DISPLAY CHECK MODE(VEHICLE SIGNAL CHECK MODE)

(a) Enter the "Display Check" mode (Vehicle Signal Check Mode) (see page 05-1857).

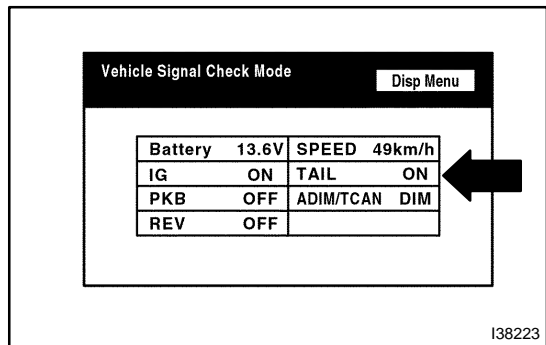

(b) Turn the light control switch TAIL or ON and OFF.

Standard:

TAIL Switch	Display
TAIL or ON	ON
OFF	OFF

HINT:

This display is updated once per second. As a result, it is normal for the display to lag behind the actual change in the switch.

OK → **REPLACE MULTI-DISPLAY (SEE PAGE 67-7)**

NG

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1873)