


VEHICLE POSITION MARK IS NOT UPDATED

INSPECTION PROCEDURE

1 CHECK THE MAP DISC

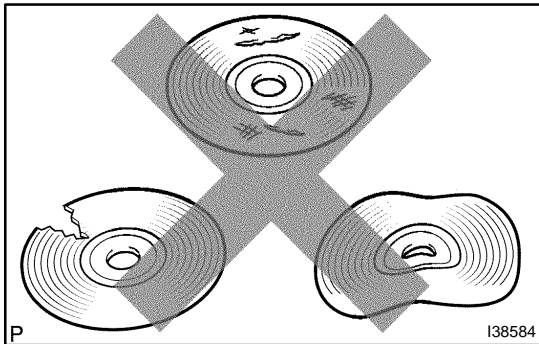

- (a) Check that the map disc is not deformed or cracked.
OK: No deformations or cracks appear on the map disc.

NG → REPLACE THE MAP DISC

OK

2 CHECK THE MAP DISPLAY


- (a) Check if a touch scroll can be performed on the map display.
OK: Touch scroll can be performed.

NG → PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1873)

OK

3 NAVIGATION CHECK MODE(VEHICLE SENSORS)

- (a) Enter the "Navigation Check" mode (Vehicle Sensors) (see page 05-1859).

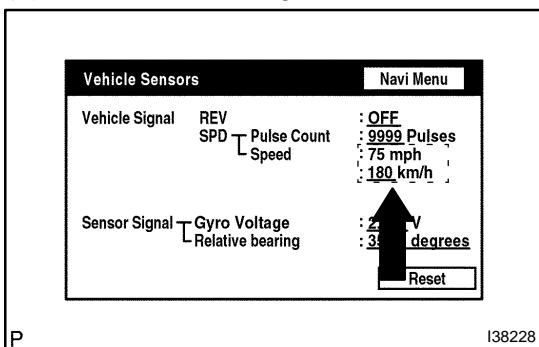

- (b) While driving, compare the "SPEED" indicator to the reading on the speedometer. Check if these readings are almost the same.
OK: The readings are almost the same.

NG → GO TO "SPEED SIGNAL CIRCUIT (NAVIGATION ECU – COMBINATION METER ASSY)" IN THE FLOW CHART (SEE PAGE 05-1937)

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (SEE PAGE 05-1873)