



# NAVIGATION CHECK MODE (GPS INFORMATION)

HINT:


- This mode displays GPS satellite information.
  - Illustrations may differ from the actual vehicle depending on the device settings and options. Therefore, some detailed areas may not be shown exactly the same as on the actual vehicle.
1. Enter diagnostic mode (see page 05-1881).

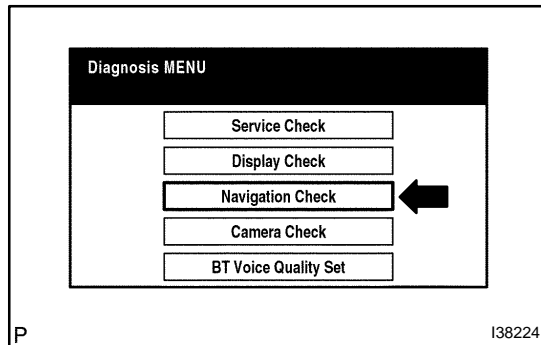

2. Select "Navigation Check" from the "Diagnosis MENU" screen.

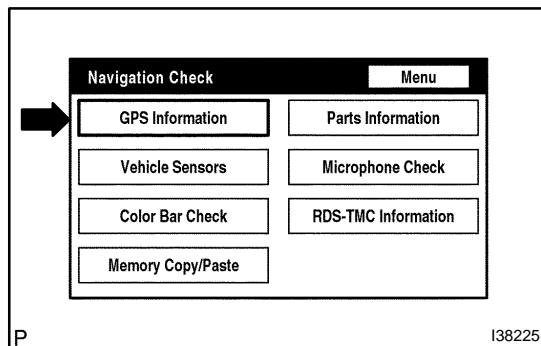

3. Select "GPS Information" from the "Navigation Check" screen.

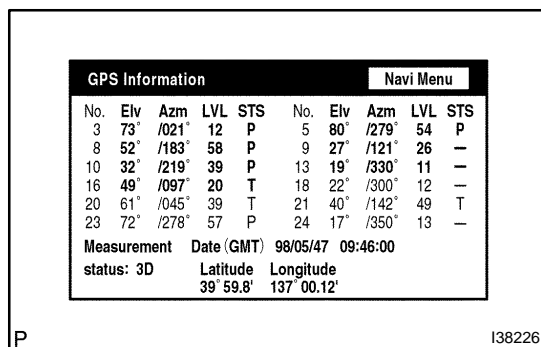

4. When GPS information is displayed, check the GPS conditions.

HINT:

This screen is updated once per second when input signals to the vehicle are changed.