


ON-VEHICLE INSPECTION

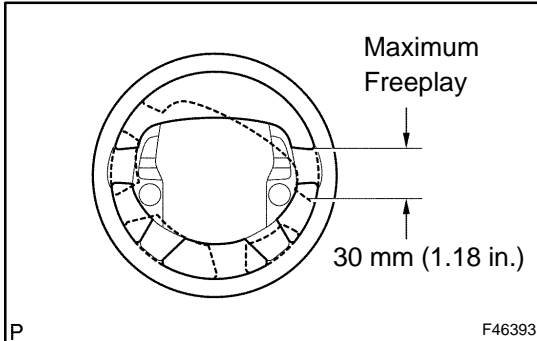

1. CHECK STEERING WHEEL FREE PLAY

- (a) Stop the vehicle and align the tires straight ahead.
- (b) Turn the steering wheel gently right and left, and check the steering wheel free play.

Maximum Free Play: 30 mm (1.18 in.)

If the free play exceeds the maximum, replace the steering intermediate shaft sub-assy or steering gear.