REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
   CAUTION:
   Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. **REMOVE RADIATOR ASSEMBLY**
   (a) Remove the radiator (see page CO-29).

DISASSEMBLY

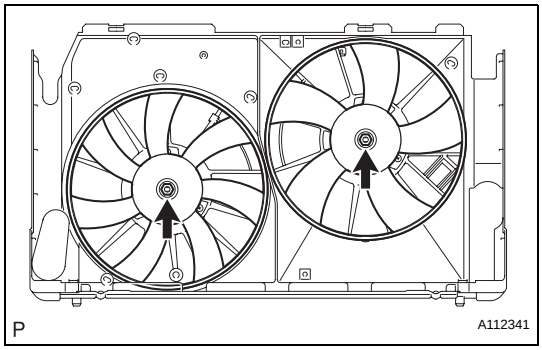

1. **REMOVE FAN**
   (a) Remove the 2 nuts and 2 fans.

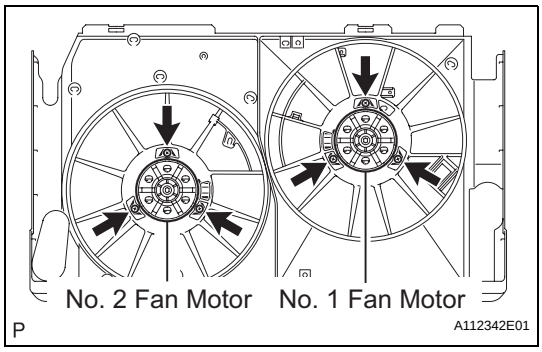

2. **REMOVE NO. 1 COOLING FAN MOTOR**
   (a) Remove the 3 screws and fan motor.
3. **REMOVE NO. 2 COOLING FAN MOTOR**
   (a) Remove the 3 screws and fan motor.

CO

REASSEMBLY

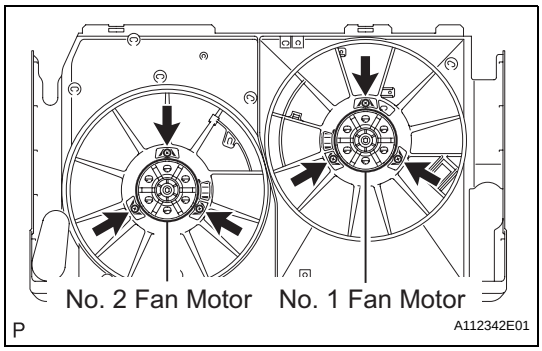

1. **INSTALL NO. 2 COOLING FAN MOTOR**
   (a) Install the fan motor with the 3 screws.
   Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)
2. **INSTALL NO. 1 COOLING FAN MOTOR**
   (a) Install the fan motor with the 3 screws.
   Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

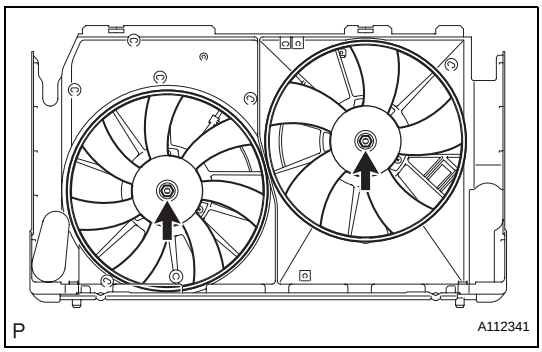

3. **INSTALL FAN**
   (a) Install the 2 fans with the 2 nuts.
   Torque: 6.3 N*m (64 kgf*cm, 55 in.*lbf)
   (b) Check the fan motor operation.

INSTALLATION

1. **INSTALL RADIATOR ASSEMBLY**
   (a) Install the radiator (see page CO-32).
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
3. **ADD ENGINE COOLANT (See page CO-6)**
4. **CHECK FOR ENGINE COOLANT LEAKS (See page CO-1)**