05IVM–01

LOCATION

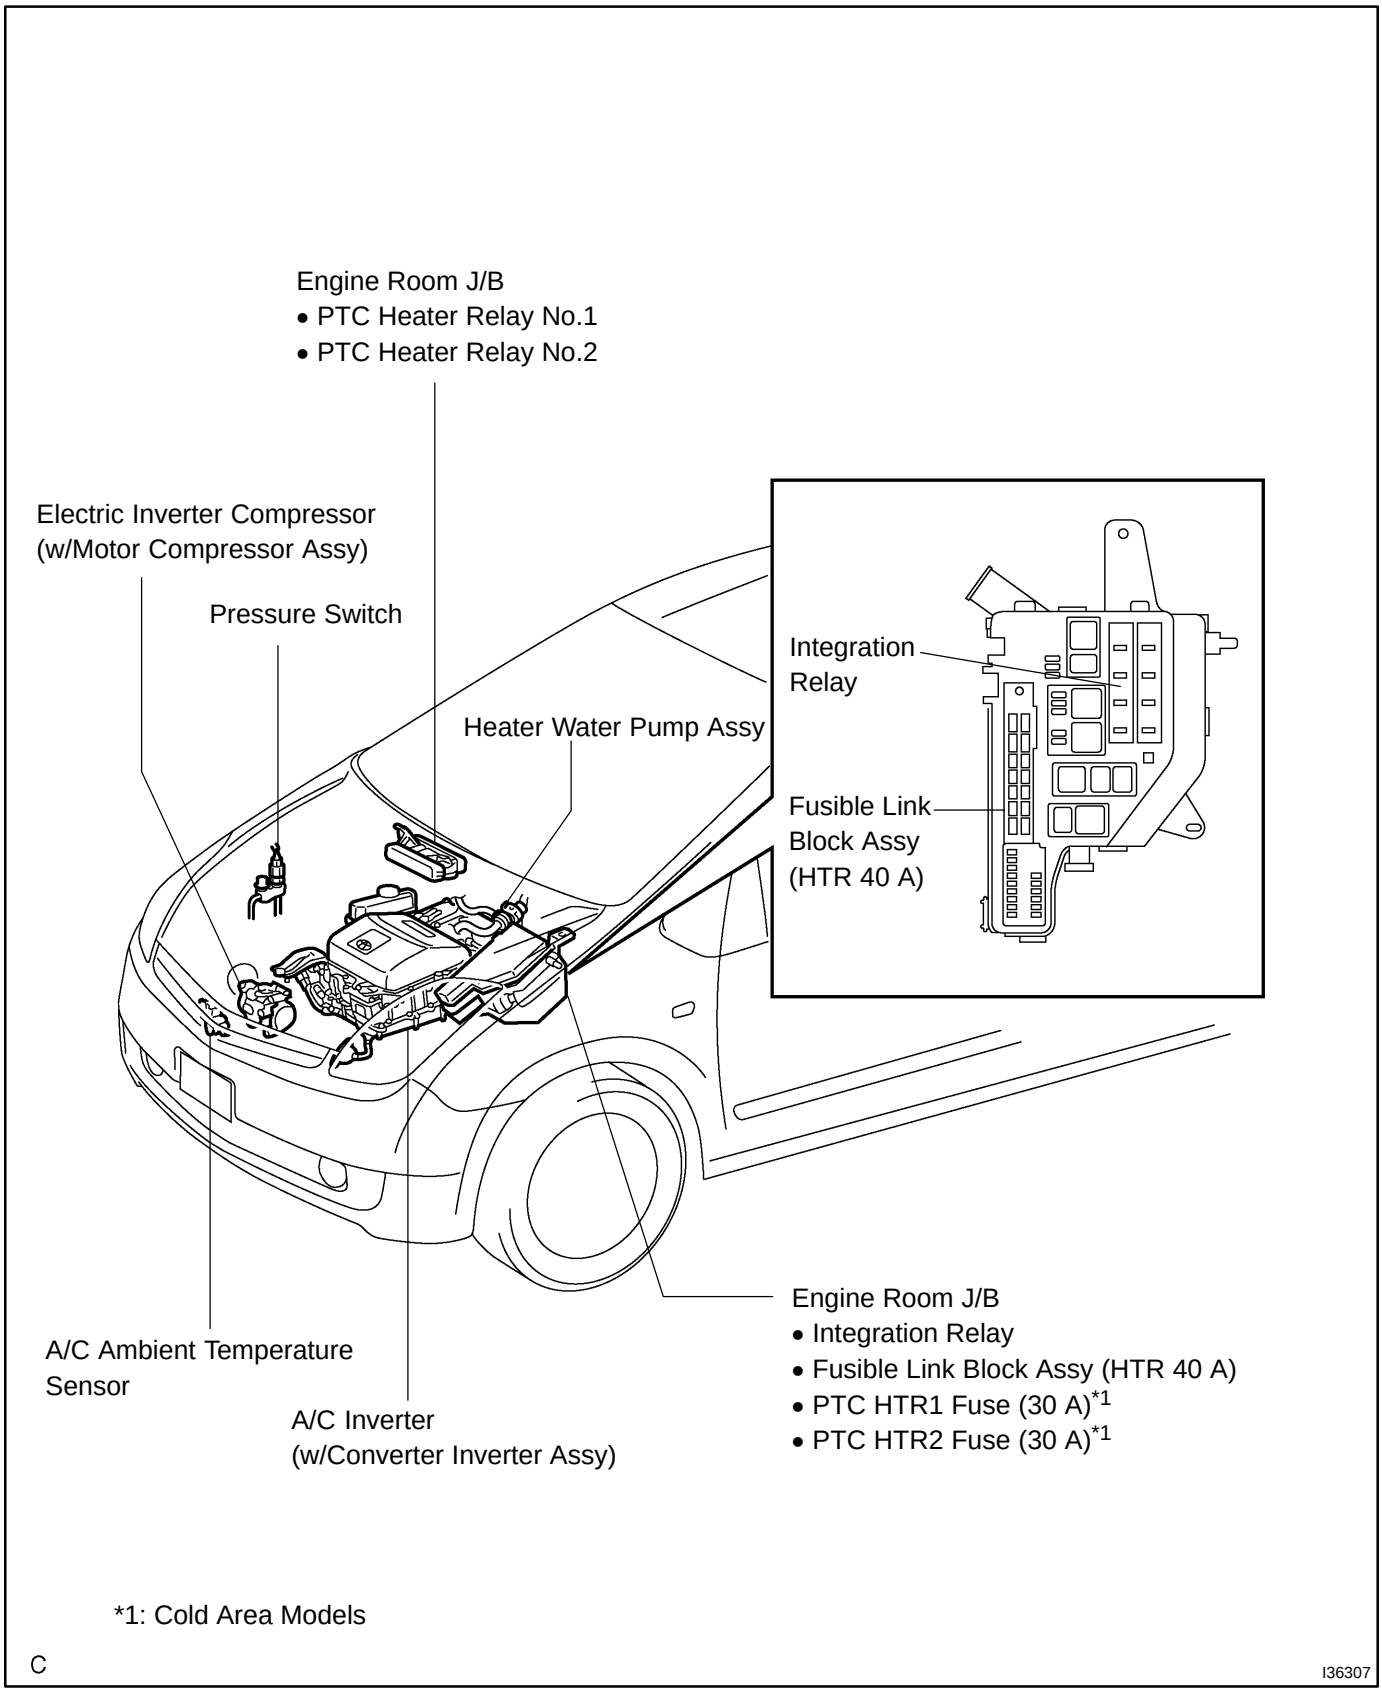

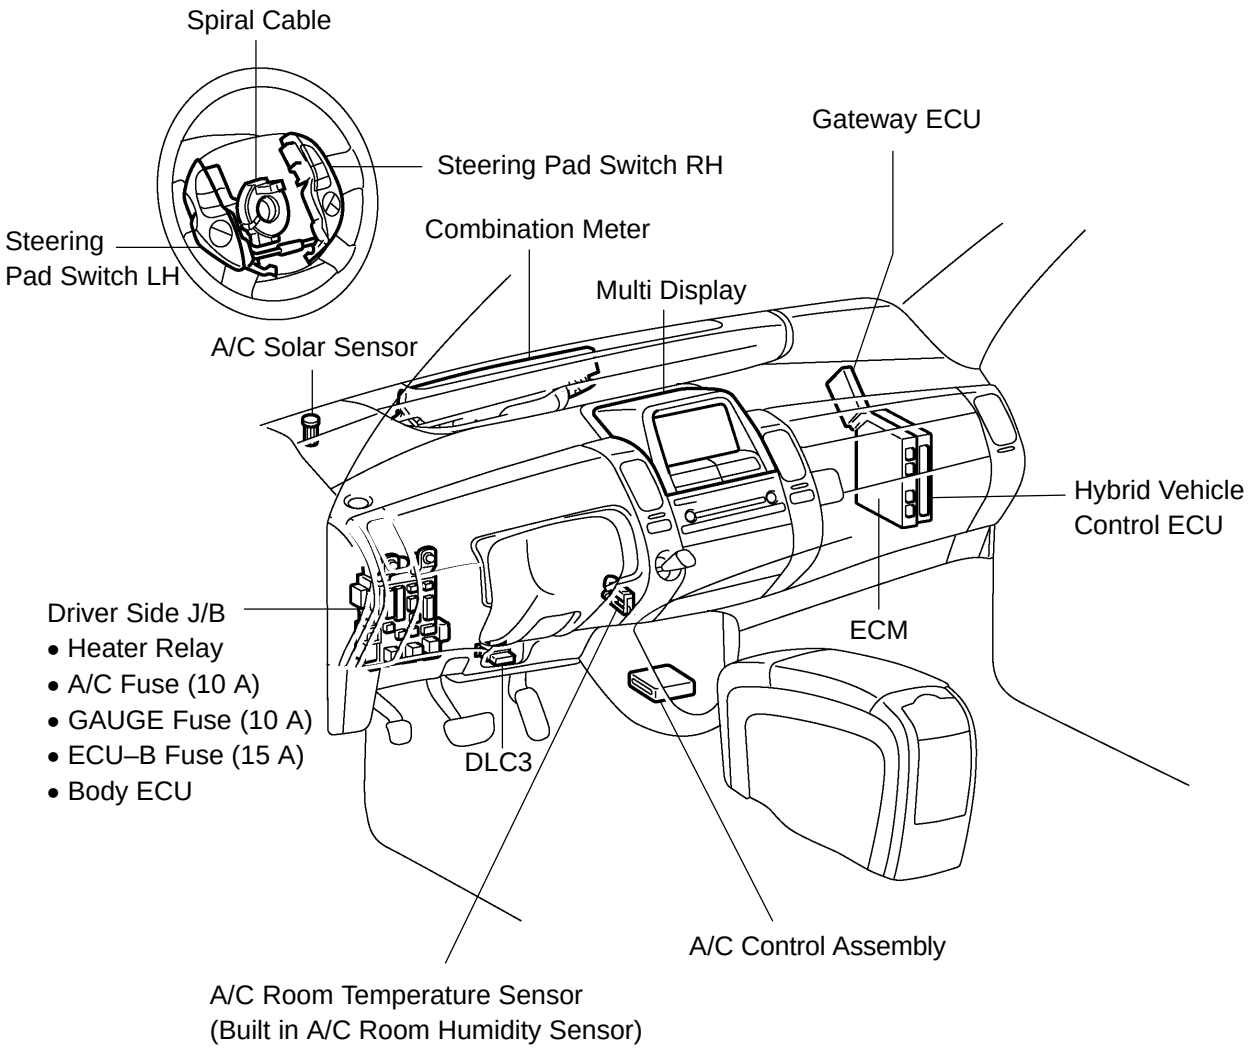
Spiral Cable
Steering Pad Switch RH
Steering
Pad Switch LH
Combination Meter
Gateway ECU
Multi Display
A/C Solar Sensor
Hybrid Vehicle
Control ECU
Driver Side J/B
• Heater Relay
• A/C Fuse (10 A)
• GAUGE Fuse (10 A)
• ECU–B Fuse (15 A)
• Body ECU
ECM
DLC3
A/C Control Assembly
A/C Room Temperature Sensor
(Built in A/C Room Humidity Sensor)

C

I36308

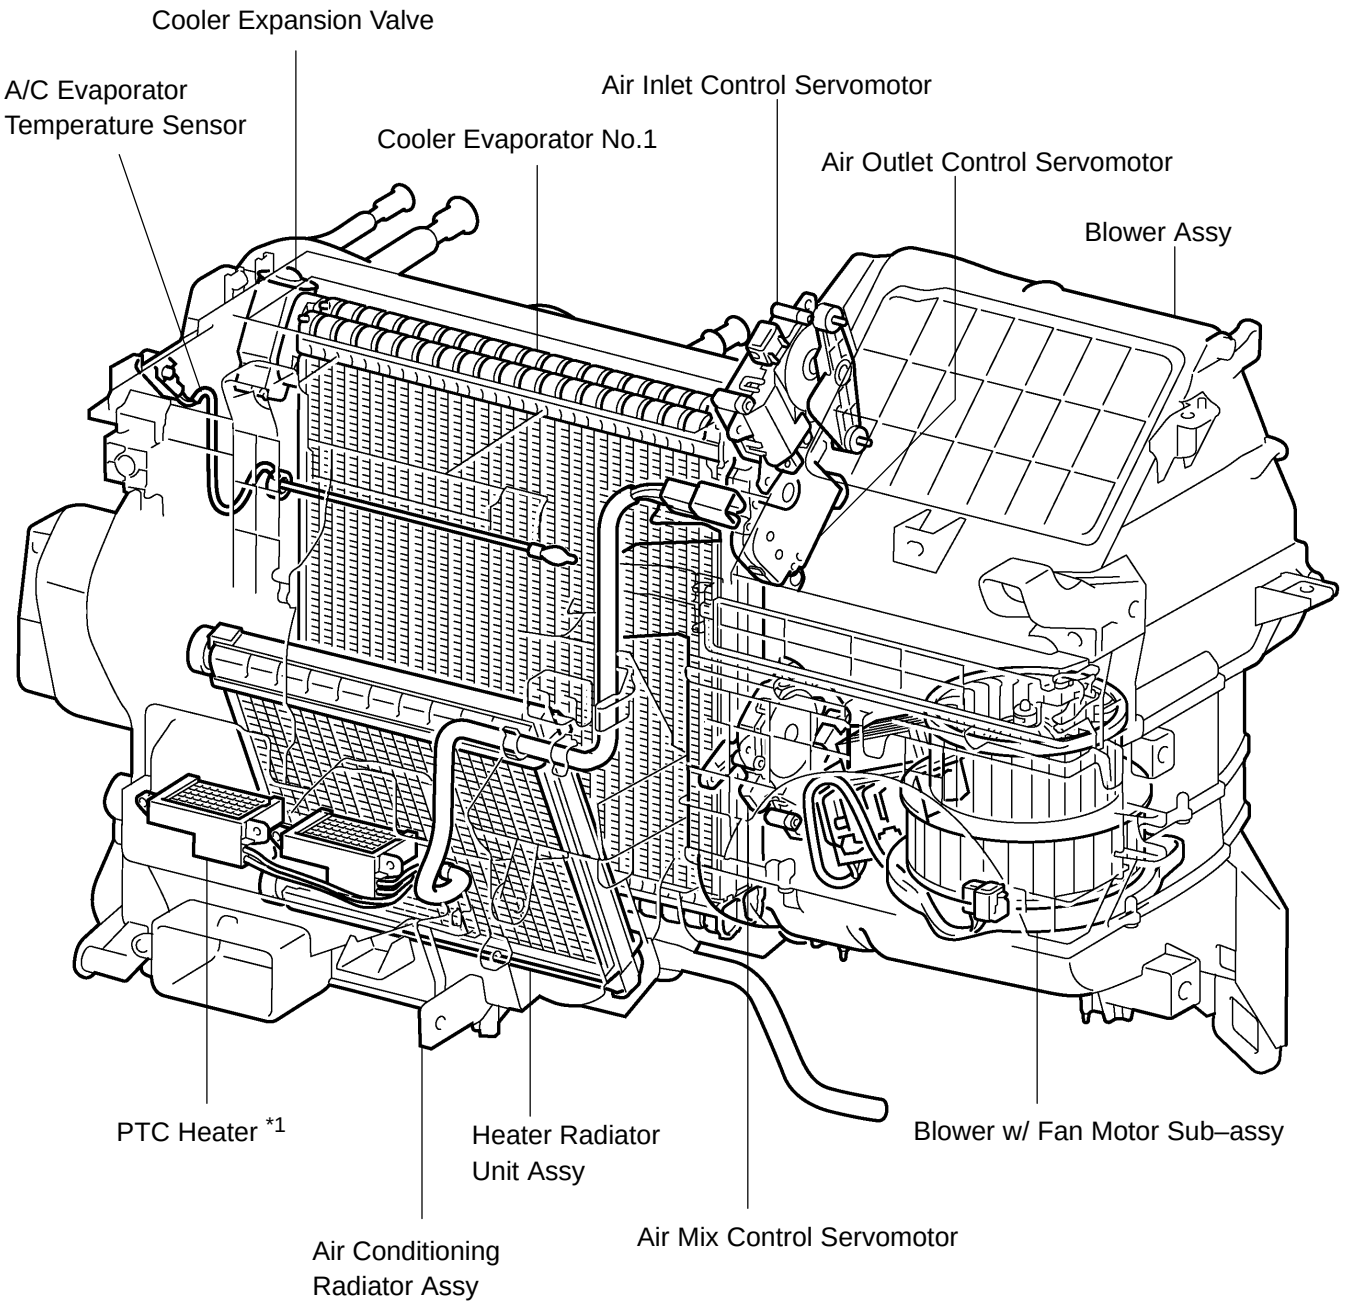

*1: Cold Area Models

C

I36310