(Cont. next page)

Power Source

ECT PRND2L ECT and A/T Indicator (3VZ-FE)

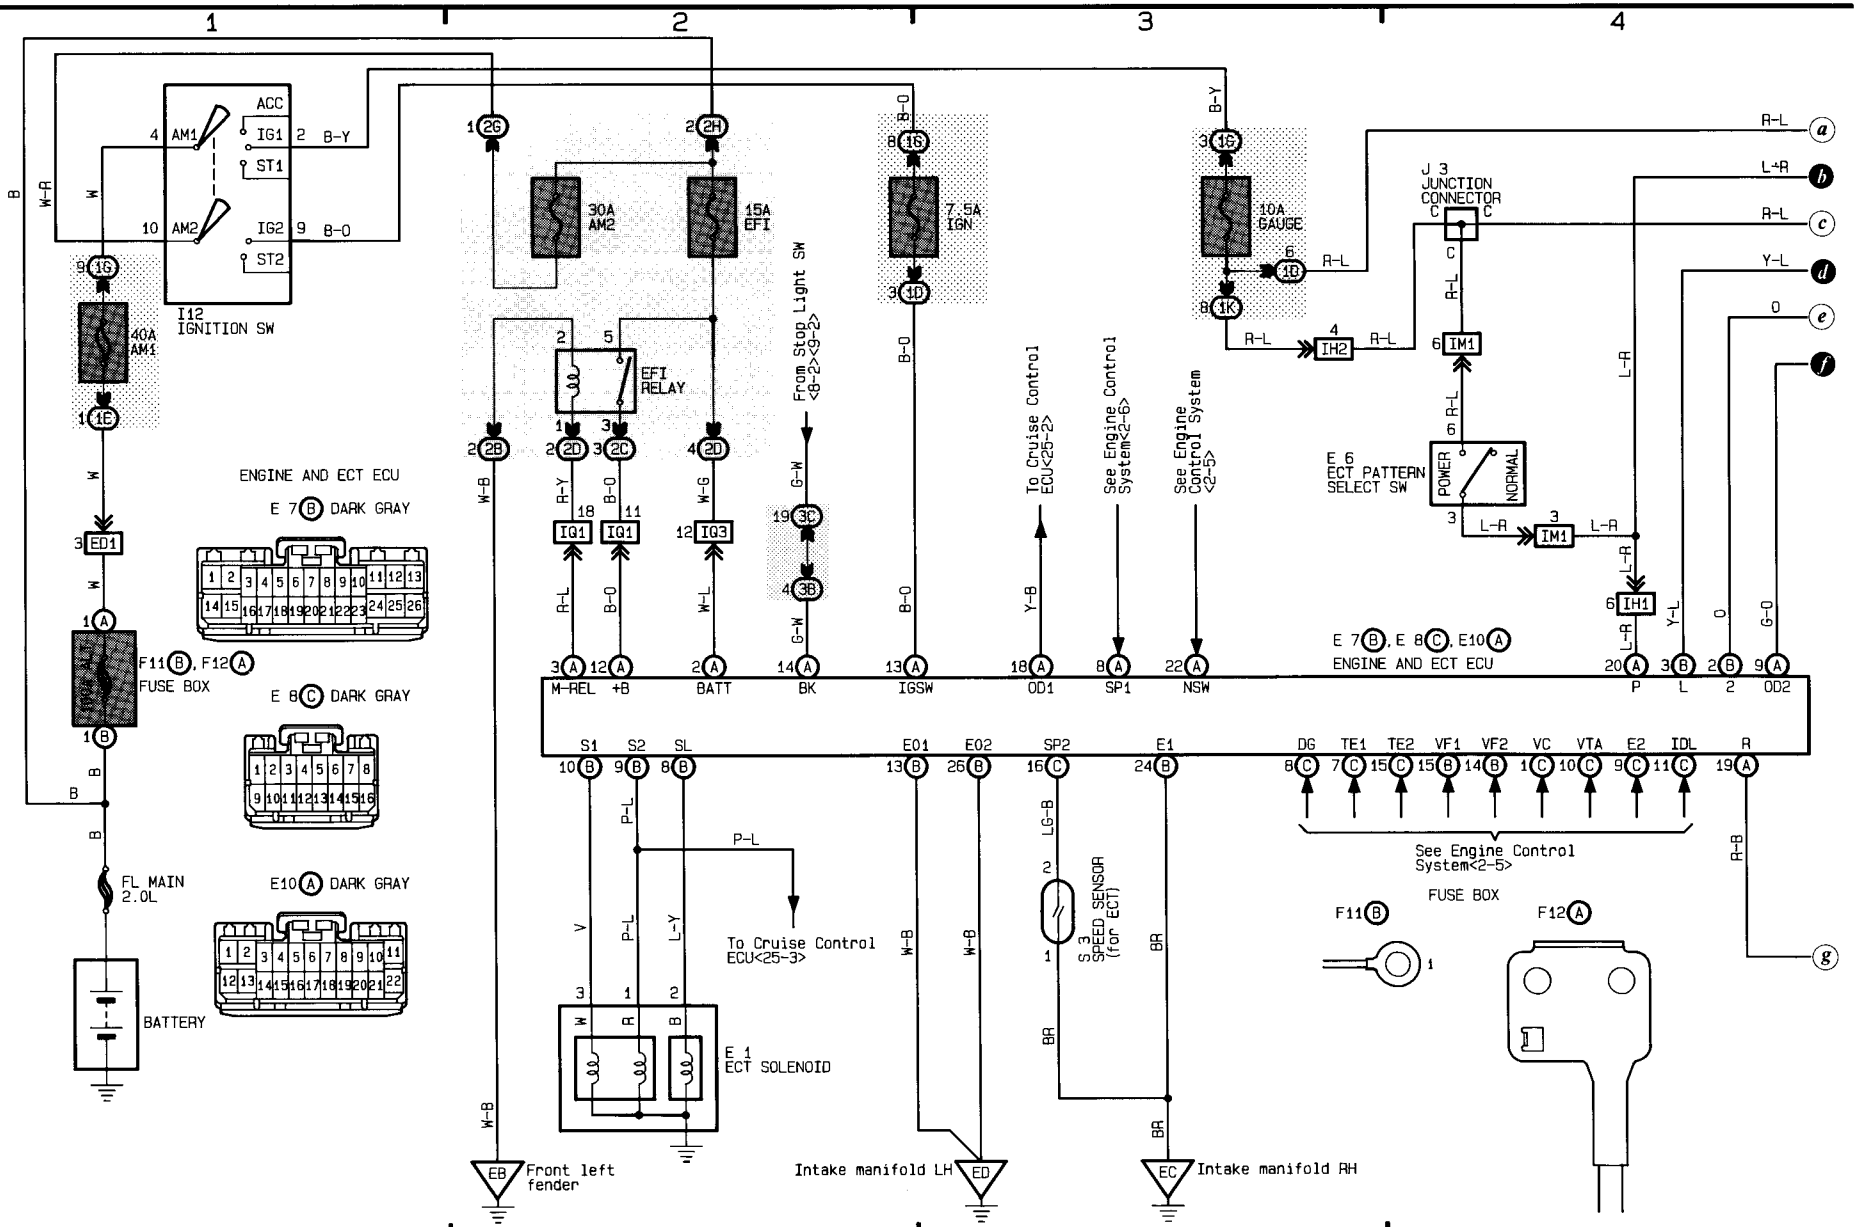

ECT and A/T Indicator (3VZ-FE)

Back-Up Light (3VZ-FE)

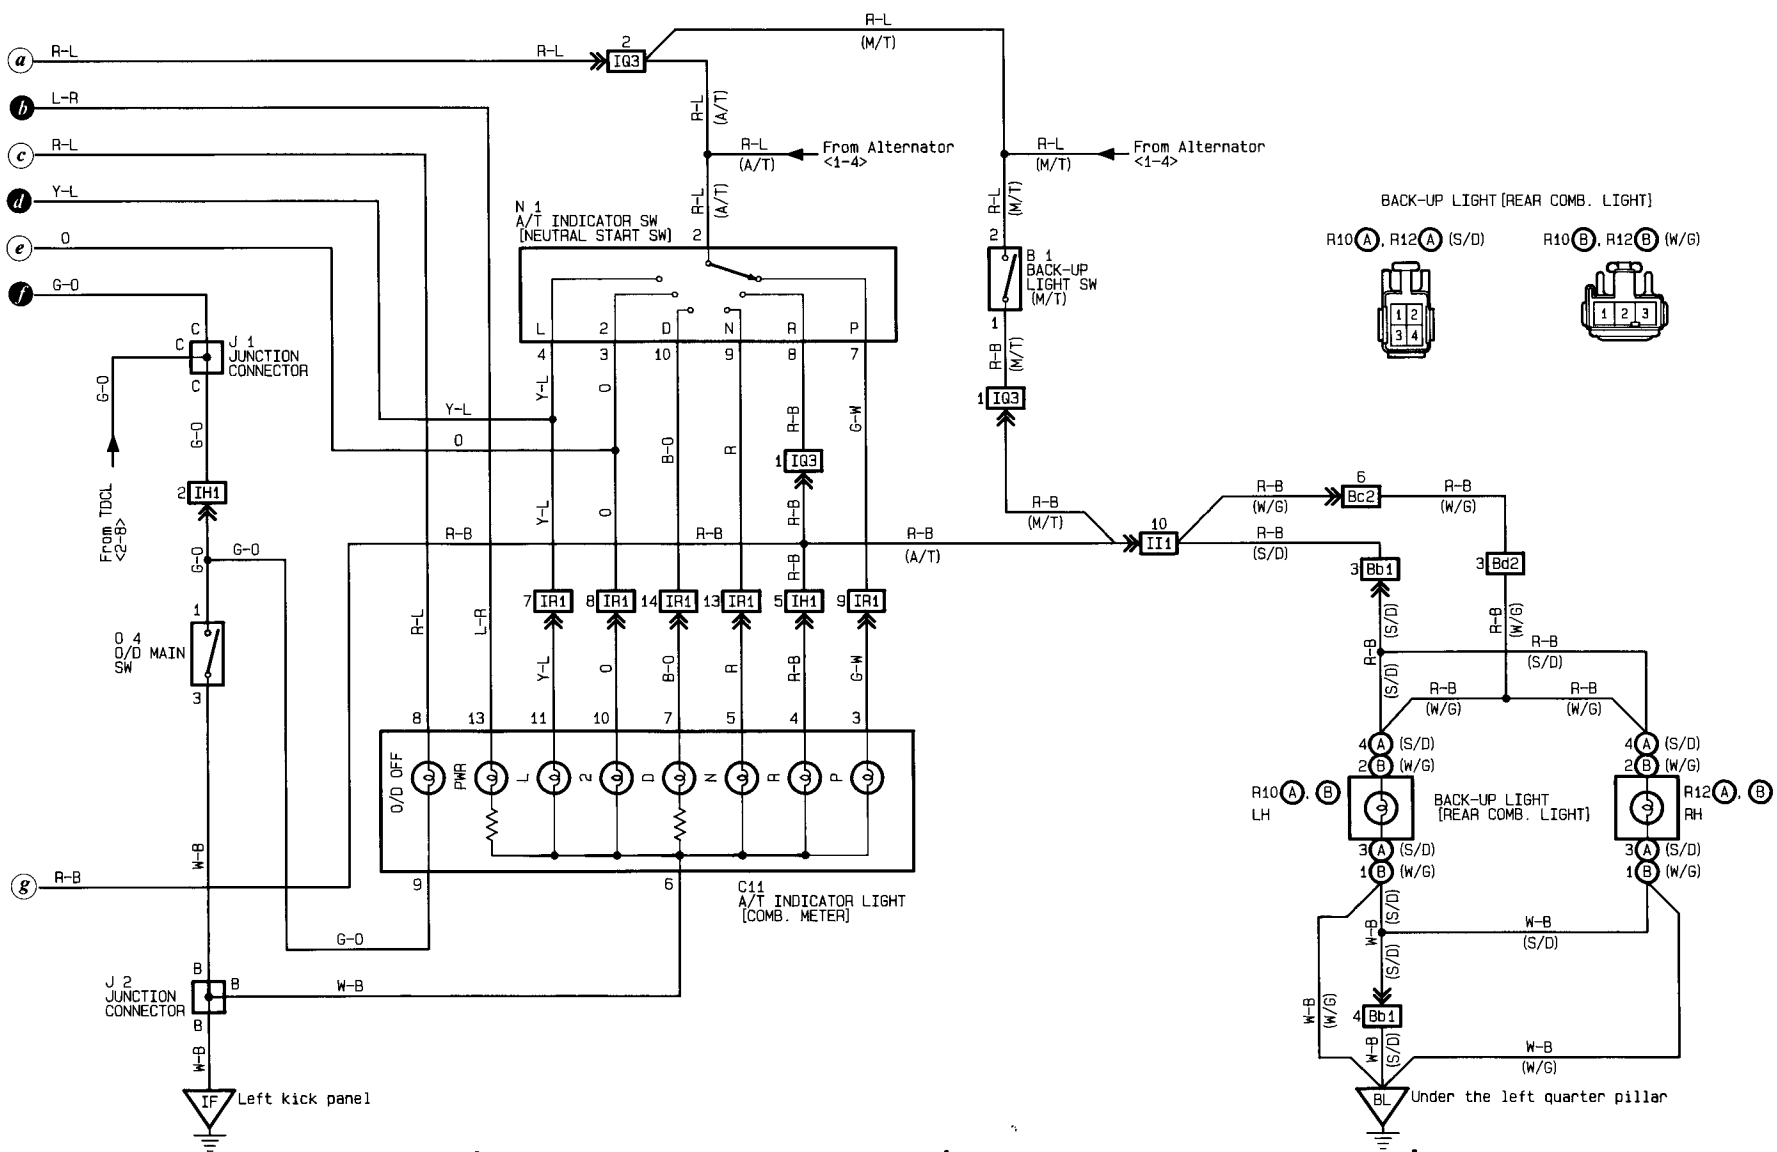

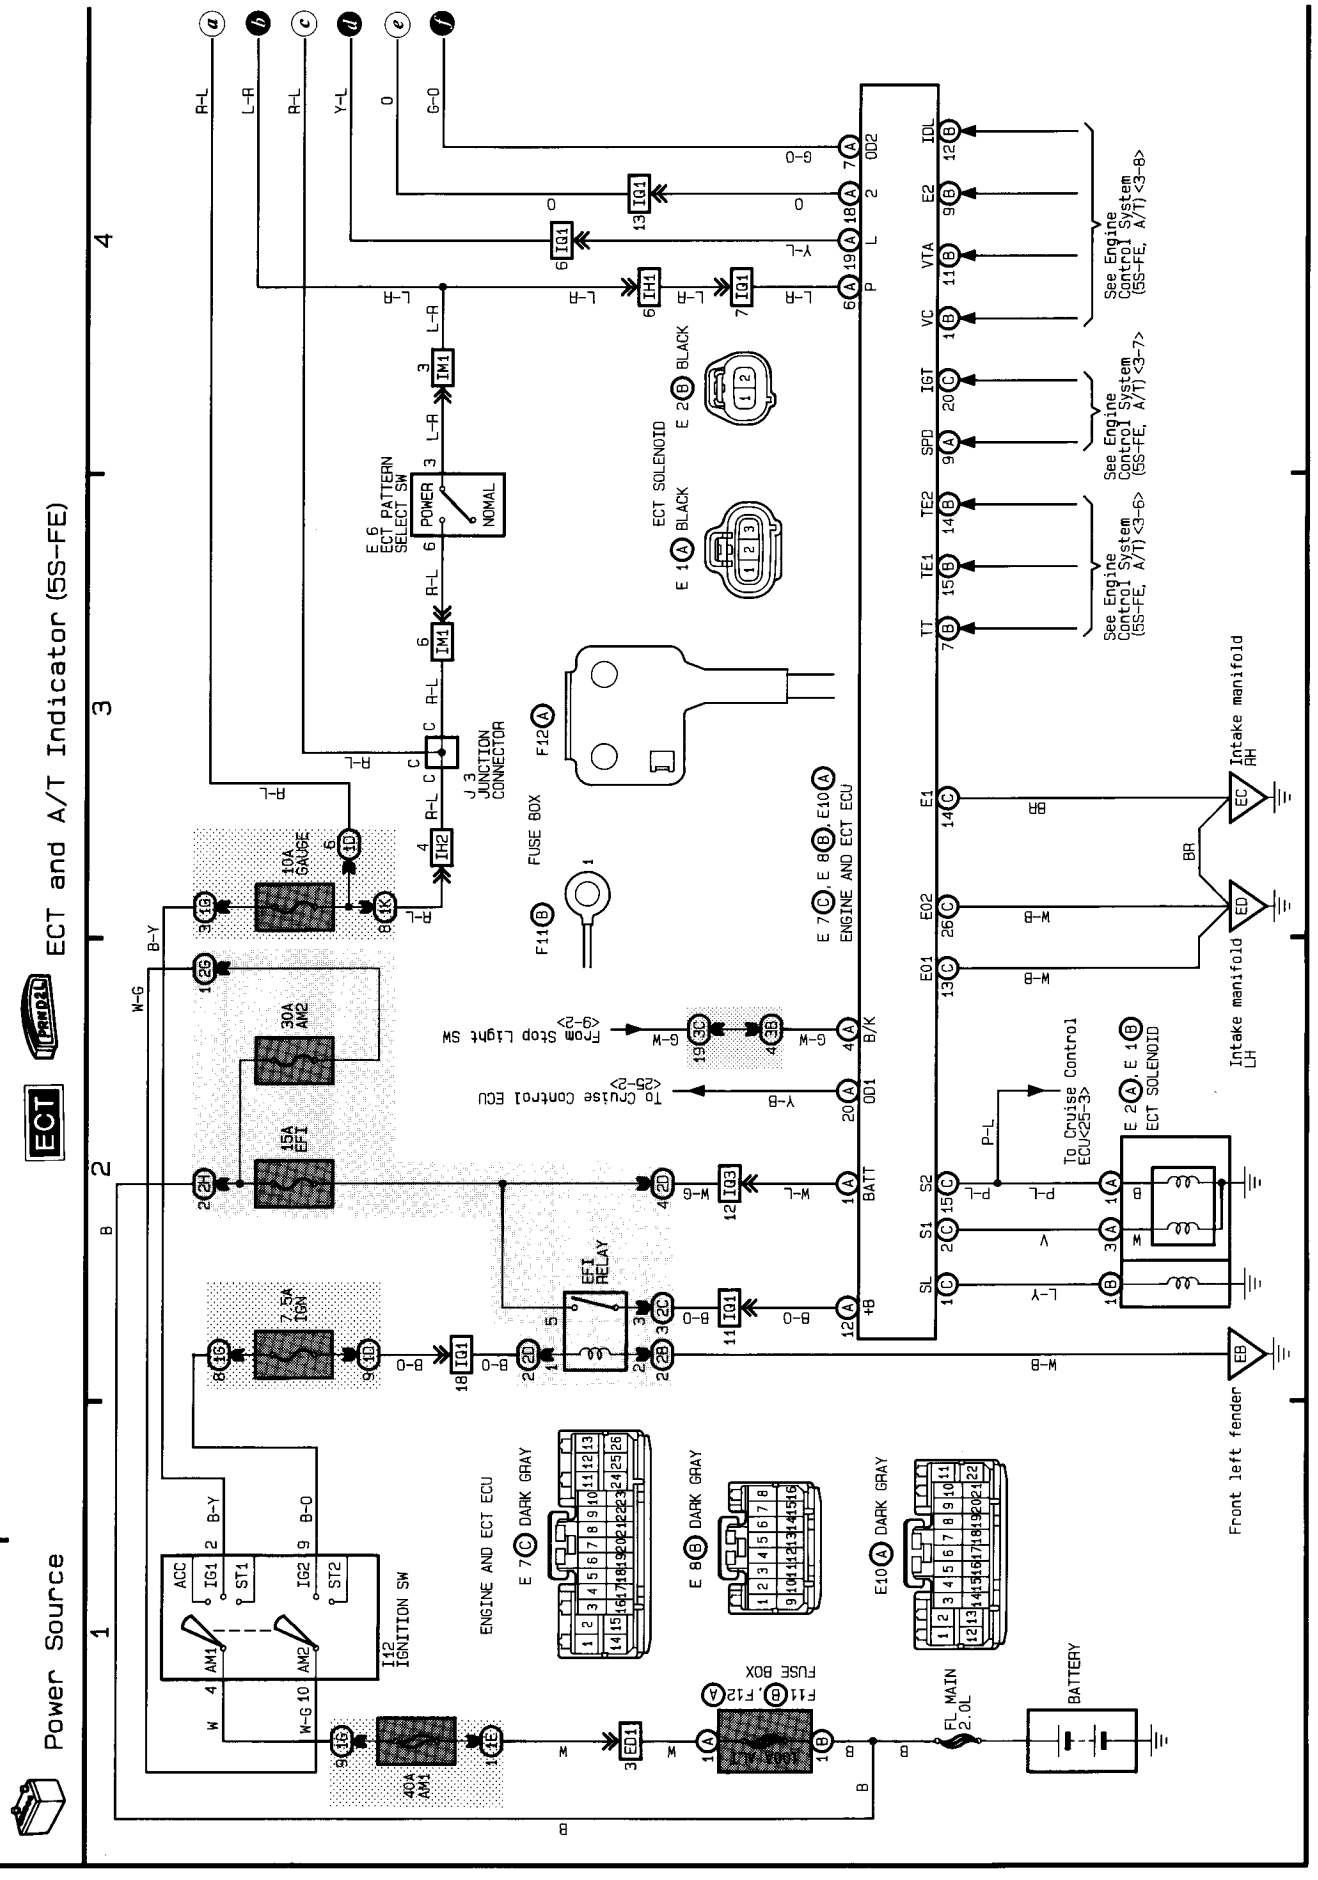
6 CAMRY (LHD)
Power Source
ECT and A/T Indicator (5S-FE)
(Cont. next page)
ECT
PANEL
ENGINE AND ECT ECU
FUSE BOX
FUSE BOX
ECT SOLENOID
ECT PATTERN SELECT SW
POWER
NOMAL
J 3 JUNCTION CONNECTOR
IGNITION SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
EFI RELAY
10A GAUGE
30A AM2
15A EFI
7.5A IGN
40A AM1
100A ALT
FL MAIN 2.0L
BATTERY
To Cruise Control ECU<25-3>
To Cruise Control ECU<25-2>
From Stop Light SW<9-2>
Intake manifold LH
Intake manifold RH
Front left fender
See Engine Control System (5S-FE, A/T)<3-6>
See Engine Control System (5S-FE, A/T)<3-7>
See Engine Control System (5S-FE, A/T)<3-8>