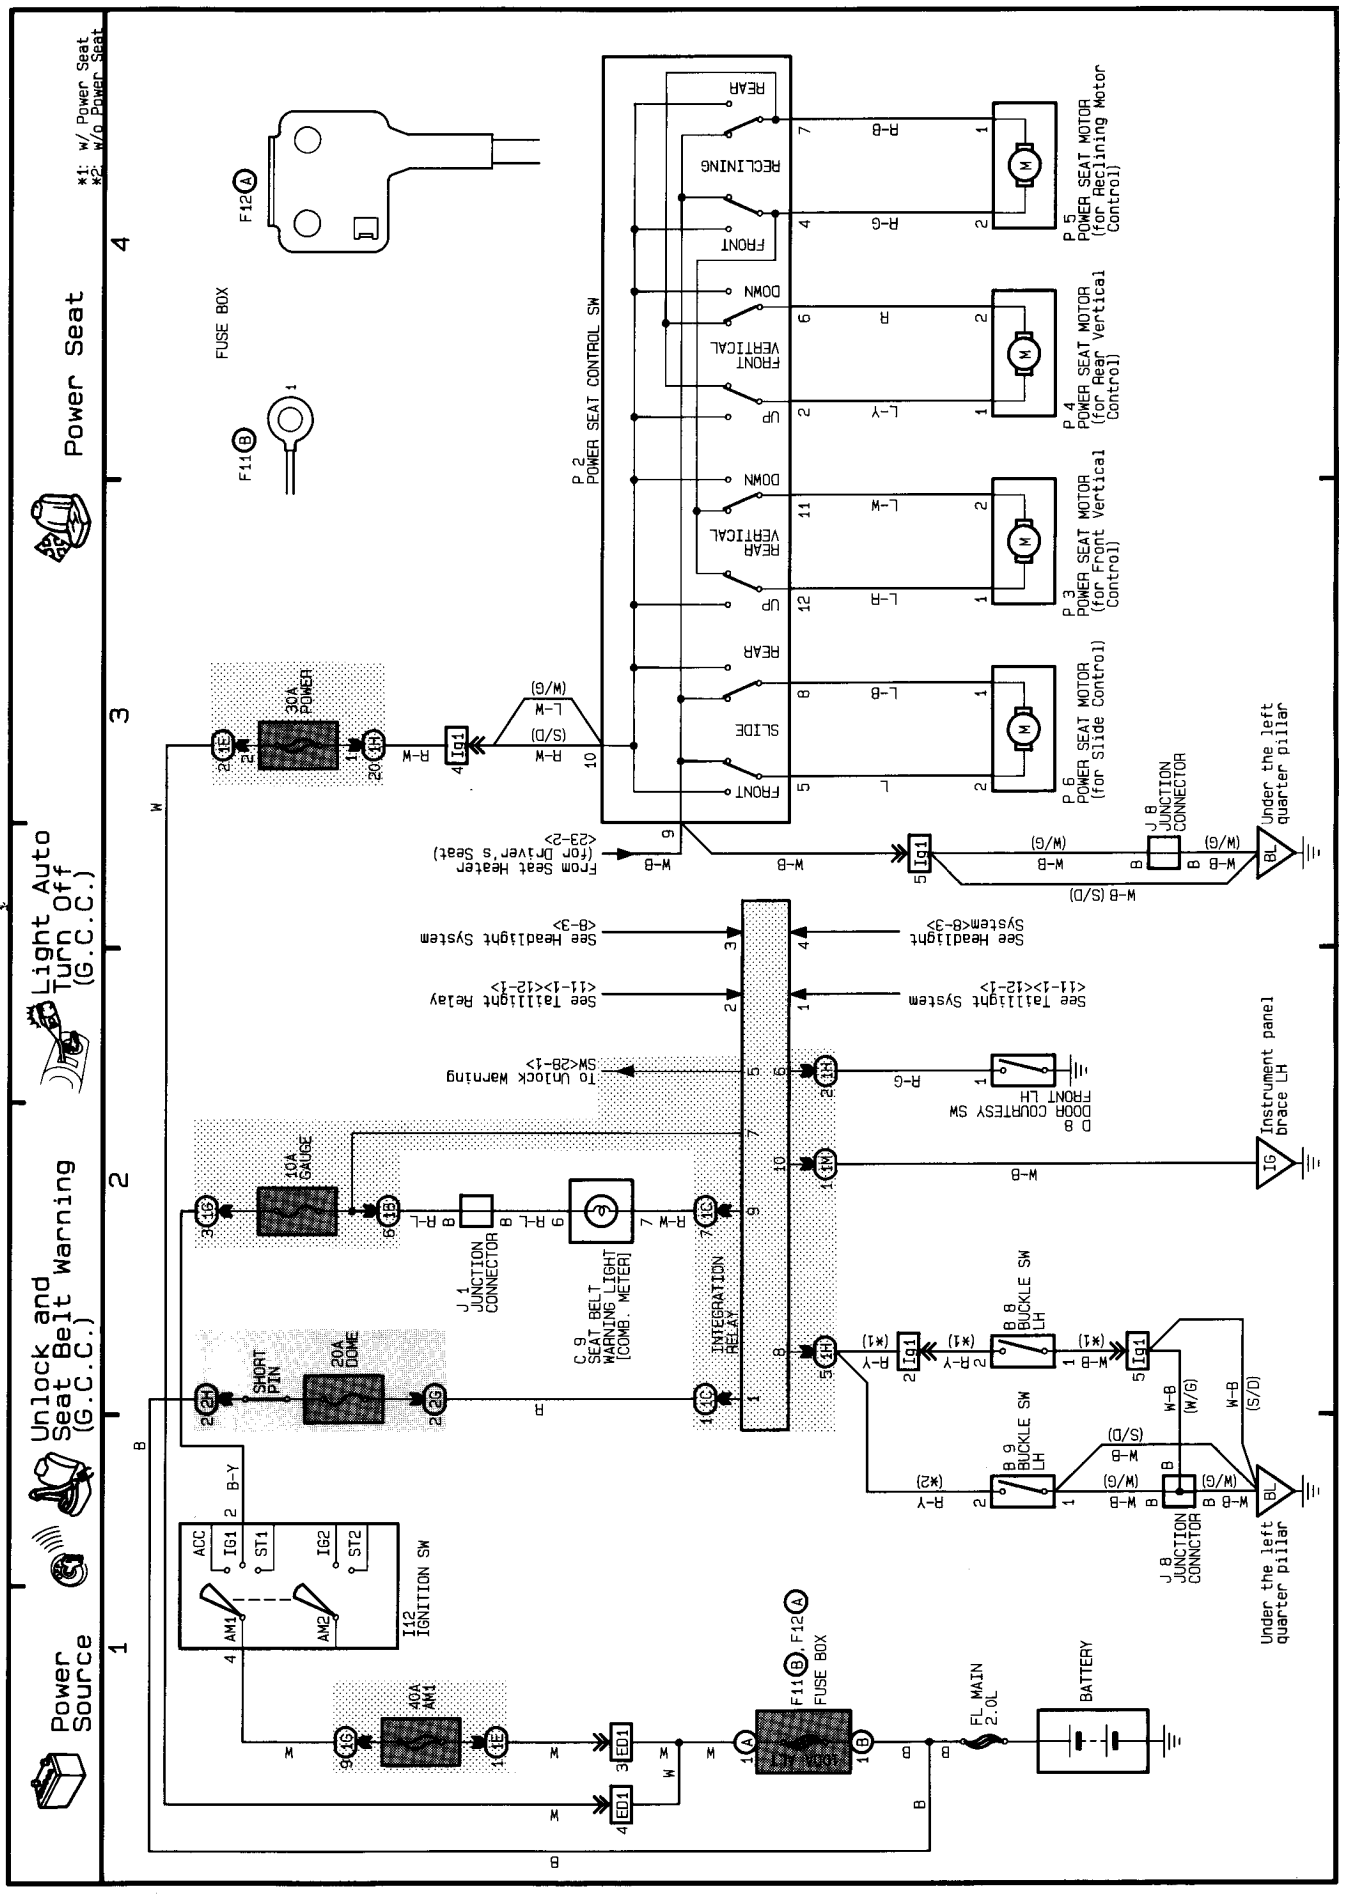
Power Source
Unlock and Seat Belt Warning (G.C.C.)
Light Auto Turn Off (G.C.C.)
Power Seat
*1: w/ Power Seat
*2: w/o Power Seat
FUSE BOX
F12
F11
P 2 POWER SEAT CONTROL SW
P 3 POWER SEAT MOTOR (for Front Vertical Control)
P 4 POWER SEAT MOTOR (for Rear Vertical Control)
P 5 POWER SEAT MOTOR (for Reclining Motor Control)
P 6 POWER SEAT MOTOR (for Slide Control)
J 8 JUNCTION CONNECTOR
Under the left quarter pillar
From Seat Heater <23-2> (for Driver's Seat)
30A POWER
10A GAUGE
20A DOME
SHORT PIN
J 1 JUNCTION CONNECTOR
C 9 SEAT BELT WARNING LIGHT [COMB. METER]
INTEGRATION RELAY
D 8 DOOR COURTESY SW FRONT LH
To Unlock warning SW<28-1>
See Headlight System <8-3>
See Taillight System <11-1><12-1>
See Taillight Relay <11-1><12-1>
See Headlight System <8-3>
Instrument panel brace LH
B 8 BUCKLE SW LH
B 9 BUCKLE SW LH
I12 IGNITION SW
ACC
IG1
ST1
IG2
ST2
AM1
AM2
40A AM1
F11 FUSE BOX
F12
FL MAIN 2.0L
BATTERY