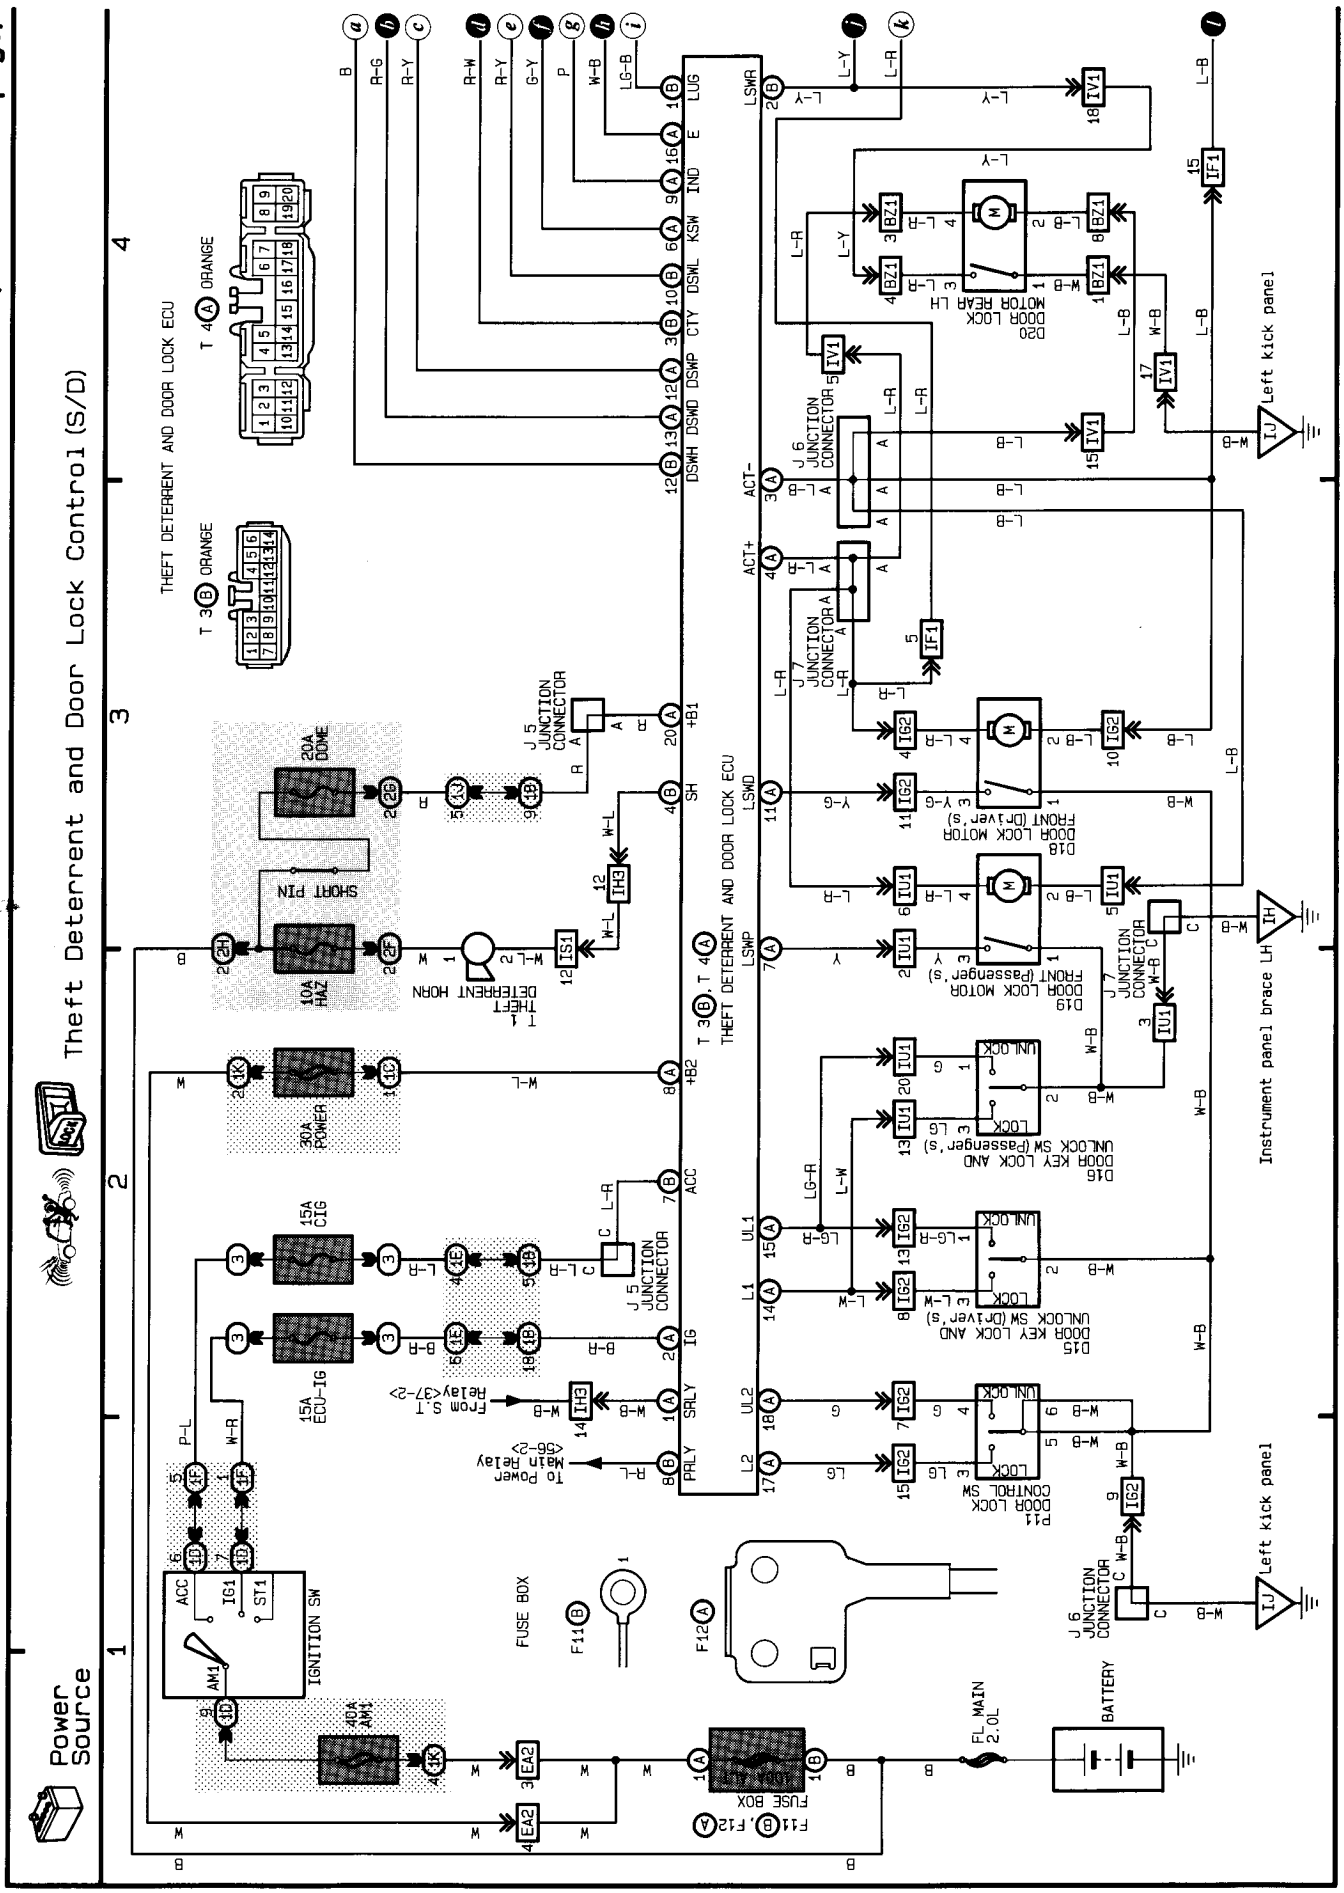
57 CAMRY (RHD)
(Cont. next page)
Power Source
Theft Deterrent and Door Lock Control (S/D)
THEFT DETERRENT AND DOOR LOCK ECU
T 3 (B), T 4 (A)
THEFT DETERRENT AND DOOR LOCK ECU
T 3 (B) ORANGE
T 4 (A) ORANGE
IGNITION SW
FUSE BOX
BATTERY
FL MAIN 2.0L
Left kick panel
Instrument panel brace LH
J 5 JUNCTION CONNECTOR
J 6 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
D20 DOOR LOCK MOTOR REAR LH
D18 DOOR LOCK MOTOR FRONT (Driver's)
D19 DOOR LOCK MOTOR FRONT (Passenger's)
D16 DOOR KEY LOCK AND UNLOCK SW (Passenger's)
D15 DOOR KEY LOCK AND UNLOCK SW (Driver's)
P11 DOOR LOCK CONTROL SW
T 1 THEFT DETERRENT HORN
SHORT PIN
20A DOME
10A HAZ
30A POWER
15A CIG
15A ECU-IG
40A AM1
From S.T Relay <37-2>
To Power Main Relay <56-2>

Theft Deterrent and Door Lock Control (S/D)

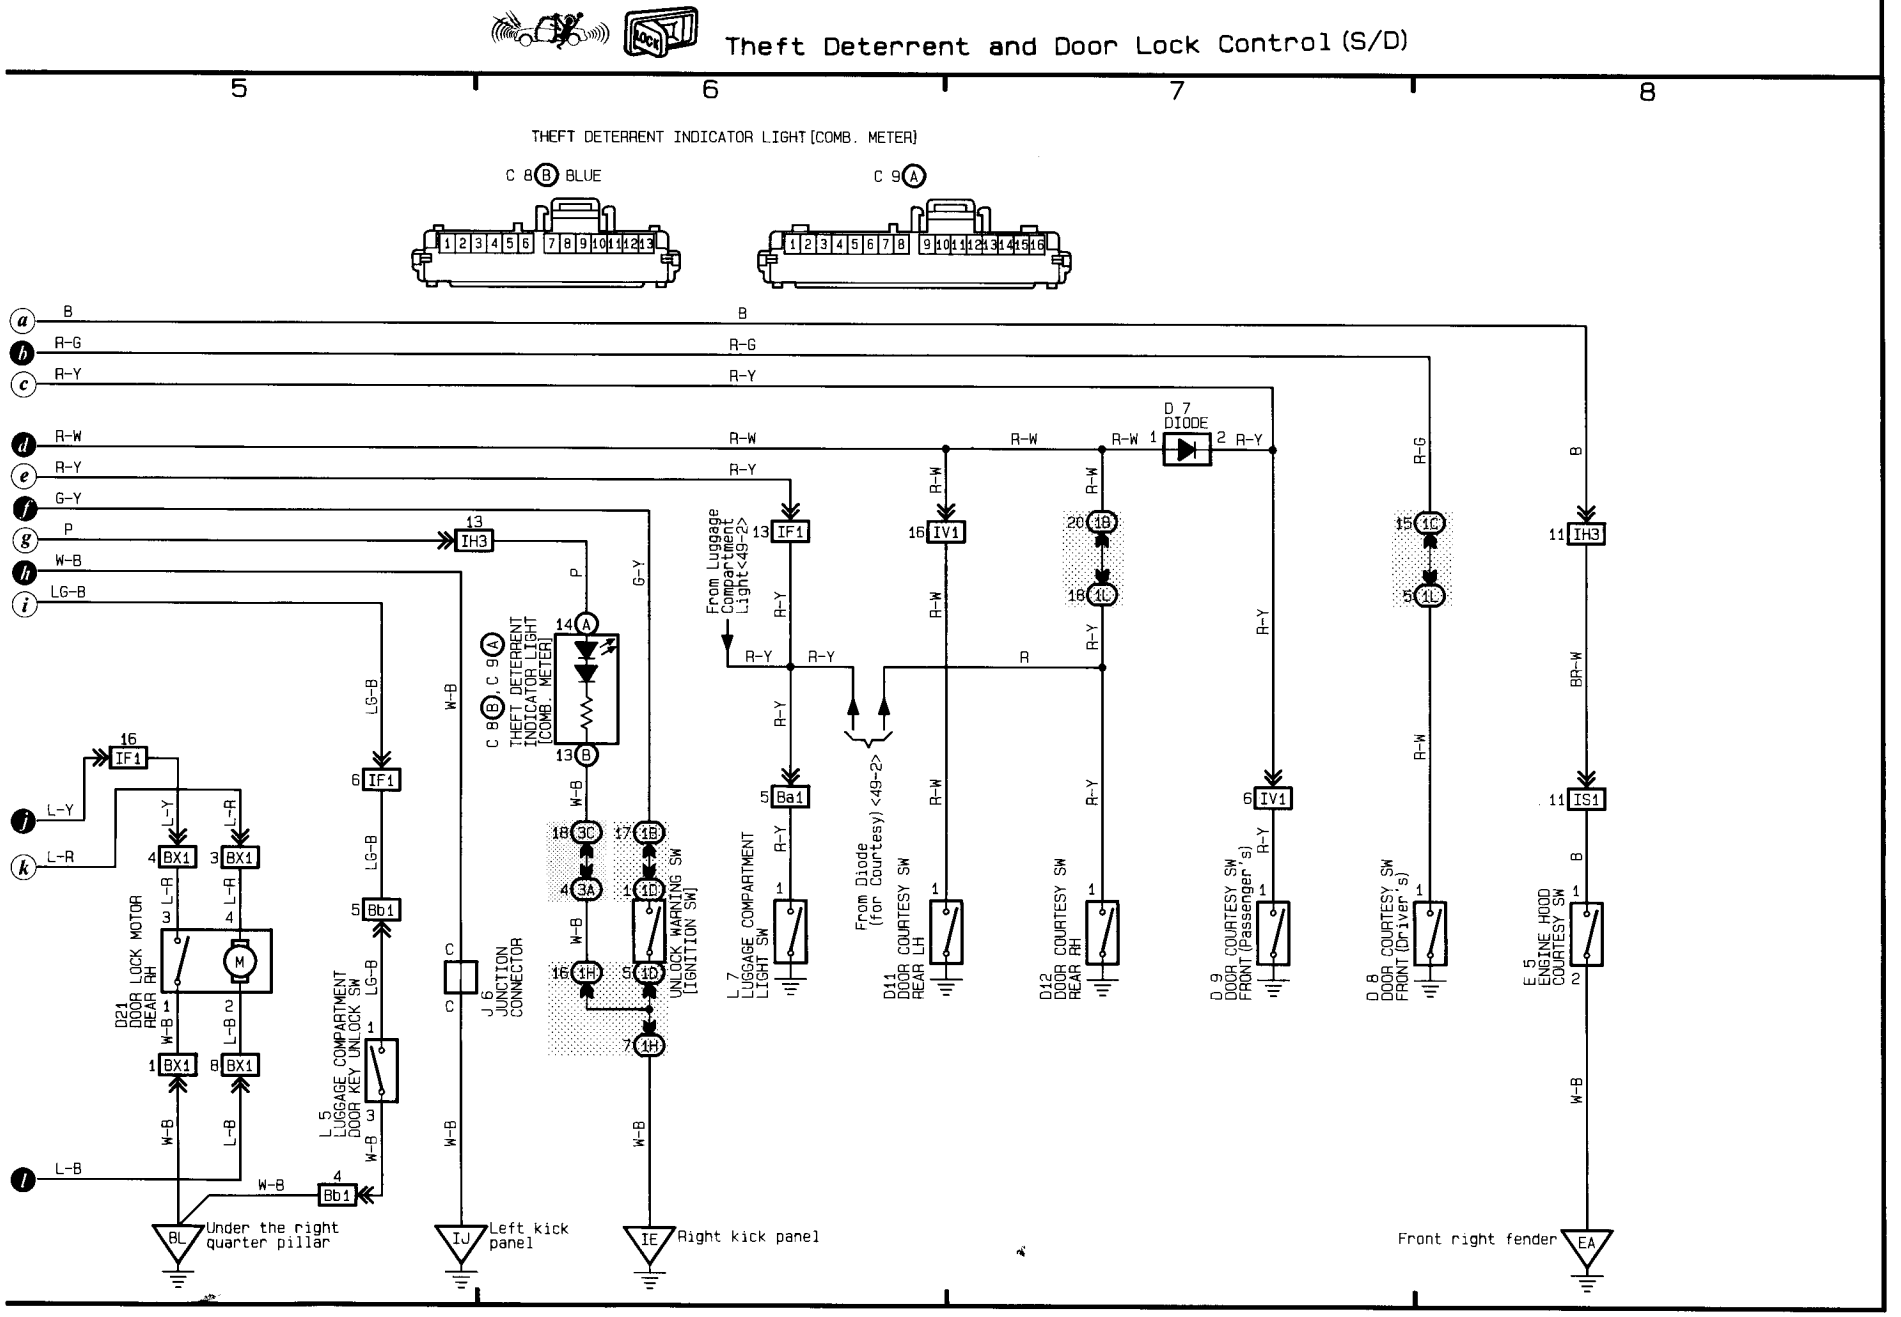

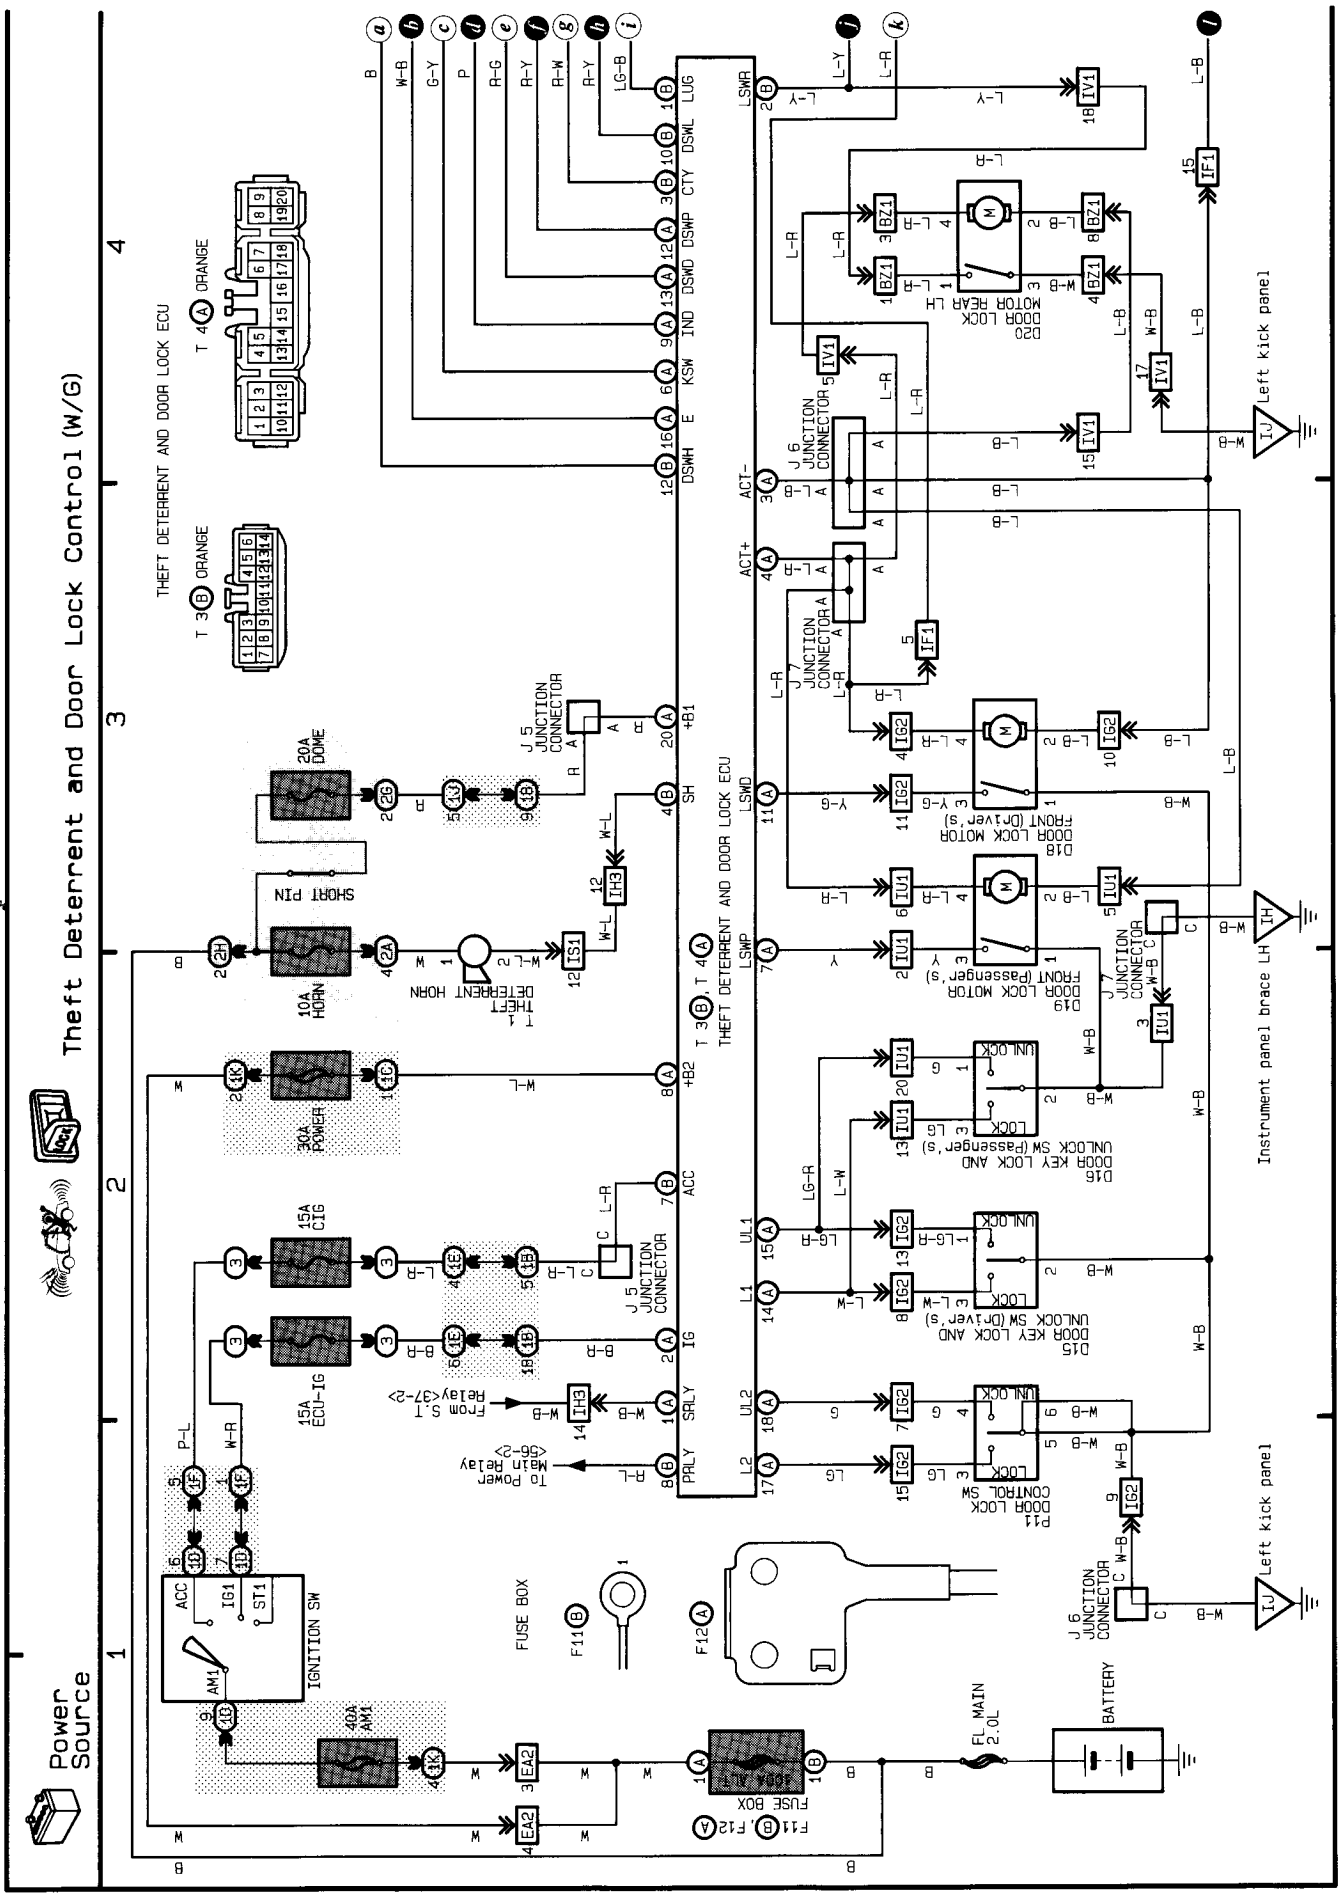
58 CAMRY (RHD)
(Cont. next page)
Power Source
Theft Deterrent and Door Lock Control (W/G)
THEFT DETERRENT AND DOOR LOCK ECU
T 3 (B) ORANGE
T 4 (A) ORANGE
T 3 (B), T 4 (A) THEFT DETERRENT AND DOOR LOCK ECU
20A DOME
10A HORN
30A POWER
15A CIG
15A ECU-IG
40A AM1
SHORT PIN
T 1 THEFT DETERRENT HORN
J 5 JUNCTION CONNECTOR
J 6 JUNCTION CONNECTOR
J 7 JUNCTION CONNECTOR
D20 DOOR LOCK MOTOR REAR LH
D18 DOOR LOCK MOTOR FRONT (Driver's)
D19 DOOR LOCK MOTOR FRONT (Passenger's)
D16 DOOR KEY LOCK AND UNLOCK SW (Passenger's)
D15 DOOR KEY LOCK AND UNLOCK SW (Driver's)
P11 DOOR LOCK CONTROL SW
From S.T Relay <37-2>
To Power Main Relay <56-2>
IGNITION SW
FUSE BOX
F11 (B)
F12 (A)
100A ALT
FL MAIN 2.0L
BATTERY
Left kick panel
Instrument panel brace LH