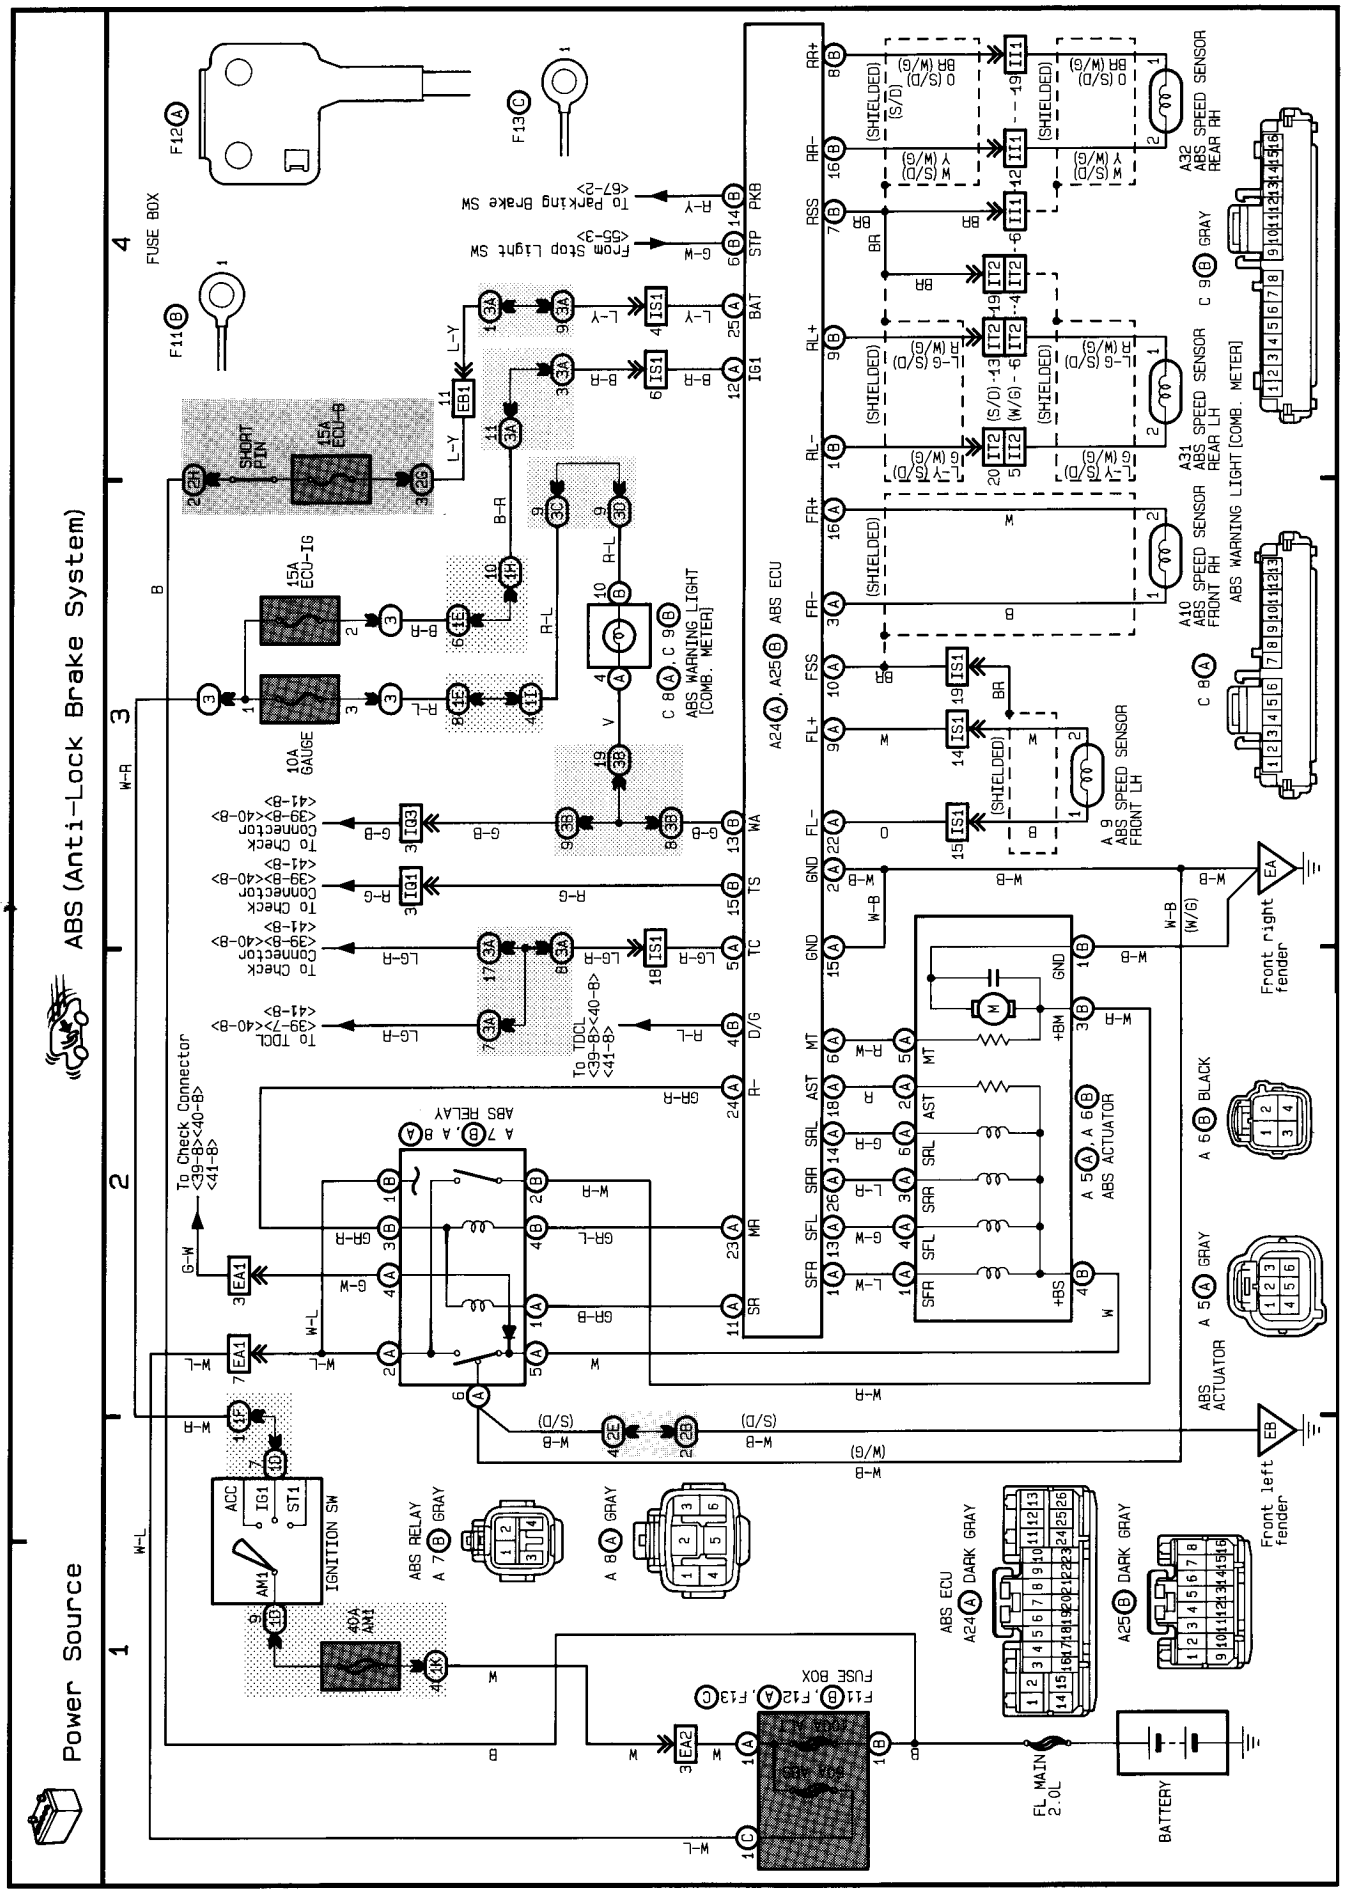
ABS (Anti-Lock Brake System)
Power Source
FUSE BOX
IGNITION SW
ABS RELAY
ABS ECU
ABS ACTUATOR
ABS WARNING LIGHT [COMB. METER]
ABS SPEED SENSOR FRONT LH
ABS SPEED SENSOR FRONT RH
ABS SPEED SENSOR REAR LH
ABS SPEED SENSOR REAR RH
Front right fender
Front left fender
BATTERY
FL MAIN 2.0L
To Check Connector <39-8><40-8> <41-8>
To TDCL <39-7><40-8> <41-8>
To TDCL <39-8><40-8> <41-8>
To Parking Brake SW <67-2>
From Stop Light SW <55-3>
SHORT PIN
10A GAUGE
15A ECU-IG
15A ECU-B
40A AM1
ABS RELAY A 7 B GRAY
A 8 A GRAY
A 5 A, A 6 B ABS ACTUATOR
A 6 B BLACK
A 5 A GRAY
A 9 ABS SPEED SENSOR FRONT LH
A 10 ABS SPEED SENSOR FRONT RH
A 31 ABS SPEED SENSOR REAR LH
A 32 ABS SPEED SENSOR REAR RH
C 8 A, C 9 B ABS WARNING LIGHT [COMB. METER]
C 8 A
C 9 B GRAY
A24 A, A25 B ABS ECU
A24 A DARK GRAY
A25 B DARK GRAY
F11 B, F12 A, F13 C FUSE BOX
F11 B
F12 A
F13 C