


INSTALLATION

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

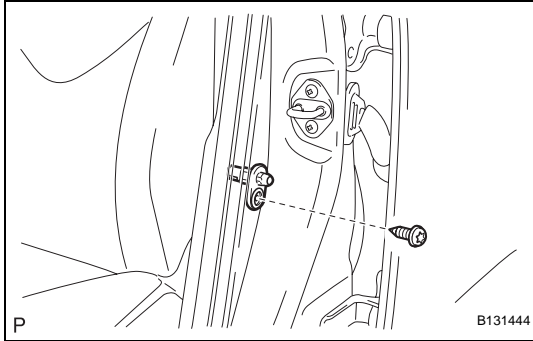

- 1. INSTALL FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY**
 - (a) Connect the connector.
 - (b) Install the switch with the bolt.
- 2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**