


CENTER STOP LAMP ASSY REPLACEMENT


65126-01

1. REMOVE BACK DOOR TRIM BOARD ASSY (SEE PAGE 75-33)
2. REMOVE BACK DOOR GARNISH SUB-ASSY OUTSIDE (SEE PAGE 76-23)

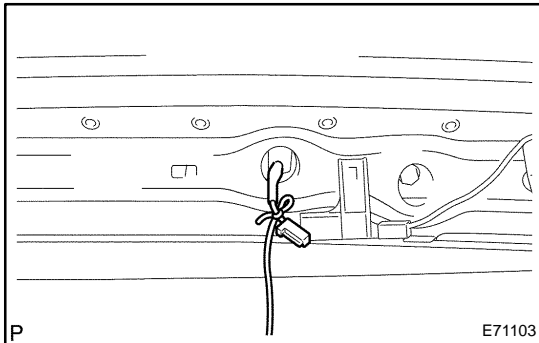

3. REMOVE CENTER STOP LAMP ASSY

- (a) Disconnect the connector.
- (b) Tie a string around the center stop lamp assy cord.

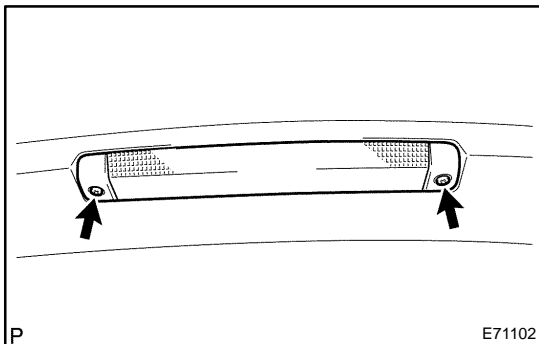

- (c) Remove the 2 screws and the center stop lamp assy.

NOTICE:

The string will be used when installing, so leave the string as it is inside the back door.

4. INSTALL CENTER STOP LAMP ASSY

- (a) Tie the string hanging inside the back door around the new center stop lamp assy.
- (b) Using the string, pass the cord into the back door.
- (c) Install the center stop lamp assy with 2 screws.
- (d) Connect the connector.