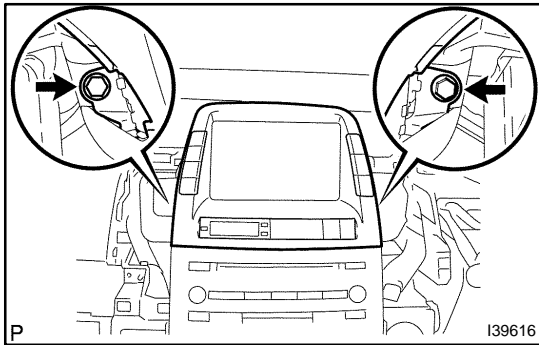


MULTI-DISPLAY ASSY REPLACEMENT

6716H-01

HINT:

- COMPONENTS: See page [67-2](#)
 - Installation is in the reverse order of removal.
- 1. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.3 (SEE PAGE [71-7](#))**
 - 2. REMOVE INSTRUMENT PANEL REGISTER ASSY NO.4 (SEE PAGE [71-7](#))**

**3. REMOVE MULTI-DISPLAY ASSY**

- (a) Remove the 2 bolts.
- (b) Disconnect the connector and remove the multi-display assy.