


## INSPECTION

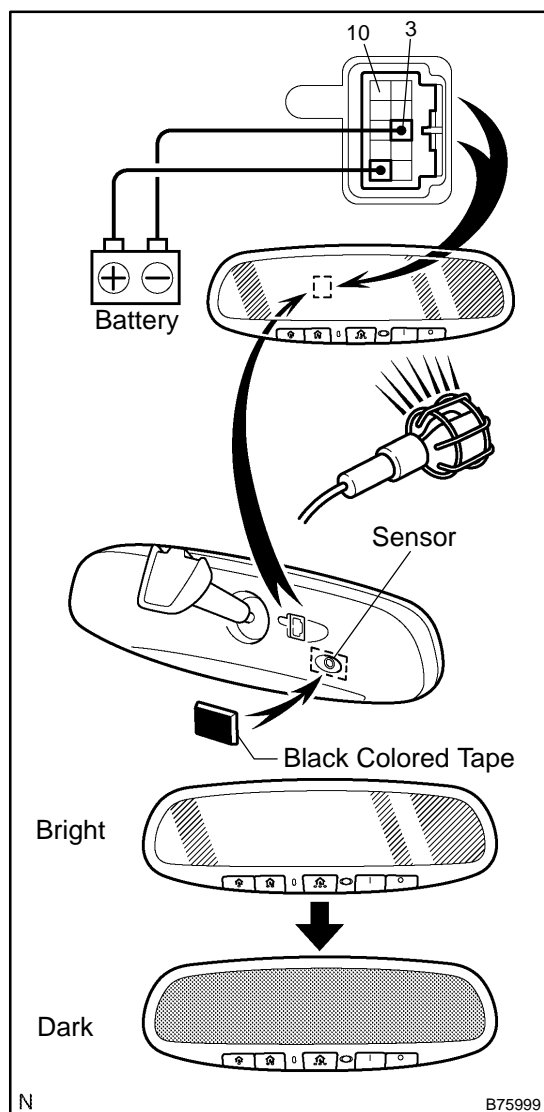

### 1. INSPECT INNER REAR VIEW MIRROR ASSY

- (a) Check operation of the electrochromic inner mirror.
- (1) Connect the battery's positive (+) lead to terminal 6 and the negative (-) lead to terminal 3.
  - (2) Attach black colored tape to the forward sensor to prevent it from sensing.
  - (3) Light up the mirror with an electric light, and check that the mirror surface changes from bright to dark.

If the result is not as specified, replace the mirror assy.