

INSTALLATION

HINT:

- When installing the spoiler, heat the vehicle body and spoiler using a heat light.

Standard heating temperature

Item	Specified Condition
Vehicle body	40 to 60°C (104 to 140°F)
Spoiler	20 to 30°C (68 to 86°F)

NOTICE:

Do not heat the body and spoiler excessively.




1. INSTALL CENTER STOP LIGHT

- Install the center stop light with the 2 screws.

2. INSTALL REAR SPOILER

- Clean the vehicle body surface.
 - Using a heat light, heat the vehicle body surface.
- If reusing the spoiler:
 - Clean the spoiler.
 - Using a heat light, heat the spoiler.
- Connect the center stop light connector.
- Install the spoiler with 3 clips.

ET

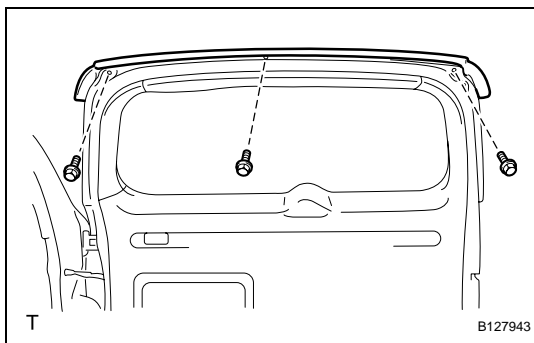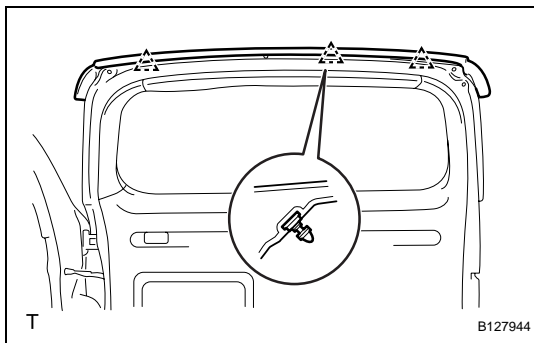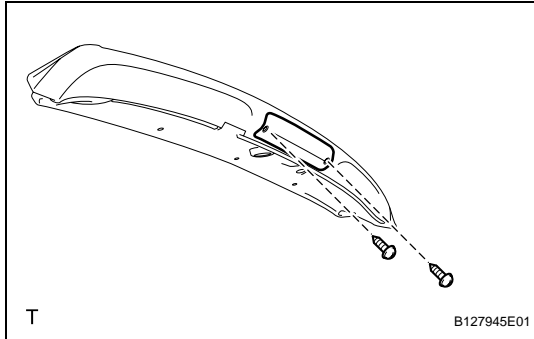

- Install the 3 bolts.

Torque: 7.5 N*m (76 kgf*cm, 66 in.*lbf)

3. INSTALL BACK DOOR CENTER GARNISH (See page [ED-67](#))

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL