


INSTALLATION

1. INSTALL UPPER INSTRUMENT PANEL

- (a) Attach the 6 clips and 5 claws to install the instrument panel.
- (b) Connect the connectors and clamps.
- (c) Install the 2 bolts and 2 screws.

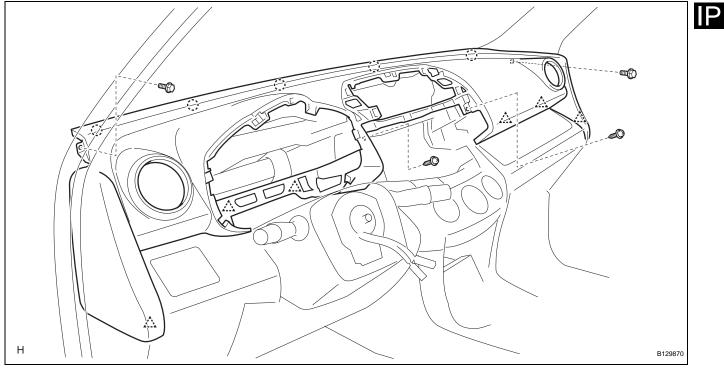

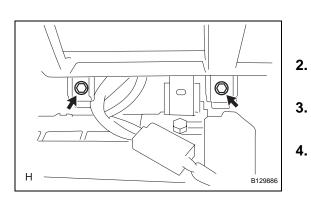

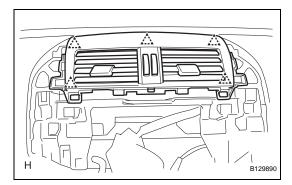


- (d) Connect the passenger airbag connector.
- (e) Install the 2 bolts to the passenger airbag.
 Torque: 20 N*m (204 kgf*cm, 15 ft.*lbf)
- INSTALL FRONT PILLAR GARNISH LH (See page IR-57)
- . INSTALL FRONT PILLAR GARNISH RH (See page IR-58)
- INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page IP-25)
- 5. INSTALL INSTRUMENT PANEL REGISTER ASSEMBLY CENTER
 - (a) Attach the 5 clips to install the instrument panel register.

Н

6.


B140787

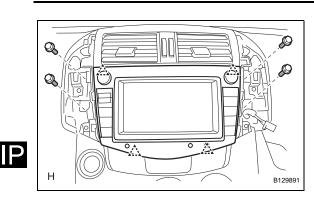



INSTALL RADIO RECEIVER

- (a) Connect the connectors.
- (b) Attach the 4 clips to install the radio receiver.
- (c) Install the 4 bolts.

- 7. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL CENTER
 - (a) Connect the connector.
 - (b) Attach the 3 clips and 3 claws to install the cluster finish panel.
- 8. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL CENTER
 - (a) Connect the connector.
 - (b) Attach the 3 clips and 3 claws to install the cluster finish panel.

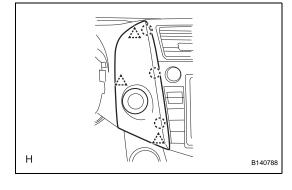

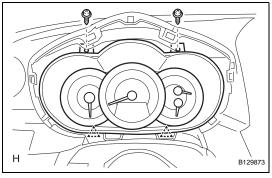

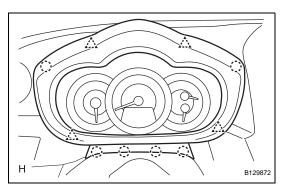

9. INSTALL COMBINATION METER ASSEMBLY

- (a) Connect the connector.
- (b) Attach the 2 clips to install the combination meter.
- (c) Install the 2 screws.

- 10. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY
 - (a) Attach the 4 clips and 6 claws to install the instrument cluster finish panel.
- 11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
- 12. CHECK SRS WARNING LIGHT
 - (a) Check the SRS warning light (see page RS-37).