



ROAD TEST

05HG9-01

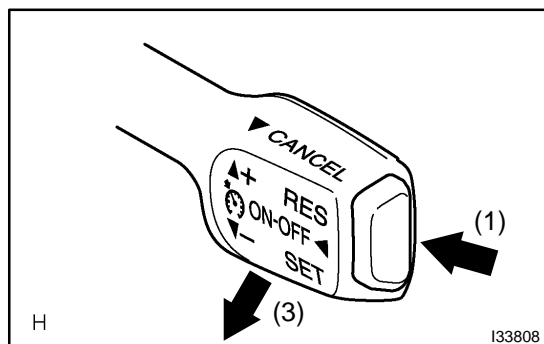


1. PROBLEM SYMPTOM CONFIRMATION


- (a) Inspect the SET function.
- (1) Push the ON-OFF button "on".
 - (2) Drive at the required speed (40 km/h (25 mph) or higher).
 - (3) Push the cruise control main switch to -/SET.
 - (4) Check that the vehicle cruises at the set speed after releasing the switch.

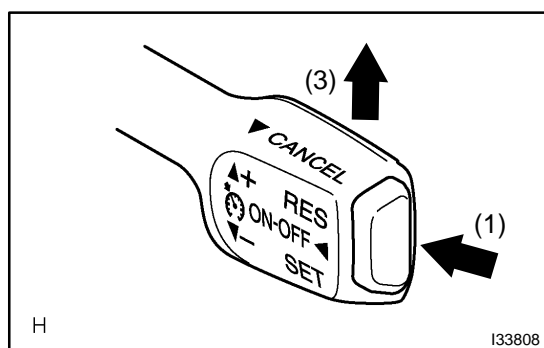


- (b) Inspect the "+ (ACCEL)" function.
- (1) Push the ON-OFF button "on".
 - (2) Drive at the required speed (40 km/h (25 mph) or higher).
 - (3) Push the cruise control main switch to -/SET.
 - (4) Check that vehicle speed increases while the cruise control main switch is pushed to +/RES, and that the vehicle cruises at the newly set speed when the switch is released.
 - (5) Momentarily push the cruise control main switch to +/RES and then immediately release it. Check that vehicle speed increases by approximately 1.6 km/h (1.0 mph). (Tap-up function)

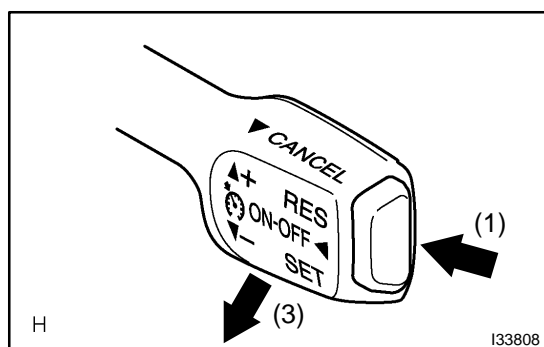

- (c) Inspect the "- (COAST)" function.
- (1) Push the ON-OFF button "on".
 - (2) Drive at the required speed (40 km/h (25 mph) or higher).
 - (3) Push the cruise control main switch to -/SET.
 - (4) Check that vehicle speed decreases while the cruise control main switch is pushed to -/SET, and that the vehicle cruises at the newly set speed when the switch is released.
 - (5) Momentarily push the cruise control main switch to -/SET and then immediately release it. Check that vehicle speed decreases by approximately 1.6 km/h (1.0 mph). (Tap-down function)

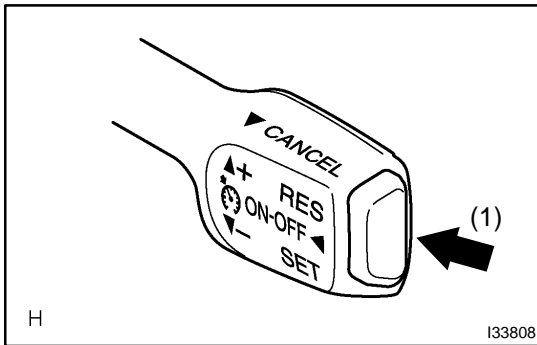

- (d) Inspect the CANCEL function.
- (1) Push the ON-OFF button "on".
 - (2) Drive at the required speed (40 km/h (25 mph) or higher).
 - (3) Push the cruise control main switch to -/SET.
 - (4) When doing one or more of the following, check that the cruise control system is cancelled and that the normal driving mode is reset:
 - Depressing the brake pedal
 - Shifting into any position except D
 - Pushing the ON-OFF button "off"
 - Pulling the cruise control main switch to CANCEL

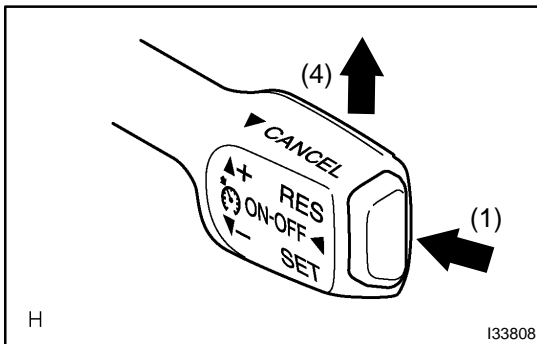

- (e) Inspect the RES (RESUME) function.
- (1) Push the ON-OFF button "on".
 - (2) Drive at the required speed (40 km/h (25 mph) or higher).
 - (3) Push the cruise control main switch to -/SET.
 - (4) When doing one or more of the following, check that the cruise control system is cancelled and that the normal driving mode is reset:
 - Depressing the brake pedal
 - Shifting into any position except D
 - Pulling the cruise control main switch to CANCEL
 - (5) After pushing the cruise control main switch to +/RES at a driving speed of more than 40 km/h (25 mph), check that the vehicle restores the speed which was maintained before cancellation.