OWN VOICE CANNOT BE HEARD, TOO QUIET OR DISTORTED

INSPECTION PROCEDURE

1 CHECK CELLULAR PHONE

(a) Check if the other side can hear your voice properly.

OK: Own voice can be heard correctly.

NG REPLACE THE CELLULAR PHONE

OK

2 | CHECK SETTINGS

(a) Check if the mute switch is set to ON.


OK: MUTE switch is not set to ON.

NG TURN THE MUTE SWITCH OFF

OK

3 NAVIGATION CHECK MODE(MICROPHONE CHECK)

(a) Enter the "Microphone Check" mode (see page 05–1862)

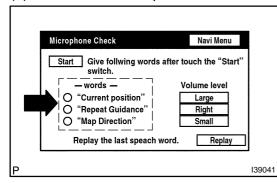

(b) Follow the directions on the screen. Check if the word recognition indicator is displayed in green in each item.

OK: All check items are recognized.

NG GO TO "VOICE IS NOT RECOGNIZED" (SEE PAGE 05–1924)

ок

REPLACE MULTI-DISPLAY (SEE PAGE 67-7)

Author: Date: 2096