


ACCELERATOR PEDAL ROD ASSY REPLACEMENT

21045-01

1. REMOVE REAR FLOOR BOARD NO.2 (See page 21-116)
2. REMOVE DECK FLOOR BOX REAR (See page 21-116)
3. REMOVE REAR FLOOR BOARD NO.3 (See page 21-116)
4. DISCONNECT BATTERY NEGATIVE TERMINAL (See page 21-116)

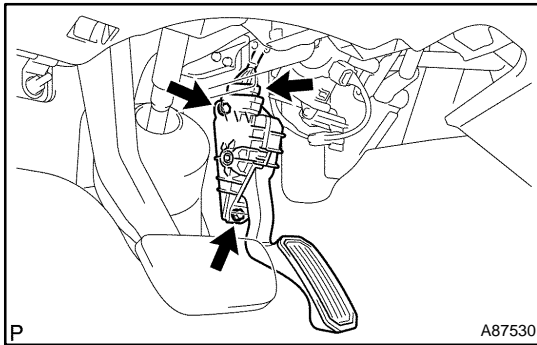

5. REMOVE ACCELERATOR PEDAL ROD ASSY
 - (a) Disconnect the accelerator position sensor connector.
 - (b) Remove the 2 bolts, then remove the accelerator pedal.

6. INSTALL ACCELERATOR PEDAL ROD ASSY
Torque: 7.5 N·m (77 kgf·cm, 66 in·lbf)
7. CONNECT BATTERY NEGATIVE TERMINAL
Torque: 6.0 N·m (61 kgf·cm, 53 in·lbf)
8. INSTALL REAR FLOOR BOARD NO.3
9. INSTALL DECK FLOOR BOX REAR
10. INSTALL REAR FLOOR BOARD NO.2
11. POWER WINDOW CONTROL SYSTEM INITIALIZE (See page 01-28)