

## REASSEMBLY

### HINT:

When installing the ornament plate and emblem, heat the radiator grille, ornament plate and emblem using a heat light.

### Standard heating temperature


Item	Specified Condition
Radiator grille, Ornament plate, emblem	20 to 30°C (68 to 86°F)

### NOTICE:

Do not heat the radiator grille, ornament plate and emblem excessively.


#### 1. INSTALL RADIATOR GRILLE EMBLEM

- (a) Attach the 3 claws to install the emblem.

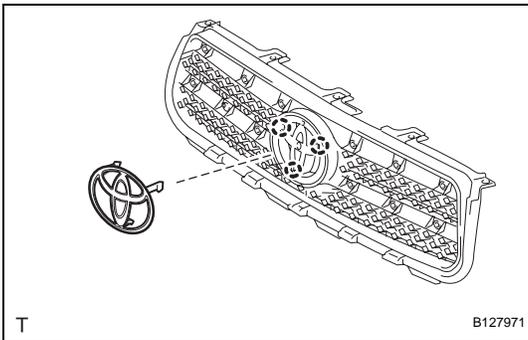


#### 2. INSTALL RADIATOR GRILLE ORNAMENT PLATE (for Separate Type)


- (a) Install the ornament plate with the 12 screws.

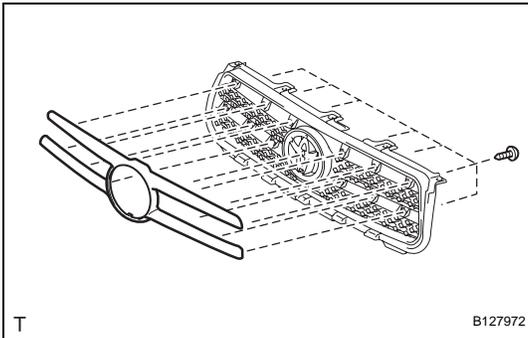


#### 3. INSTALL NO. 2 RADIATOR GRILLE EMBLEM

- (a) Attach the claw to install the emblem.  
 (b) Install the 2 screws.

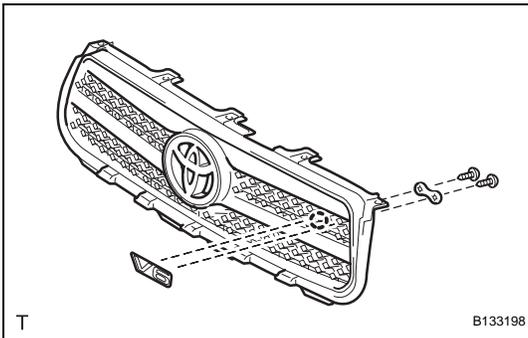


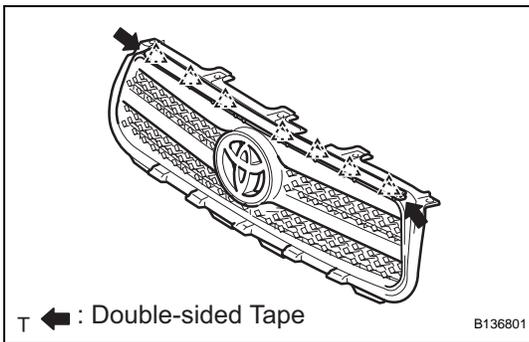**4. INSTALL HOOD TO RADIATOR GRILLE SEAL**


- (a) Install new double-sided tape.
- (b) Attach the 7 clips and install the hood to radiator grille seal.

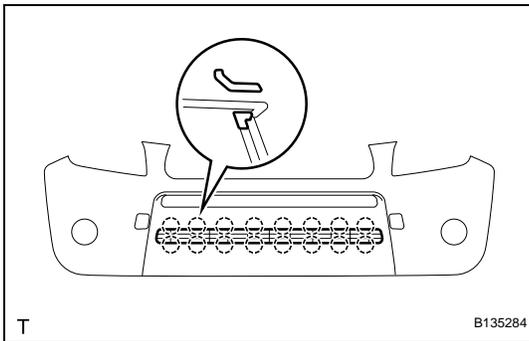**INSTALLATION****1. INSTALL NO. 2 RADIATOR GRILLE LOWER**


- (a) Install the radiator grille and attach the 16 claws.

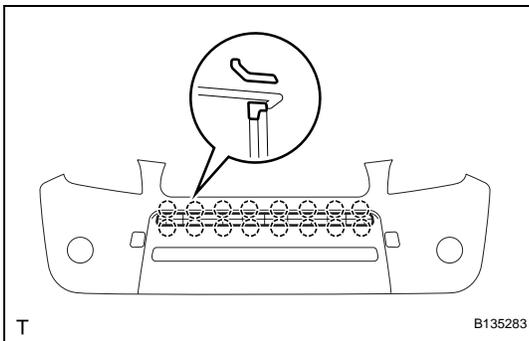**2. INSTALL NO. 1 RADIATOR GRILLE LOWER**

- (a) Install the radiator grille and attach the 16 claws.

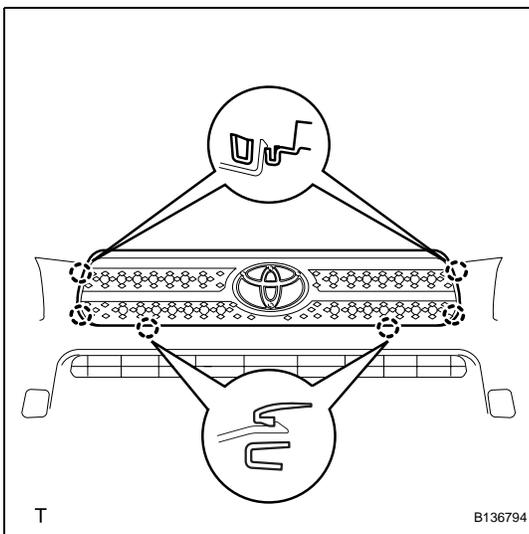**3. INSTALL RADIATOR GRILLE**

- (a) Install the radiator grille with the 6 claws.

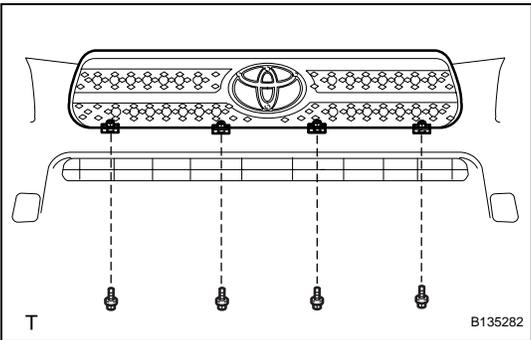

(b) Install the 4 bolts and 4 nuts.