
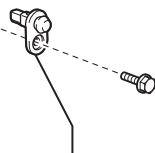


BACK DOOR COURTESY SWITCH

COMPONENTS

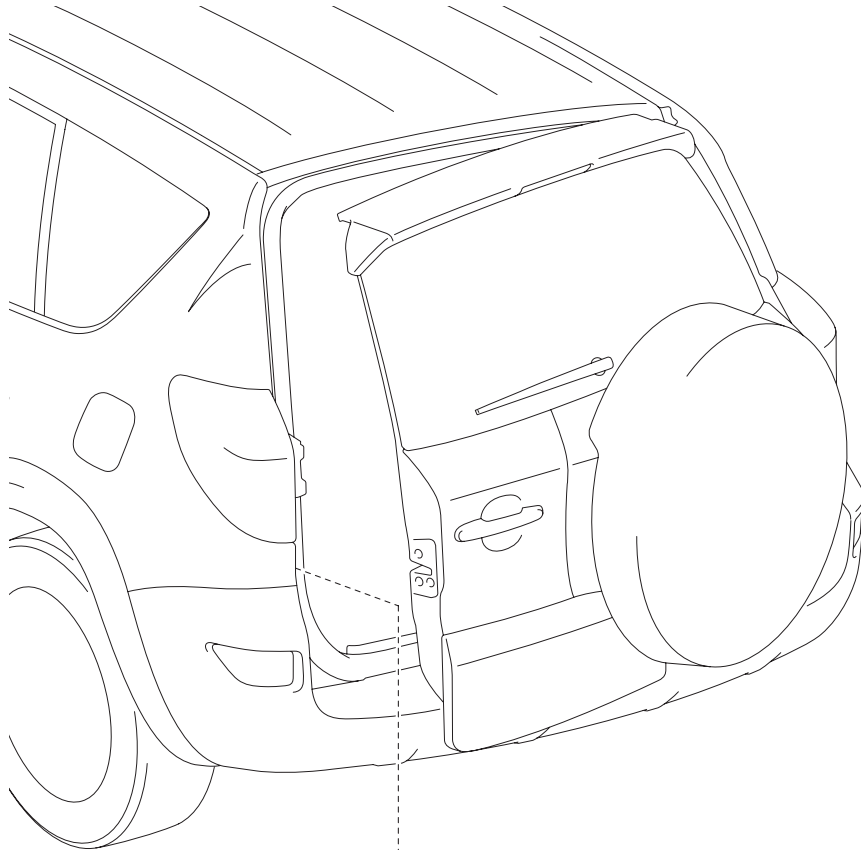

BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY

REMOVAL


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY**

- (a) Remove the bolt and switch.
- (b) Disconnect the connector.

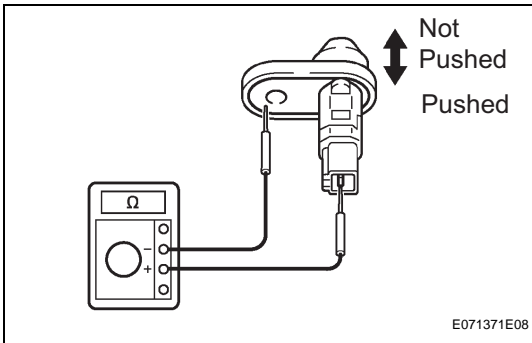

INSPECTION

1. **INSPECT BACK DOOR COURTESY LIGHT SWITCH ASSEMBLY**

- (a) Measure the resistance of the switch.

Standard resistance

Tester Connection	Condition	Specified Condition
1 - Switch body	Pushed	10 k Ω or higher
1 - Switch body	Not pushed	Below 1 Ω

If the result is not as specified, replace the switch assembly.