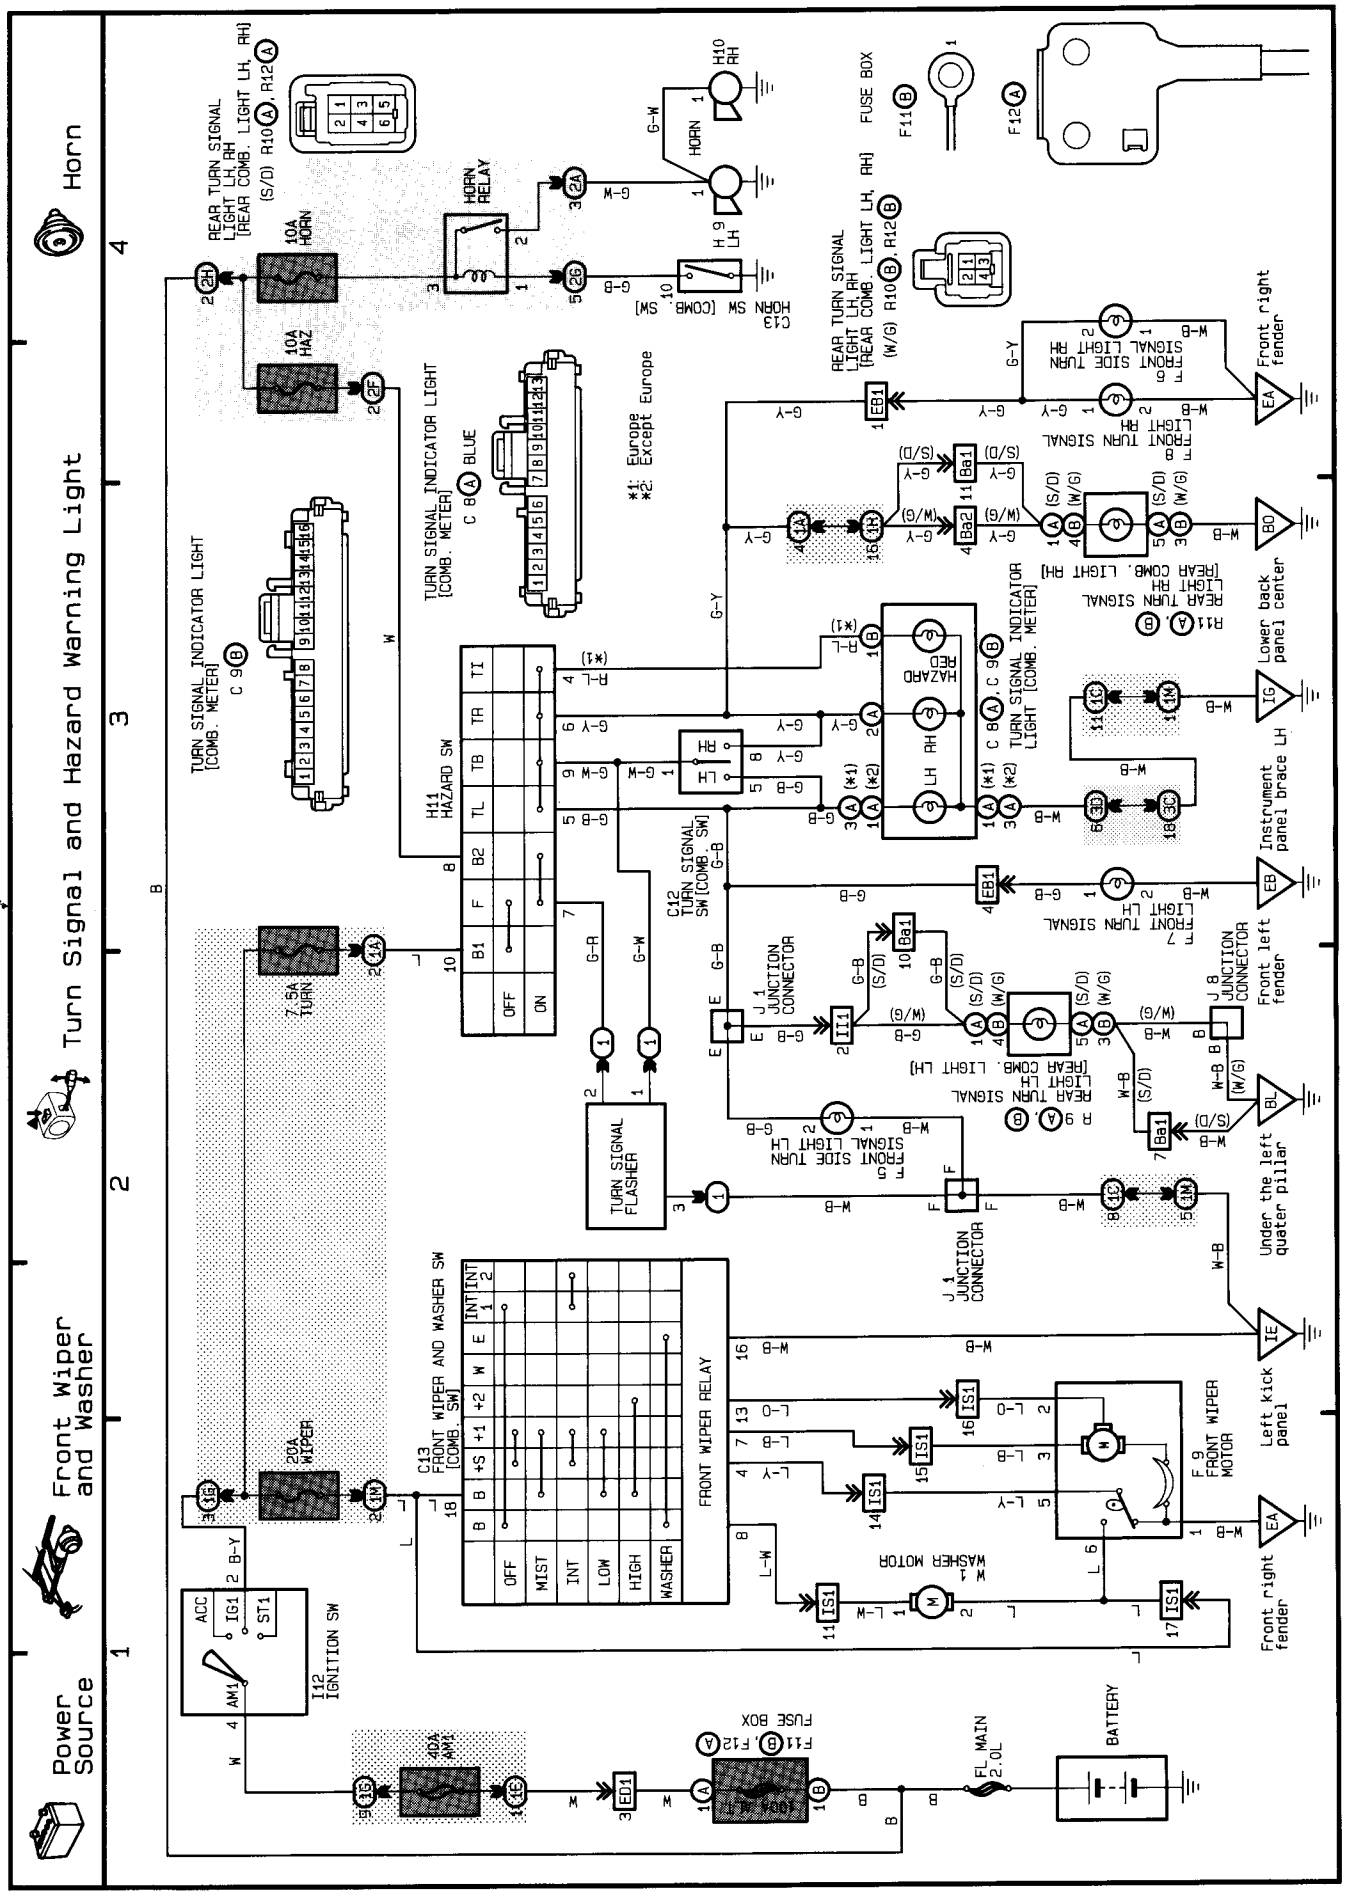
19 CAMRY (LHD)
Power Source
Front Wiper and Washer
Turn Signal and Hazard Warning Light
Horn
1
2
3
4
A
B
BATTERY
FL MAIN 2.0L
FUSE BOX
I12 IGNITION SW
ACC
IG1
ST1
AM1
40A AM1
ED1
F11 B, F12 A
20A WIPER
7.5A TURN
10A HAZ
10A HORN
HORN RELAY
C13 HORN SW [COMB. SW]
H10 RH
H9 LH
HORN
REAR TURN SIGNAL LIGHT LH, RH [REAR COMB. LIGHT LH, RH] (S/D) R10 A, R12 A
REAR TURN SIGNAL LIGHT LH, RH [REAR COMB. LIGHT LH, RH] (W/G) R10 B, R12 B
FUSE BOX
F11 B
F12 A
TURN SIGNAL INDICATOR LIGHT [COMB. METER] C 9 B
TURN SIGNAL INDICATOR LIGHT [COMB. METER] C 8 A BLUE
*1: Except Europe
*2: Europe
H11 HAZARD SW
OFF
ON
B1
F
B2
TL
TB
TR
TI
C12 TURN SIGNAL SW [COMB. SW]
TURN SIGNAL FLASHER
HAZARD RELAY
LH
RH
J1 JUNCTION CONNECTOR
J8 JUNCTION CONNECTOR
C13 FRONT WIPER AND WASHER SW [COMB. SW]
OFF
MIST
INT
LOW
HIGH
WASHER
FRONT WIPER RELAY
WASHER MOTOR
F9 FRONT WIPER MOTOR
FRONT TURN SIGNAL LIGHT RH
FRONT SIDE TURN SIGNAL LIGHT RH
FRONT TURN SIGNAL LIGHT LH
FRONT SIDE TURN SIGNAL LIGHT LH
REAR TURN SIGNAL LIGHT RH [REAR COMB. LIGHT RH]
REAR TURN SIGNAL LIGHT LH [REAR COMB. LIGHT LH]
Front right fender
Front left fender
Left kick panel
Under the left quarter pillar
Instrument panel brace LH
Lower back panel center