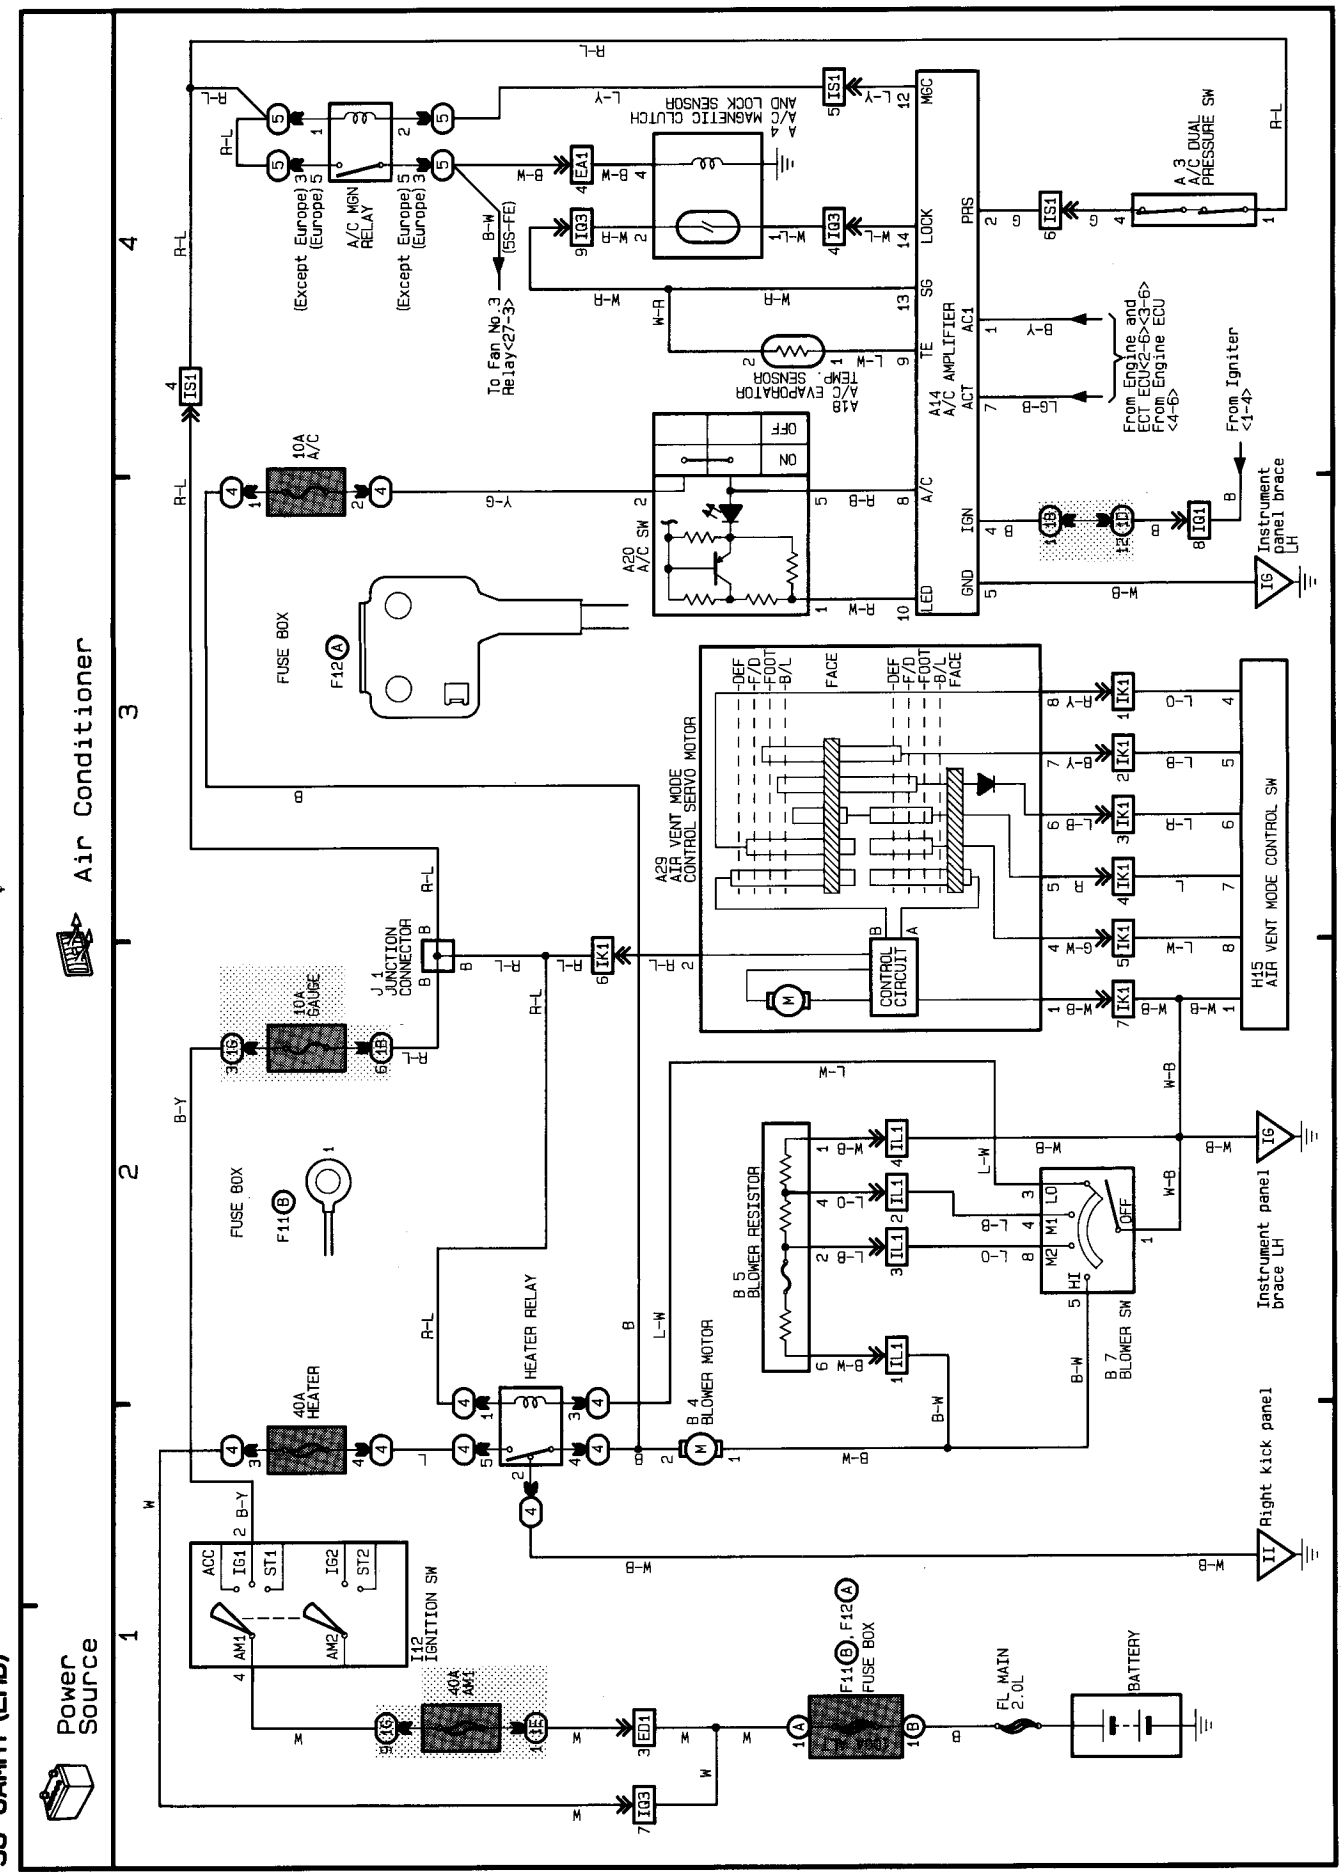
Power Source
Air Conditioner
BATTERY
FL MAIN 2.0L
FUSE BOX
F11 F12
IGNITION SW
I12
ACC
IG1
ST1
IG2
ST2
AM1
AM2
40A AM1
10A GAUGE
10A A/C
40A HEATER
HEATER RELAY
J1 JUNCTION CONNECTOR
B 4 BLOWER MOTOR
B 5 BLOWER RESISTOR
B 7 BLOWER SW
LO
M1
M2
HI
OFF
A29 AIR VENT MODE CONTROL SERVO MOTOR
CONTROL CIRCUIT
DEF
F/D
FOOT
B/L
FACE
H15 AIR VENT MODE CONTROL SW
A20 A/C SW
ON
OFF
A18 A/C EVAPORATOR TEMP. SENSOR
A14 A/C AMPLIFIER
A/C MAGNETIC CLUTCH AND LOCK SENSOR
A/C MGN RELAY
(Except Europe)
(Europe)
To Fan No.3 Relay<27-3>
A 3 A/C DUAL PRESSURE SW
From Engine and ECT ECU<2-6><3-6>
From Engine ECU <4-6>
From Igniter <1-4>
Instrument panel brace LH
Right kick panel
35 CAMRY (LHD)