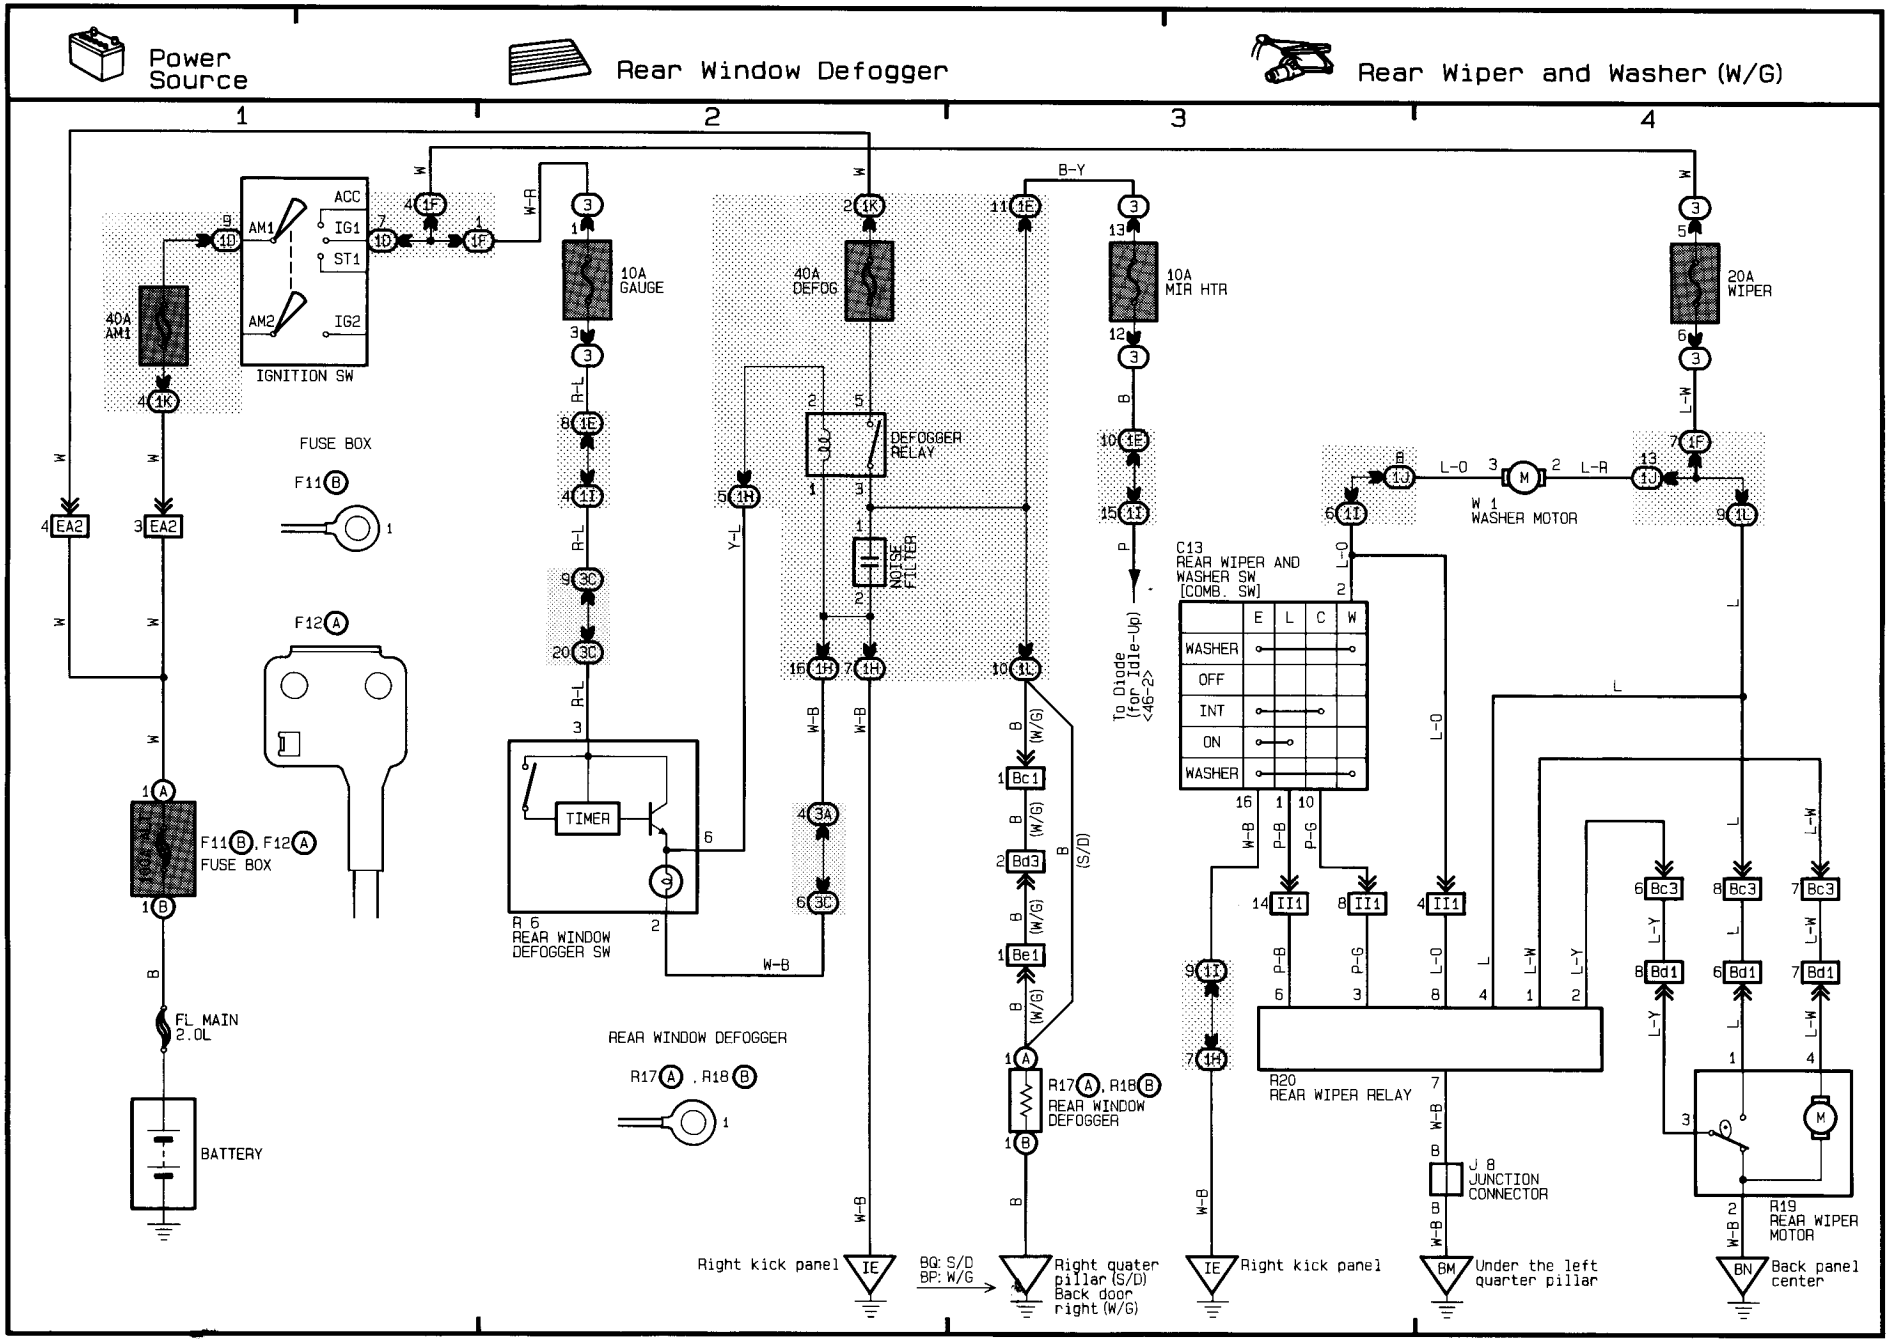
Power Source
Rear Window Defogger
Rear Wiper and Washer (W/G)
1
2
3
4
ACC
IG1
ST1
IG2
AM1
AM2
IGNITION SW
40A AM1
10A GAUGE
40A DEFOG
10A MIR HTR
20A WIPER
DEFOGGER RELAY
NOISE FILTER
FUSE BOX
F11 B
F12 A
F11 B , F12 A FUSE BOX
TIMER
R 6 REAR WINDOW DEFOGGER SW
REAR WINDOW DEFOGGER
R17 A , R18 B
R17 A , R18 B REAR WINDOW DEFOGGER
FL MAIN 2.0L
BATTERY
To Diode (for Idle-Up) <4G-2>
C13 REAR WIPER AND WASHER SW [COMB. SW]
E L C W
WASHER
OFF
INT
ON
WASHER
W 1 WASHER MOTOR
R20 REAR WIPER RELAY
J 8 JUNCTION CONNECTOR
R19 REAR WIPER MOTOR
Right kick panel
Right quater pillar (S/D) Back door right (W/G)
BQ: S/D
BP: W/G
Right kick panel
Under the left quarter pillar
Back panel center