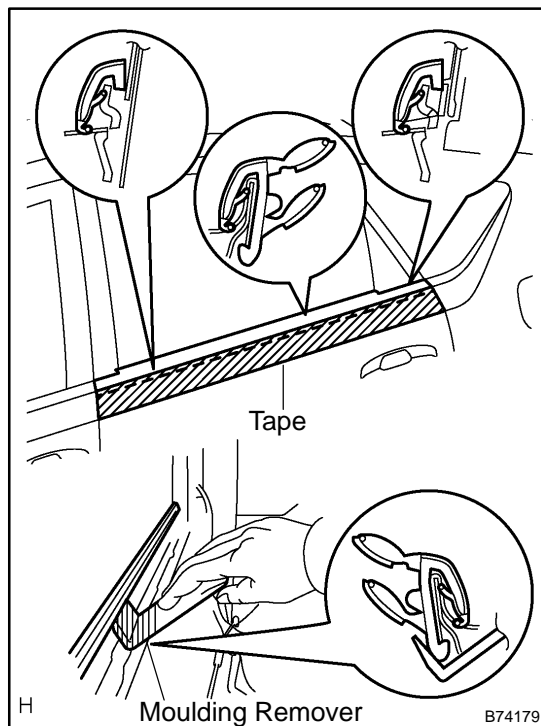


REAR DOOR BELT MOULDING REPLACEMENT

7615T-01

HINT:

- The installation procedures are the removal procedures in reverse order.
 - Use the same procedures for the RH side and LH side.
 - The procedures listed below are for the LH side.
1. **REMOVE FRONT DOOR INSIDE HANDLE BEZEL RH (See page 75-22)**
 2. **REMOVE DOOR PULL HANDLE (See page 75-22)**
 3. **REMOVE REAR DOOR ARMREST BASE PANEL UPPER LH (See page 75-22)**
 4. **REMOVE REAR DOOR TRIM BOARD SUB-ASSY RH (See page 75-22)**

**5. REMOVE REAR DOOR BELT MOULDING**

- (a) Put protective tape under the moulding.
- (b) Using a moulding remover, pry out the moulding as shown in the illustration.

HINT:

Tape the remover tip before use.