DTC	B2
DTC	

2287 LIN COMMUNICATION MASTER MALFUNCTION


DTC B2289 KEY COLLATION WAITING TIME OVER

CIRCUIT DESCRIPTION

This DTC is output when: 1) any other DTC is set in the power source control ECU; or 2) the wire harness between the power source control ECU and the transponder key ECU is open or short.

DTC No.	DTC Detection Condition	Trouble Area
B2287	Communication or communication line is abnormal between power source control ECU and transponder key ECU	 Power source control ECU Transponder key ECU Wire harness
B2289	Cable and BEAN are abnormal between power source con- trol ECU and immobilizer system; or immobilizer system is malfunctioning	 Power source control ECU Engine immobilizer system Wire harness

WIRING DIAGRAM

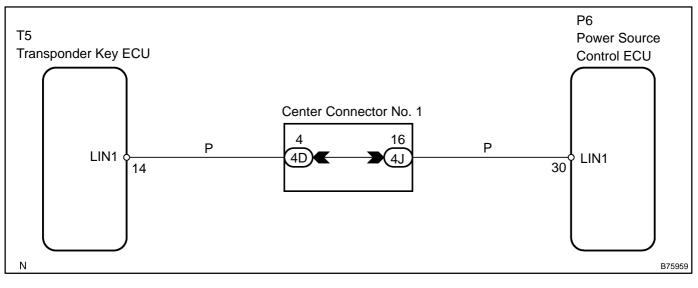

INSPECTION PROCEDURE

Power Source Control ECU

18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40

1011121314151617



CHECK WIRE HARNESS (POWER SOURCE CONTROL ECU – TRANSPONDER KEY ECU)


Wire Harness Side

1 2 3 4 5 6 7 8 9

- (a) Disconnect the P6 and T5 ECU connectors.
 (b) Measure the resistance of the wire harness side connec
 - tors.

Standard:

Tester Connection	Specified Condition
P6–30 (LIN1) – T5–14 (LIN1)	Below 1 Ω
P6–30 (LIN1) – Body ground	10 k Ω or higher

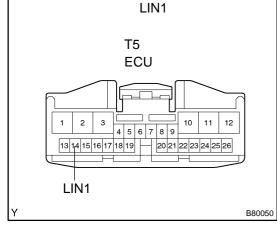

REPAIR OR REPLACE HARNESS AND CON-

OK

2 CHECK OPERATION OF POWER SOURCE CONTROL ECU

(a) After replacing power source control ECU with a normally functioning ECU, check that the hybrid control system can start normally.

Result	Proceed to
Hybrid system can start normally	A
Hybrid system cannot start (w/ smart entry system)	В
Hybrid system cannot start (w/o smart entry system)	С

OK: Hybrid vehicle control system can start normally.

в) С)

Go to ENGINE IMMOBILIZER SYSTEM (w/ SMART ENTRY SYSTEM) (See page 05–2325)



Go to ENGINE IMMOBILIZER SYSTEM (w/o SMART ENTRY SYSTEM) (See page 05–2375)

```
A
```

NORMAL (POWER SOURCE CONTROL ECU DEFECTIVE)