

<b>DTC</b>	<b>P2A00</b>	<b>A/F Sensor Circuit Slow Response (Bank 1 Sensor 1)</b>
<b>DTC</b>	<b>P2A03</b>	<b>A/F Sensor Circuit Slow Response (Bank 2 Sensor 1)</b>

**DESCRIPTION**

Refer to DTC P2195 (see page [ES-334](#)).


DTC No.	DTC Detection Condition	Trouble Area
P2A00	Calculated value of air-fuel ratio (A/F) sensor response rate deterioration level less than threshold (2 trip detection logic)	<ul style="list-style-type: none"> <li>• Open or short in A/F sensor circuit (bank 1)</li> <li>• A/F sensor (bank 1)</li> <li>• ECM</li> </ul>
P2A03	Calculated value of air-fuel ratio (A/F) sensor response rate deterioration level less than threshold (2 trip detection logic)	<ul style="list-style-type: none"> <li>• Open or short in A/F sensor circuit (bank 2)</li> <li>• A/F sensor (bank 2)</li> <li>• ECM</li> </ul>

**ES**

**MONITOR DESCRIPTION**

After the engine is warmed up, the ECM performs air-fuel ratio feedback control to maintain the air-fuel ratio at the stoichiometric level. In addition, active A/F control is performed for approximately 10 seconds after the preconditions are met in order to measure the A/F sensor response rate. During active A/F control, the ECM forcibly increases and decreases the injection volume a certain amount, based on the stoichiometric air-fuel ratio learned during normal air-fuel ratio control, and measures the A/F sensor response rate. The ECM receives a signal from the A/F sensor while performing active A/F control and uses it to calculate the A/F sensor response rate deterioration level.


If the A/F sensor response rate deterioration level is less than the threshold, the ECM interprets this as a malfunction and sets the DTC.

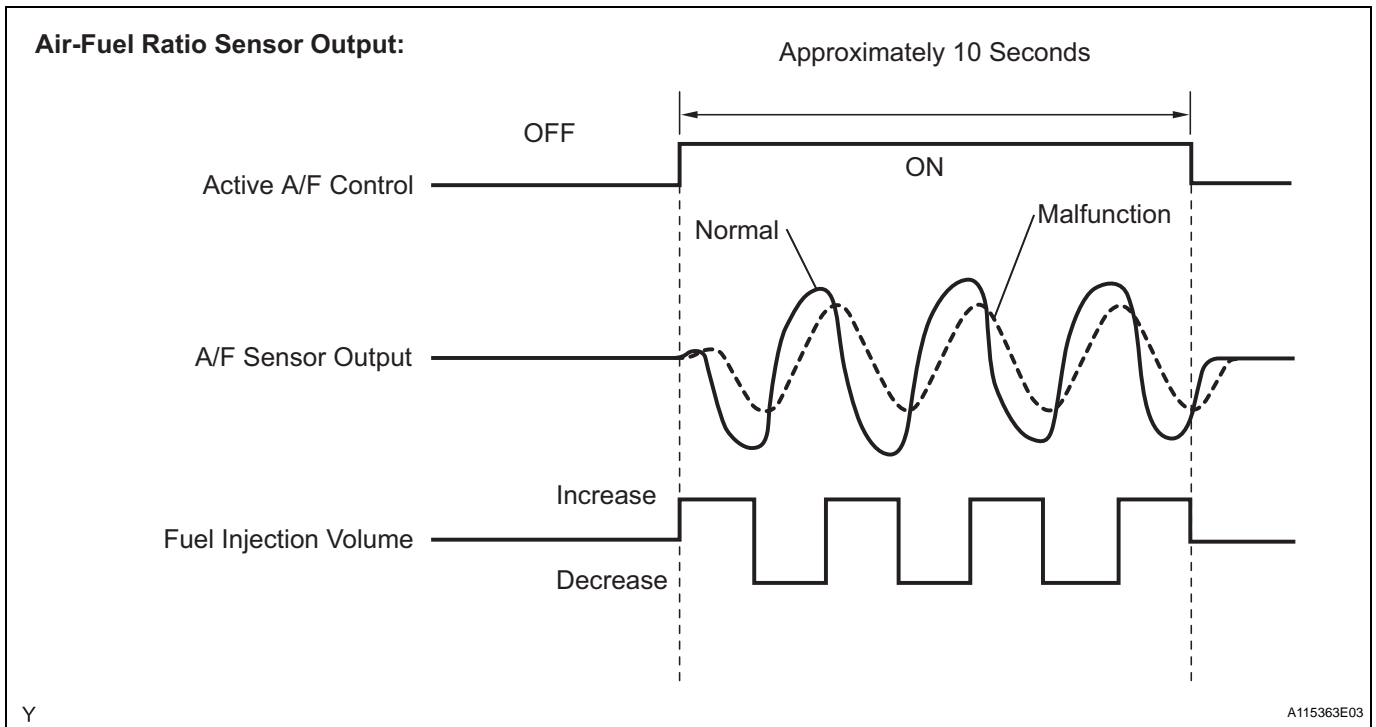


## CONFIRMATION DRIVING PATTERN

### HINT:

Performing this confirmation pattern will activate the A/F sensor response monitor.

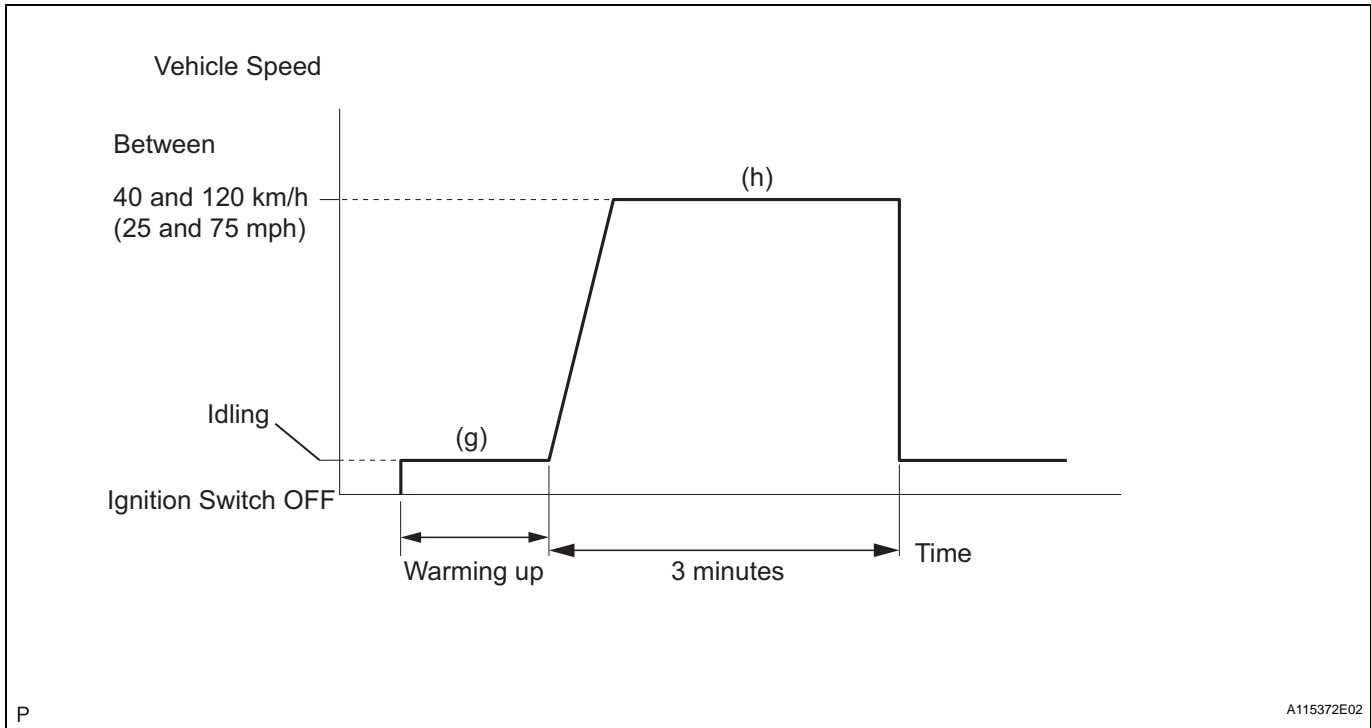

(a) Connect the intelligent tester to the DLC3.

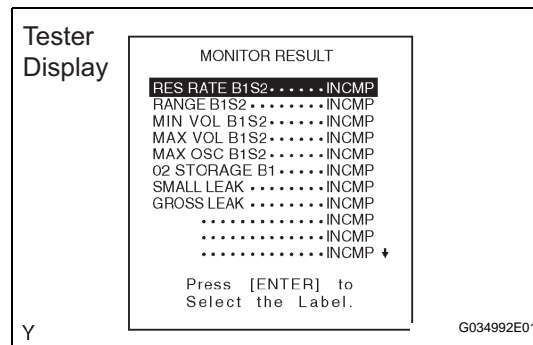

(b) Turn the ignition switch ON.

(c) Turn the tester ON.

(d) Clear DTCs (if set) (see page [ES-39](#)).

(e) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / MONITOR INFO / MONITOR RESULT.

(f) Check that RES RATE B1S1 is INCOMP.

(g) Start the engine and warm it up.

(h) Drive the vehicle at a constant speed of between 40 km/h and 120 km/h (25 mph and 75 mph) for 3 minutes.

(i) Check the monitor result values on the intelligent tester by selecting the following menu items: DIAGNOSIS / ENHANCED OBD II / MONITOR INFO / TEST RESULT.

(j) If the values indicated on the tester do not change, perform READINESS MONITOR DRIVE PATTERN for the A/F sensor and the heated oxygen sensor (see page [ES-22](#)).

### HINT:

Completion of all A/F sensor monitors is required to change the value in TEST RESULT.

(k) Note the value of the Monitor Result.

(l) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / PENDING CODES.

(m) Check if any DTCs (any pending DTCs) are set.

## MONITOR STRATEGY

Related DTCs	P2A00: Air-Fuel Ratio (A/F) sensor slow response (bank 1) P2A03: Air-Fuel Ratio (A/F) sensor slow response (bank 2)
Required Sensors/Components (Main)	A/F sensor
Required Sensors/Components (Related)	Vehicle speed sensor, Crankshaft position sensor
Frequency of Operation	Once per driving cycle
Duration	10 to 15 seconds
MIL Operation	2 driving cycles
Sequence of Operation	None

## TYPICAL ENABLING CONDITIONS

Monitor runs whenever following DTCs not present	P0031, P0032, P0051, P0052 (A/F Sensor heater - Sensor 1) P0100 - P0103 (MAF meter) P0110 - P0113 (IAT sensor) P0115 - P0118 (ECT sensor) P0120 - P0223, P2135 (TP sensor) P0125 (Insufficient ECT for Closed Loop) P0171, P0172 (Fuel system) P0300 - P0306 (Misfire) P0335 (CKP sensor) P0340 (CMP sensor) P0455, P0456 (EVAP system) P0500 (VSS) P2196, P2198 (A/F Sensor - rationality)
Active A/F control	Performing
Active A/F control performed when following conditions met	-
Engine coolant temperature	75°C (167°F) or more
Battery voltage	11 V or more
Idle	OFF
Engine RPM	Less than 4,000 rpm
A/F sensor status	Activated
Fuel-cut	OFF
Engine load	10 to 70%
Shift position	2 or more
Catalyst monitor	Not yet
Intake air amount	2.5 to 15 g/sec.

ES

## TYPICAL MALFUNCTION THRESHOLDS

Response rate deterioration level	Less than 0.18 V
-----------------------------------	------------------

## MONITOR RESULT

Refer to CHECKING MONITOR STATUS (see page [ES-19](#)).

## WIRING DIAGRAM

Refer to DTC P2195 (see page [ES-339](#)).

## INSPECTION PROCEDURE

HINT:

Intelligent tester only:

Malfunctioning areas can be identified by performing the A/F CONTROL function provided in the ACTIVE TEST. The A/F CONTROL function can help to determine whether the Air-Fuel Ratio (A/F) sensor, Heated Oxygen (HO2) sensor and other potential trouble areas are malfunctioning.

The following instructions describe how to conduct the A/F CONTROL operation using the intelligent tester.

- (a) Connect the intelligent tester to the DLC3.
- (b) Start the engine and turn the tester ON.
- (c) Warm up the engine at an engine speed of 2,500 rpm for approximately 90 seconds.
- (d) On the tester, select the following menu items: DIAGNOSIS / ENHANCED OBD II / ACTIVE TEST / A/F CONTROL.
- (e) Perform the A/F CONTROL operation with the engine idling (press the RIGHT or LEFT button to change the fuel injection volume).
- (f) Monitor the voltage outputs of the A/F and HO2 sensors (AFS B1 S1 and O2S B1 S2 or AFS B2 S1 and O2S B2 S2) displayed on the tester.

**HINT:**









- The A/F CONTROL operation lowers the fuel injection volume by 12.5% or increases the injection volume by 25%.
- The sensors react in accordance with increases and decreases in the fuel injection volume.






**Standard**

Tester Display (Sensor)	Injection Volume	Status	Voltage
AFS B1 S1 (A/F)	+25%	Rich	Less than 3.0
	-12.5%	Lean	More than 3.35
O2S B1 S2 (HO2)	+25%	Rich	More than 0.55
	-12.5%	Lean	Less than 0.4
AFS B2 S1 (A/F)	+25%	Rich	Less than 3.0
	-12.5%	Lean	More than 3.35
O2S B2 S2 (HO2)	+25%	Rich	More than 0.55
	-12.5%	Lean	Less than 0.4

**NOTICE:**

The A/F sensor has an output delay of a few seconds and the HO2 sensor has a maximum output delay of approximately 20 seconds.

Case	A/F Sensor (Sensor 1) Output Voltage		HO2 Sensor (Sensor 2) Output Voltage		Main Suspected Trouble Area
1	Injection Volume +25% -12.5%		Injection Volume +25% -12.5%		-
	Output Voltage More than 3.35 V Less than 3.0 V		Output Voltage More than 0.5 V Less than 0.4 V		
2	Injection Volume +25% -12.5%		Injection Volume +25% -12.5%		<ul style="list-style-type: none"> <li>• A/F sensor</li> <li>• A/F sensor heater</li> <li>• A/F sensor circuit</li> </ul>
	Output Voltage Almost no reaction		Output Voltage More than 0.5 V Less than 0.4 V		

Case	A/F Sensor (Sensor 1) Output Voltage		HO2 Sensor (Sensor 2) Output Voltage		Main Suspected Trouble Area
3	Injection Volume +25% -12.5%		Injection Volume +25% -12.5%		<ul style="list-style-type: none"> <li>HO2 sensor</li> <li>HO2 sensor heater</li> <li>HO2 sensor circuit</li> </ul>
	Output Voltage More than 3.35 V Less than 3.0 V		Output Voltage Almost no reaction	—————NG	
4	Injection volume +25% -12.5%		Injection Volume +25% -12.5%		<ul style="list-style-type: none"> <li>Injector</li> <li>Fuel pressure</li> <li>Gas leakage from exhaust system (Air-fuel ratio extremely lean or rich)</li> </ul>
	Output Voltage Almost no reaction	—————NG	Output voltage Almost no reaction	—————NG	

Following the A/F CONTROL procedure enables technicians to check and graph the voltage outputs of both the A/F and HO2 sensors.

To display the graph, select the following menu items on the tester: DIAGNOSIS / ENHANCED OBD II / ACTIVE TEST / A/F CONTROL / USER DATA / AFS B1 S1 and O2S B1 S2 or AFS B2 S1 and O2S B2 S2; then press the YES button and then the ENTER button followed by the F4 button.

HINT:

- Sensor 1 refers to the sensor mounted in front of the Three-Way Catalytic Converter (TWC) and located near the engine assembly.
- DTC P2A00 indicates malfunctions related to the bank 1 A/F sensor.
- DTC P2A03 indicates malfunctions related to the bank 2 A/F sensor.
- Bank 1 refers to the bank that includes cylinder No. 1.
- Bank 2 refers to the bank that includes cylinder No. 2.
- DTC P2A00 or P2A03 may be set when the air-fuel ratio is stuck rich or lean.
- A low A/F sensor voltage could be caused by a rich air-fuel mixture. Check for conditions that would cause the engine to run rich.
- A high A/F sensor voltage could be caused by a lean air-fuel mixture. Check for conditions that would cause the engine to run lean.
- Read freeze frame data using the intelligent tester. Freeze frame data records the engine condition when malfunctions are detected. When troubleshooting, freeze frame data can help determine if the vehicle was moving or stationary, if the engine was warmed up or not, if the air-fuel ratio was lean or rich, and other data from the time the malfunction occurred.

<b>1</b>	<b>CHECK ANY OTHER DTCS OUTPUT (IN ADDITION TO DTC P2A00 AND/OR P2A03)</b>
----------	--

- Connect the intelligent tester to the DLC3.
- Turn the ignition switch ON.
- Turn the tester ON.
- Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / CURRENT CODES.
- Read DTCs.

**Result**

Display (DTC Output)	Proceed to
P2A00 and/or P2A03	A
P2A00 and/or P2A03 and other DTCs	B

HINT:

If any DTCs relating to the A/F sensor (DTCs for the A/F sensor heater or A/F sensor admittance) are output, troubleshoot those DTCs first.

**B** → **GO TO DTC CHART**

**A**

**2** **INSPECT AIR-FUEL RATIO SENSOR (HEATER RESISTANCE) (See page ES-110)**

**NG** → **REPLACE AIR-FUEL RATIO SENSOR**

**OK**

**ES**

**3** **CHECK WIRE HARNESS (ECM - AIR-FUEL RATIO SENSOR) (See page ES-354)**

**NG** → **REPAIR OR REPLACE HARNESS AND CONNECTOR**

**OK**

**4** **PERFORM CONFIRMATION DRIVING PATTERN**

**NEXT**

**5** **CHECK WHETHER DTC OUTPUT RECURS (DTC P2A00 AND/OR P2A03)**

- (a) Connect the intelligent tester to the DLC3.
- (b) Turn the ignition switch ON and turn the tester ON.
- (c) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / PENDING CODES.
- (d) Read pending DTCs.

**Result**

Display (DTC Output)	Proceed to
P2A00 and/or P2A03	A
No output	B

**B** → **CHECK FOR INTERMITTENT PROBLEMS**

**A**

**6** **REPLACE AIR-FUEL RATIO SENSOR**

**NEXT**

**7** PERFORM CONFIRMATION DRIVING PATTERN

NEXT

**8** CHECK WHETHER DTC OUTPUT RECURS (DTC P2A00 AND/OR P2A03)

- (a) Connect the intelligent tester to the DLC3.
- (b) Turn the ignition switch ON and turn the tester ON.
- (c) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / PENDING CODES.
- (d) Read pending DTCs.

**Result**

Display (DTC Output)	Proceed to
No output	A
P2A00 and/or P2A03	B

ES

**B** REPLACE ECM

A

END