


BATTERY ECU COMMUNICATION STOP MODE

MODE DESCRIPTION

Detection Item	Symptom	Trouble Area
BATTERY ECU COMMUNICATION STOP MODE	<ul style="list-style-type: none"> "HV BATTERY" is not displayed on the "BUS CHECK" screen of the hand-held tester. Applies to "BATTERY ECU COMMUNICATION STOP MODE" in the "DTC COMBINATION TABLE" (see page 05-2605). 	Power source or inside the battery ECU

WIRING DIAGRAM

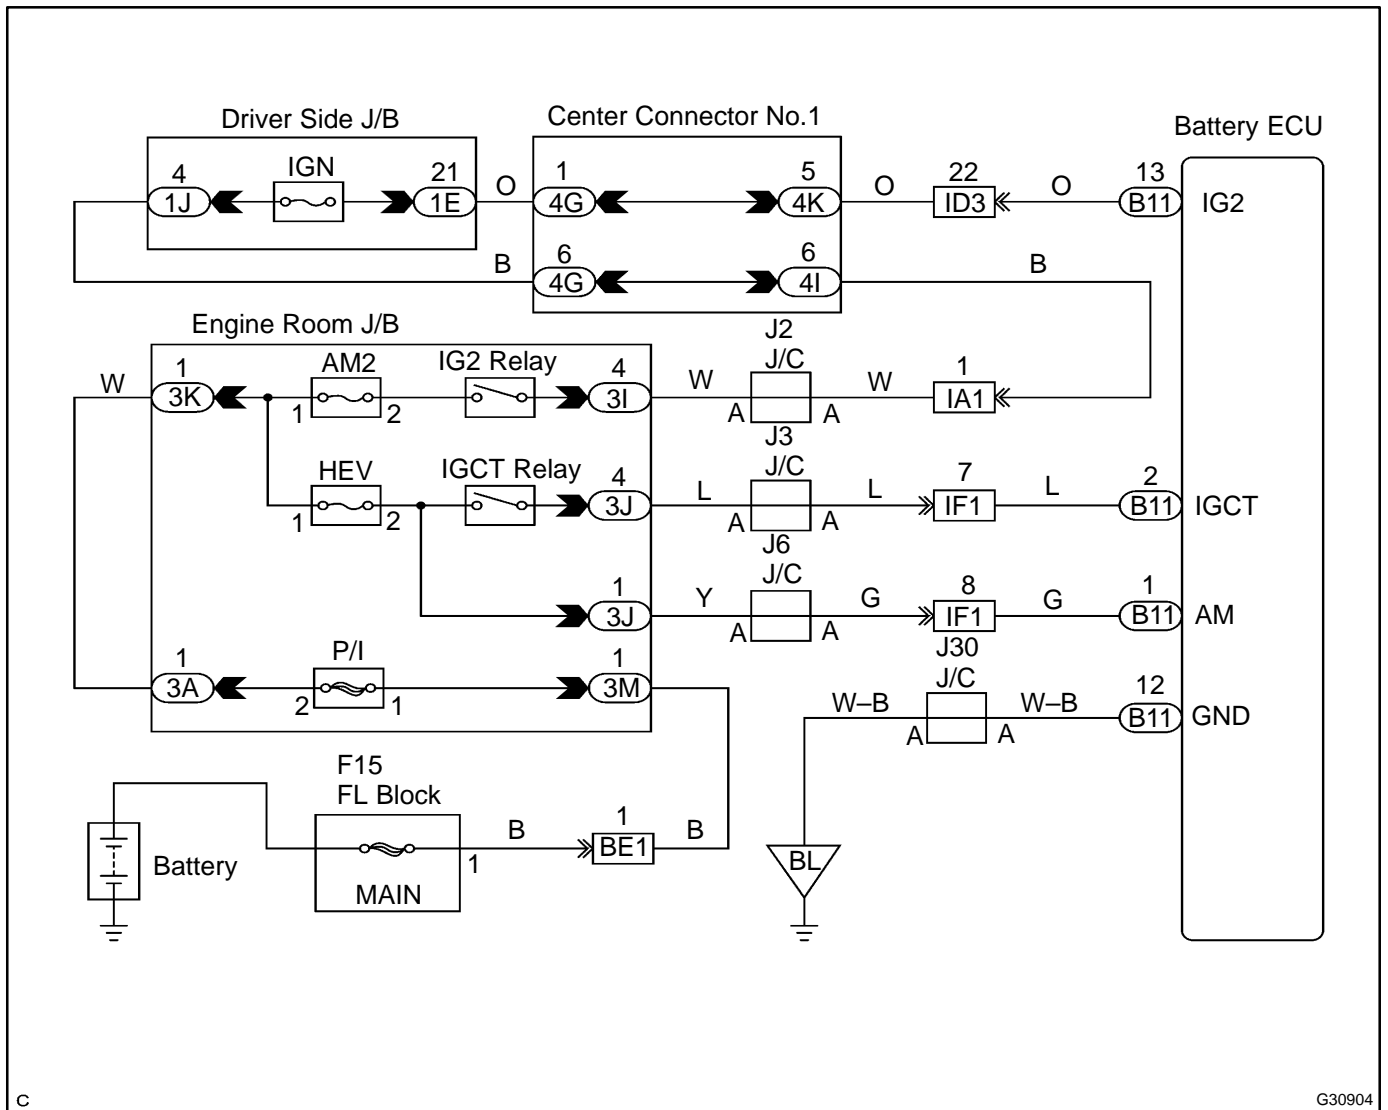


c

G30904

INSPECTION PROCEDURE

1 CHECK WIRE HARNESS(AM,IGCT,IG2,GND)

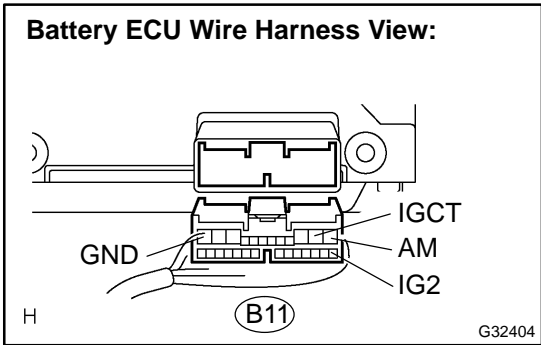

- (a) Turn the power switch off.
- (b) Measure the resistance according to the value(s) in the table below.
- (c) Measure the voltage according to the value(s) in the table below.

Standard:

Tester connection	Condition	Specified condition
B11-12 (GND) – Body ground	Always	Below 1 Ω
B11-1 (AM) – Body ground	Always	10 to 14 V
B11-2 (IGCT) – Body ground	Power Switch ON (IG)	10 to 14 V
B11-13 (IG2) – Body ground	Power Switch ON (IG)	10 to 14 V

NG → **REPAIR OR REPLACE WIRE HARNESS OR CONNECTOR**

OK

REPLACE BATTERY ECU ASSY (SEE PAGE 21-98)