

DTC	P2238	Oxygen (A/F) Sensor Pumping Current Circuit Low (Bank 1 Sensor 1)
DTC	P2239	Oxygen (A/F) Sensor Pumping Current Circuit High (Bank 1 Sensor 1)
DTC	P2252	Oxygen (A/F) Sensor Reference Ground Circuit Low (Bank 1 Sensor 1)
DTC	P2253	Oxygen (A/F) Sensor Reference Ground Circuit High (Bank 1 Sensor 1)

ES**DESCRIPTION**

Refer to DTC P2195 (see page [ES-292](#)).

DTC No.	DTC Detection Conditions	Trouble Areas
P2238	<ul style="list-style-type: none"> Case 1: Condition (a) or (b) continues for 5.0 seconds or more (2 trip detection logic): (a) AF+ voltage 0.5 V or less (b) (AF+) - (AF-) = 0.1 V or less Case 2: A/F sensor admittance: Less than 0.022 1/Ω (2 trip detection logic) 	<ul style="list-style-type: none"> Open or short in A/F sensor (sensor 1) circuit A/F sensor (sensor 1) A/F sensor heater (sensor 1) Integration relay (EFI MAIN relay) A/F sensor heater and EFI MAIN relay circuits ECM
P2239	AF+ voltage more than 4.5 V for 5.0 seconds or more (2 trip detection logic)	<ul style="list-style-type: none"> Open or short in A/F sensor (sensor 1) circuit A/F sensor (sensor 1) A/F sensor heater (sensor 1) Integration relay (EFI MAIN relay) A/F sensor heater and EFI MAIN relay circuits ECM
P2252	AF- voltage 0.5 V or less for 5.0 seconds or more (2 trip detection logic)	<ul style="list-style-type: none"> Open or short in A/F sensor (sensor 1) circuit A/F sensor (sensor 1) A/F sensor heater (sensor 1) Integration relay (EFI MAIN relay) A/F sensor heater and EFI MAIN relay circuits ECM
P2253	AF- voltage more than 4.5 V for 5.0 seconds or more (2 trip detection logic)	<ul style="list-style-type: none"> Open or short in A/F sensor (sensor 1) circuit A/F sensor (sensor 1) A/F sensor heater (sensor 1) Integration relay (EFI MAIN relay) A/F sensor heater and EFI MAIN relay circuits ECM

MONITOR DESCRIPTION

The Air-Fuel Ratio (A/F) sensor varies its output voltage in proportion to the air-fuel ratio. If the A/F sensor impedance (alternating current resistance) or output voltage deviates greatly from the standard range, the ECM determines that there is an open or short in the A/F sensor circuit.

MONITOR STRATEGY

Related DTCs	P2238: A/F sensor open circuit between AF+ and AF- P2238: A/F sensor short circuit between AF+ and AF- P2238: A/F sensor short circuit between AF+ and GND P2239: A/F sensor short circuit between AF+ and +B P2252: A/F sensor short circuit between AF- and GND P2253: A/F sensor short circuit between AF- and +B
Required Sensors/Components (Main)	A/F sensor
Required Sensors/Components (Related)	Engine Coolant Temperature (ECT) sensor, Crankshaft position sensor
Frequency of Operation	Once per driving cycle
Duration	10 seconds: A/F sensor open circuit between AF+ and AF- 5 seconds: Other
MIL Operation	2 driving cycles
Sequence of Operation	None

TYPICAL ENABLING CONDITIONS

Monitor runs whenever following DTCs not present	P0031, P0032 (A/F sensor heater - Sensor 1) P0100 - P0103 (MAF meter) P0110 - P0113 (IAT sensor) P0115 - P0118 (ECT sensor) P0120 - P0223, P2135 (TP sensor) P0125 (Insufficient ECT for Closed Loop) P0171, P0172 (Fuel system) P0300 - P0304 (Misfire) P0335 (CKP sensor) P0340 (CMP sensor) P0455, P0456 (EVAP system) P0500 (VSS)
--------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

P2238 (open circuit between AF+ and AF-):

AF+ terminal voltage	0.5 to 4.5 V
AF- terminal voltage	0.5 to 4.5 V
Difference between AF+ and AF- terminal voltages	0.1 to 0.8 V
ECT	10°C (50°F) or more (varies with ECT at engine start)
Engine	Running
Fuel-cut	OFF
Time after fuel-cut OFF	2.5 seconds or more
A/F sensor heater	ON
Battery voltage	10.5 V or more
Ignition switch	ON
Time after ignition switch is OFF to ON	5 seconds or more

Other:

Battery voltage	10.5 V or more
Ignition switch	ON
Time after ignition switch is OFF to ON	5 seconds or more

TYPICAL MALFUNCTION THRESHOLDS

P2238 (Open circuit between AF+ and AF-):

A/F sensor admittance	Below 0.022 1/Ω
-----------------------	-----------------

P2238 (Short circuit between AF+ and GND):

AF+ terminal voltage	0.5 V or less
----------------------	---------------

P2238 (Short circuit between AF+ and AF-):

Difference between AF+ and AF- terminal voltages	0.1 V or less
--------------------------------------------------	---------------

P2239 (Short circuit between AF+ and +B):

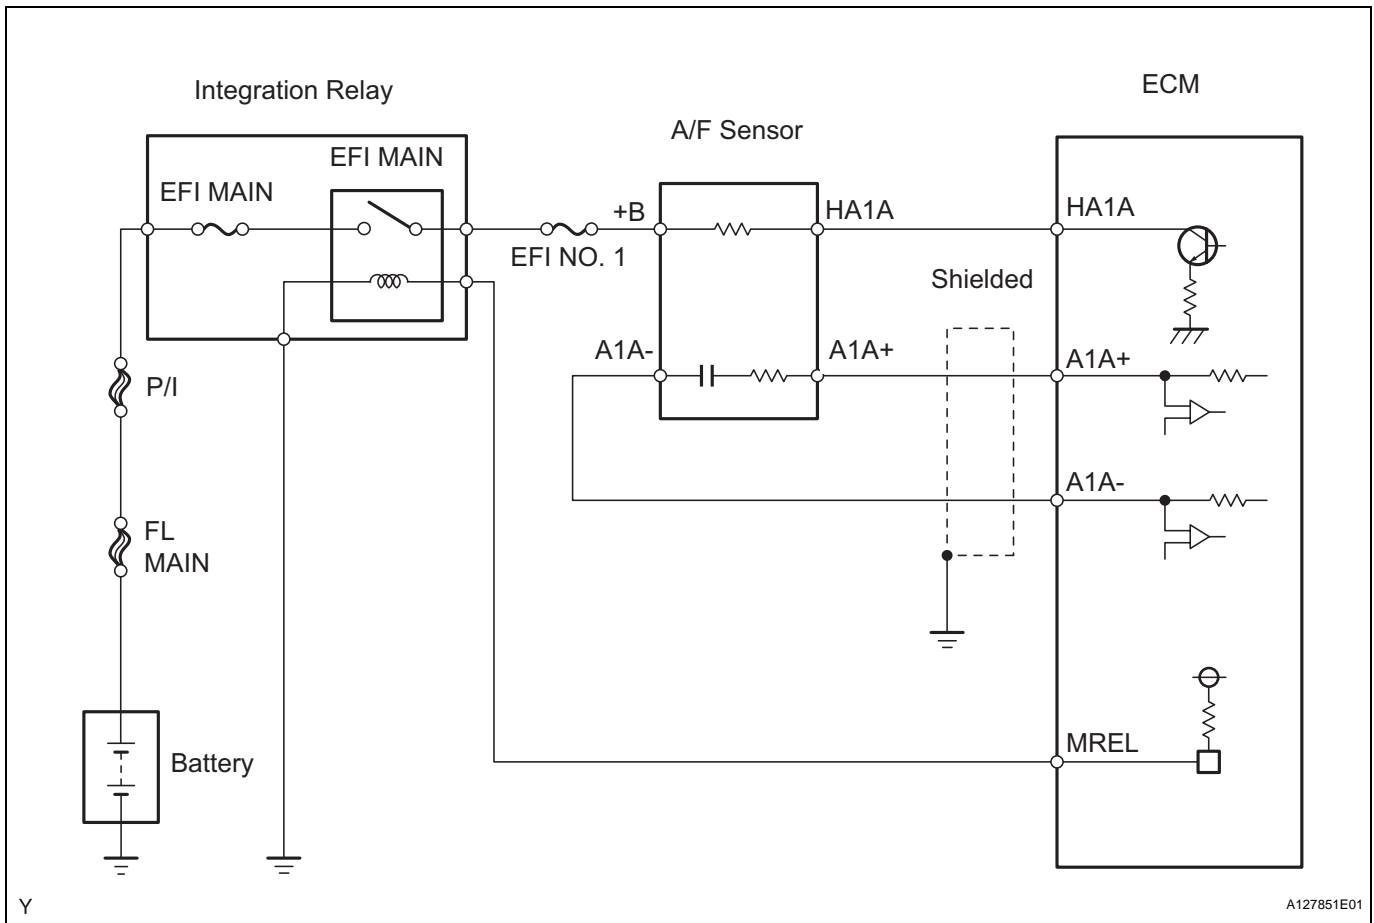
AF+ terminal voltage	More than 4.5 V
----------------------	-----------------

P2252 (Short circuit between AF- and GND):

AF- terminal voltage	0.5 V or less
----------------------	---------------

P2253 (Short circuit between AF- and +B):

AF- terminal voltage	More than 4.5 V
----------------------	-----------------

WIRING DIAGRAM**INSPECTION PROCEDURE****HINT:**

- Although the DTC titles say oxygen sensor, these DTCs relate to the Air-Fuel Ratio (A/F) sensor.
- Sensor 1 refers to the sensor mounted in front of the Three-Way Catalytic Converter (TWC) and located near the engine assembly.

HINT:

Intelligent tester only:

Malfunctioning areas can be identified by performing the A/F CONTROL function provided in the ACTIVE TEST. The A/F CONTROL function can help to determine whether the Air-Fuel Ratio (A/F) sensor, Heated Oxygen (HO2) sensor and other potential trouble areas are malfunctioning.

The following instructions describe how to conduct the A/F CONTROL operation using the intelligent tester.

- Connect the intelligent tester to the DLC3.
- Start the engine and turn the tester ON.
- Warm up the engine at an engine speed of 2,500 rpm for approximately 90 seconds.

(d) On the tester, select the following menu items: DIAGNOSIS / ENHANCED OBD II / ACTIVE TEST / A/F CONTROL.

(e) Perform the A/F CONTROL operation with the engine idling (press the RIGHT or LEFT button to change the fuel injection volume).

(f) Monitor the output voltages of the A/F and HO2 sensors (AFS B1 S1 and O2S B1 S2) displayed on the tester.

HINT:

















- The A/F CONTROL operation lowers the fuel injection volume by 12.5 % or increases the injection volume by 25 %.
- The sensors react in accordance with increases and decreases in the fuel injection volume.

Standard

Tester Display (Sensor)	Injection Volume	Status	Voltages
AFS B1 S1 (A/F)	+25 %	Rich	Less than 3.0
	-12.5 %	Lean	More than 3.35
O2S B1 S2 (HO2)	+25 %	Rich	More than 0.5
	-12.5 %	Lean	Less than 0.4

NOTICE:

The A/F sensor has an output delay of a few seconds and the HO2 sensor has a maximum output delay of approximately 20 seconds.

Case	A/F Sensor (Sensor 1) Output Voltage		HO2 Sensor (Sensor 2) Output Voltage		Main Suspected Trouble Areas
1	Injection Volume +25 % -12.5 %		Injection Volume +25 % -12.5 %		-
	Output Voltage More than 3.35 V Less than 3.0 V		Output Voltage More than 0.5 V Less than 0.4 V		
2	Injection Volume +25 % -12.5 %		Injection Volume +25 % -12.5 %		<ul style="list-style-type: none"> • A/F sensor • A/F sensor heater • A/F sensor circuit
	Output Voltage Almost no reaction		Output Voltage More than 0.5 V Less than 0.4 V		
3	Injection Volume +25 % -12.5 %		Injection Volume +25 % -12.5 %		<ul style="list-style-type: none"> • HO2 sensor • HO2 sensor heater • HO2 sensor circuit
	Output Voltage More than 3.35 V Less than 3.0 V		Output Voltage Almost no reaction		
4	Injection volume +25 % -12.5 %		Injection Volume +25 % -12.5 %		<ul style="list-style-type: none"> • Injector • Fuel pressure • Gas leakage from exhaust system (Air-fuel ratio extremely lean or rich)
	Output Voltage Almost no reaction		Output Voltage Almost no reaction		

Following the A/F CONTROL procedure enables technicians to check and graph the output voltages of both the A/F and HO2 sensors.

To display the graph, select the following menu items on the tester: DIAGNOSIS / ENHANCED OBD II / ACTIVE TEST / A/F CONTROL / USER DATA / AFS B1 S1 and O2S B1 S2; then press the YES button and then the ENTER button followed by the F4 button.

HINT:

Read freeze frame data using the intelligent tester. Freeze frame data records the engine condition when malfunctions are detected. When troubleshooting, freeze frame data can help determine if the vehicle was moving or stationary, if the engine was warmed up or not, if the air-fuel ratio was lean or rich, and other data from the time the malfunction occurred.

1 INSPECT AIR-FUEL RATIO SENSOR (HEATER RESISTANCE) (See page ES-83)

NG

REPLACE AIR-FUEL RATIO SENSOR

OK

2 INSPECT INTEGRATION RELAY (EFI MAIN RELAY) (See page ES-84)

NG

REPLACE INTEGRATION RELAY (EFI MAIN RELAY)

OK

3 CHECK HARNESS AND CONNECTOR (A/F SENSOR - ECM) (See page ES-310)

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4 REPLACE AIR-FUEL RATIO SENSOR

NEXT

5 CHECK WHETHER DTC OUTPUT RECURS

- (a) Connect the intelligent tester to the DLC3.
- (b) Turn the ignition switch ON and turn the tester ON.
- (c) Clear DTCs (see page [ES-35](#)).
- (d) Start the engine.
- (e) Allow the engine to idle for 5 minutes or more.
- (f) Select the following menu items: DIAGNOSIS / ENHANCED OBD II / DTC INFO / PENDING CODES.
- (g) Read pending DTCs.

Result

Display (DTC Output)	Proceed To
No output	A
P2238, P2239, P2252 or P2253	B

B

REPLACE ECM

A

END