

## AVC-LAN CIRCUIT (RADIO RECEIVER ASSY - MULTI-DISPLAY)


### CIRCUIT DESCRIPTION

Each unit of the navigation system connected to AVC-LAN (communication bus) communicates by transferring the signals from each switch.

When +B short and GND short occur in this AVC-LAN, navigation system will not function normally as communication is discontinued.


In AVC-LAN, multi-display becomes the communication master, and the radio receiver assy has enough resistance necessary for transmitting the communication.

### WIRING DIAGRAM

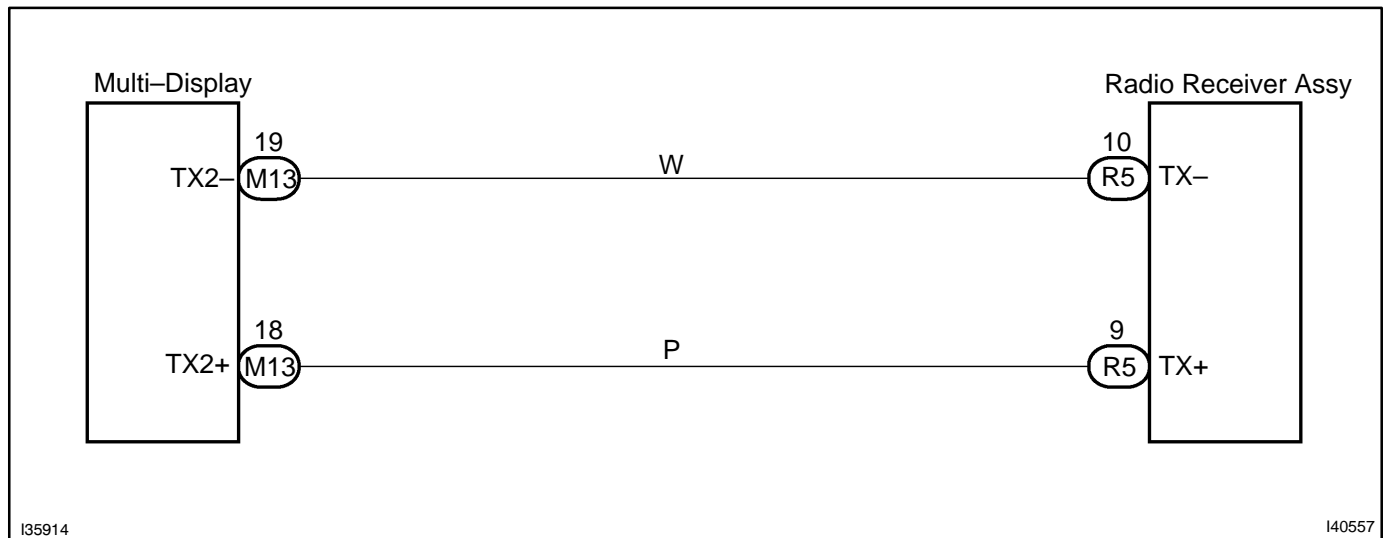

# INSPECTION PROCEDURE

## 1 INSPECT RADIO RECEIVER ASSY

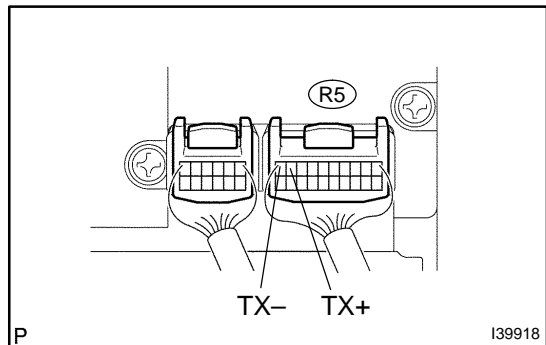

- (a) Measure the resistance according to the value(s) in the table below.


**Standard:**

Tester connection	Condition	Specified condition
TX+ - TX-	Always	60 to 80 Ω

**NG** REPLACE RADIO RECEIVER ASSY (SEE PAGE 67-5)

**OK**


## 2 CHECK HARNESS AND CONNECTOR(RADIO RECEIVER ASSY - MULTI-DISPLAY)

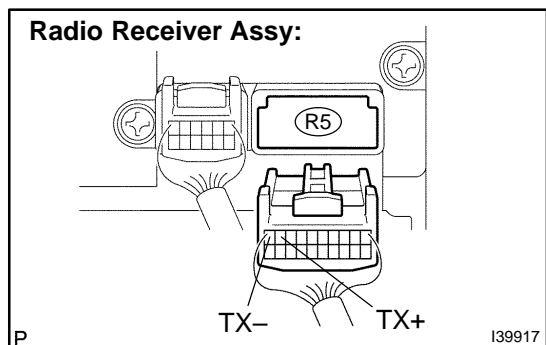

- (a) Disconnect the connector from the radio receiver assy R5 and stereo multi-display M13.  
 (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified condition
TX+ - TX2+	Always	Below 1 Ω
TX- - TX2-	Always	Below 1 Ω
TX+ - Body ground	Always	10 kΩ or higher
TX- - Body ground	Always	10 kΩ or higher

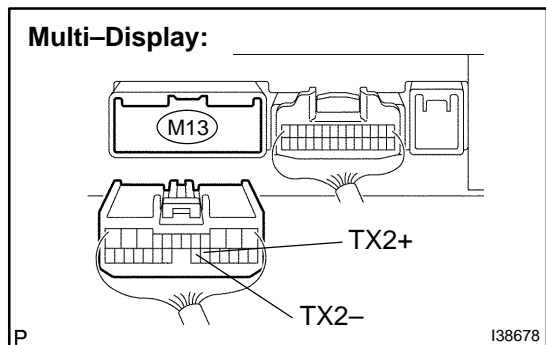

**NG** REPAIR OR REPLACE HARNESS OR CONNECTOR

**OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1888)**