

## AVC-LAN CIRCUIT (NAVIGATION ECU - MULTI-DISPLAY)


### CIRCUIT DESCRIPTION

Each unit of the navigation system connected to AVC-LAN (communication bus) communicates by transferring the signals from each switch.

When +B short and GND short occur in this AVC-LAN, navigation system will not function normally as communication is discontinued.


In AVC-LAN, multi-display becomes the communication master, and the radio receiver assy has enough resistance necessary for transmitting the communication.

### WIRING DIAGRAM

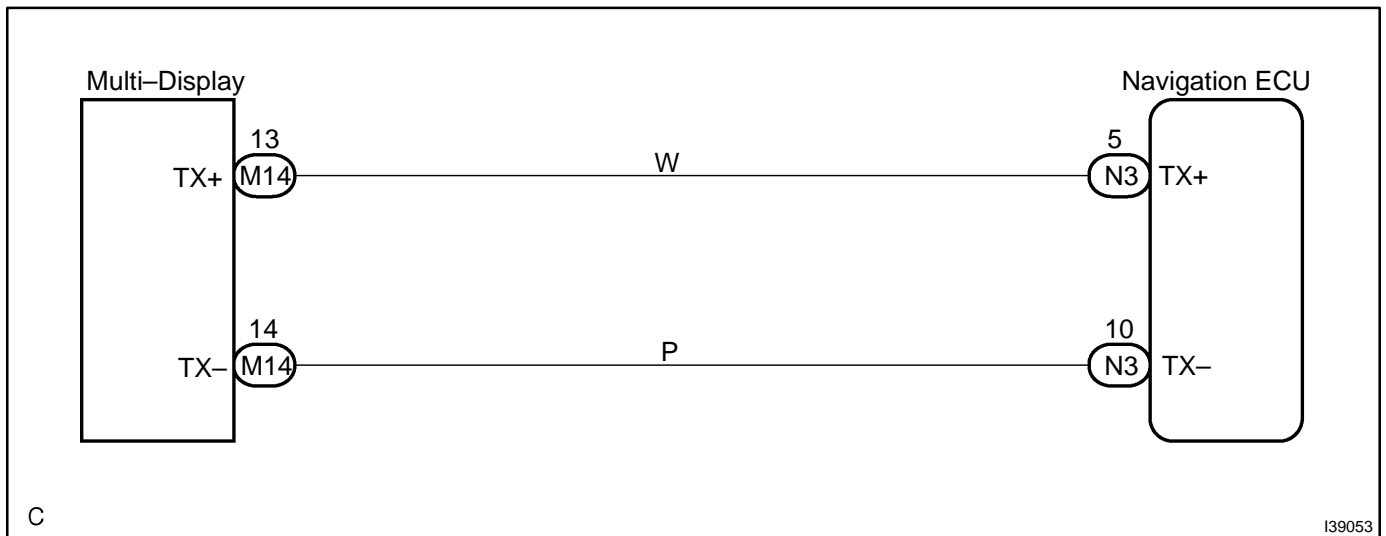

# INSPECTION PROCEDURE


## 1 CHECK HARNESS AND CONNECTOR(NAVIGATION ECU – MULTI-DISPLAY)

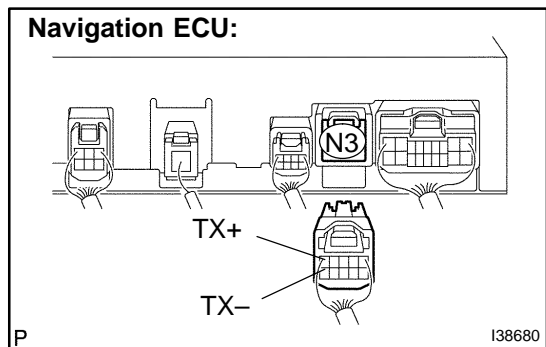

- (a) Disconnect the connector from the navigation ECU N3 and multi-display M14.
- (b) Measure the resistance according to the value(s) in the table below.

**Standard:**

Tester connection	Condition	Specified condition
TX+ (N3) – TX+ (M14)	Always	Below 1 Ω
TX- (N3) – TX- (M14)	Always	Below 1 Ω
TX+ (N3) – Body ground	Always	10 kΩ or higher
TX- (N3) – Body ground	Always	10 kΩ or higher

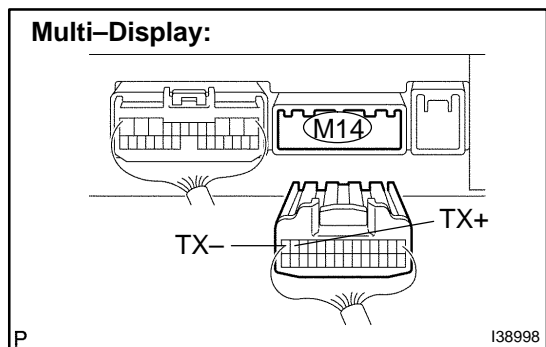

**NG** REPAIR OR REPLACE HARNESS OR CONNECTOR

**OK**

**PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN DIAGNOSTIC TROUBLE CODE CHART (SEE PAGE 05-1888)**