


HYBRID VEHICLE CONTROL ECU COMMUNICATION STOP MODE

MODE DESCRIPTION

| Detection Item | Symptom | Trouble Area |
|--|--|---|
| HYBRID VEHICLE CONTROL ECU COMMUNICATION STOP MODE | <ul style="list-style-type: none"> • "HYBRID CONTROL" is not displayed on the "BUS CHECK" screen of the hand-held tester. • Applies to "HYBRID VEHICLE CONTROL ECU COMMUNICATION STOP MODE" in the "DTC COMBINATION TABLE" (see page 05-2605). | <ul style="list-style-type: none"> • Power source or inside the hybrid vehicle control ECU • Hybrid vehicle control ECU sub bus line or connector |

WIRING DIAGRAM

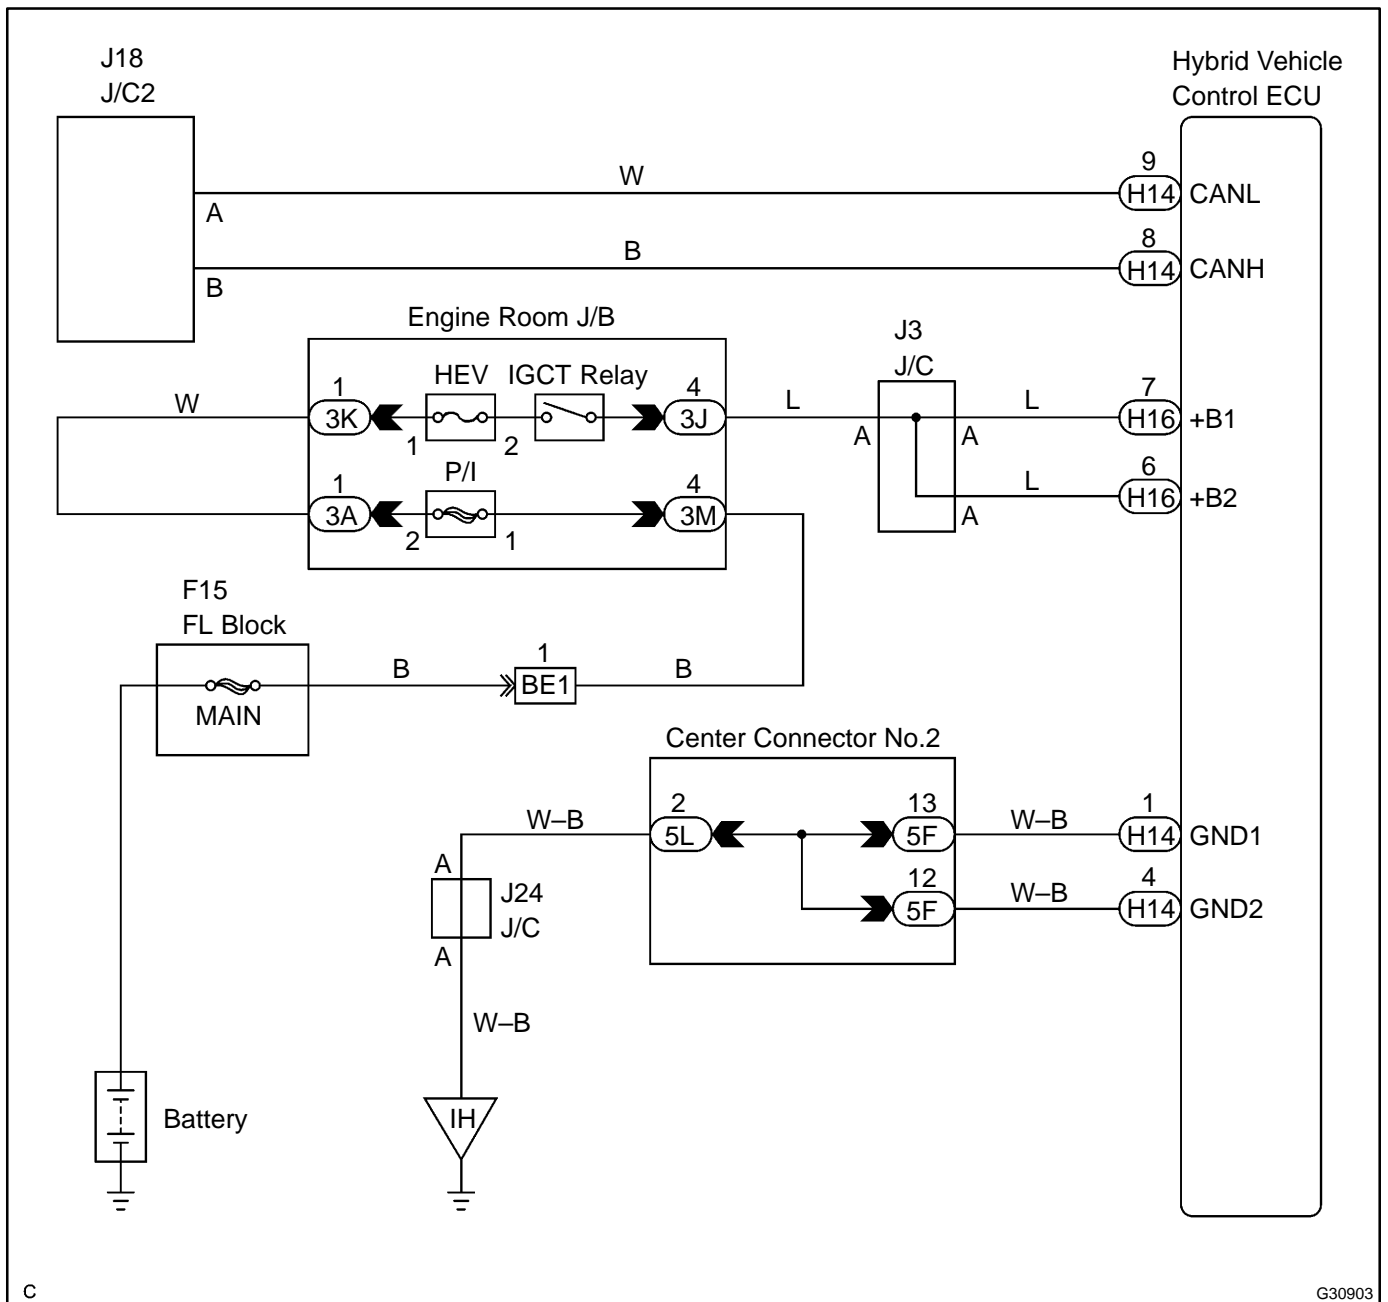


C

G30903

INSPECTION PROCEDURE

1 CHECK CAN BUS LINE FOR DISCONNECTION(HYBRID VEHICLE CONTROL ECU SUB BUS LINE)

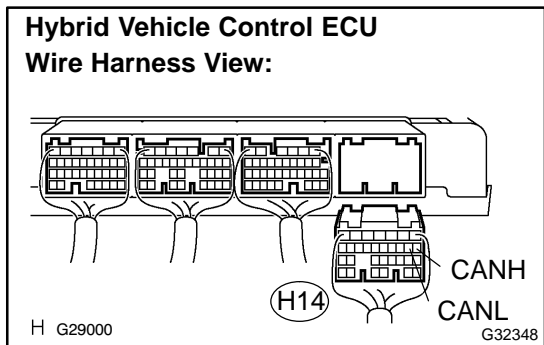

- (a) Turn the power switch off.
- (b) Disconnect the hybrid vehicle control ECU connector (H14).
- (c) Measure the resistance according to the value(s) in the table below.


Standard:

| Tester connection | Condition | Specified value |
|-----------------------------|------------------|-----------------|
| H14-8 (CANH) – H14-9 (CANL) | Power Switch OFF | 54 to 69 Ω |

NG → **REPLACE HYBRID VEHICLE CONTROL ECU SUB BUS LINE OR CONNECTOR (CAN-H, CAN-L)**

OK

2 CHECK WIRE HARNESS (+B1, +B2, GND1, GND2)

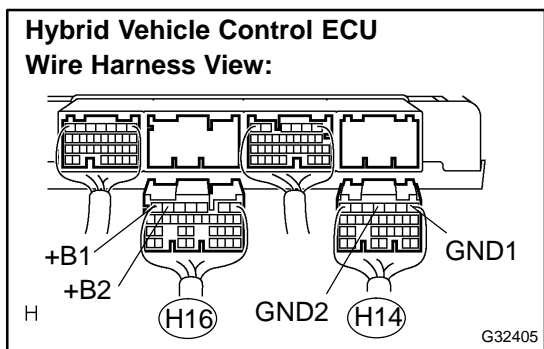

- (a) Disconnect the hybrid vehicle control ECU connector (H16).
- (b) Measure the resistance according to the value(s) in the table below.
- (c) Measure the voltage according to the value(s) in the table below.

Standard:

| Tester connection | Condition | Specified value |
|----------------------------|----------------------|-----------------|
| H14-1 (GND1) – Body ground | Always | Below 1 Ω |
| H14-4 (GND2) – Body ground | Always | Below 1 Ω |
| H16-7 (+B1) – Body ground | Power Switch ON (IG) | 10 to 14 V |
| H16-6 (+B2) – Body ground | Power Switch ON (IG) | 10 to 14 V |

NG → **REPAIR OR REPLACE WIRE HARNESS OR CONNECTOR**

OK

REPLACE HYBRID VEHICLE CONTROL ECU (SEE PAGE 21-124)