


# INSPECTION

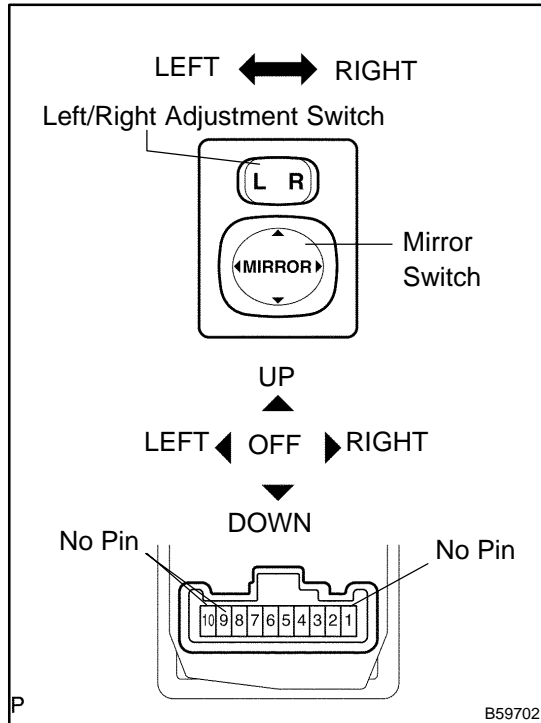

## 1. INSPECT OUTER MIRROR SWITCH ASSY

- (a) Press L on the left/right adjustment switch. Measure the resistance between the mirror switch terminals.

### Standard (Left side):

Terminal Connection	Switch Condition	Specified Condition
4-8 6-7	UP	Below 1 $\Omega$
4-7 6-8	DOWN	Below 1 $\Omega$
5-8 6-7	LEFT	Below 1 $\Omega$
5-7 6-8	RIGHT	Below 1 $\Omega$


If the result is not as specified, replace the switch assy.

- (b) Press R on the left/right adjustment switch. Measure the resistance between the mirror switch terminals.

### Standard (Right side):

Terminal Connection	Switch Condition	Specified Condition
3-8 6-7	UP	Below 1 $\Omega$
3-7 6-8	DOWN	Below 1 $\Omega$
2-8 6-7	LEFT	Below 1 $\Omega$
2-7 6-8	RIGHT	Below 1 $\Omega$

If the result is not as specified, replace the switch assy.

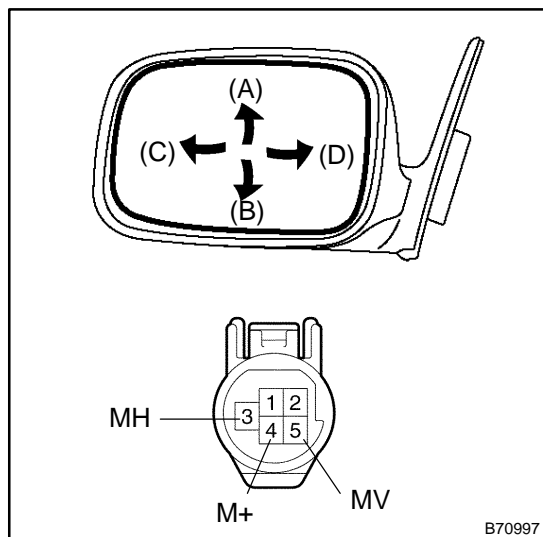


## 2. INSPECT OUTER REAR VIEW MIRROR ASSY LH

- (a) Disconnect the mirror connector.
- (b) Apply battery voltage to the mirror terminals and check operation of the mirror face, as shown in the table and illustration.

**OK:**

Measurement Condition	Mirror Operation
Battery positive (+) → Terminal 5 (MV) Battery negative (-) → Terminal 4 (M+)	Turns upward (A)
Battery positive (+) → Terminal 4 (M+) Battery negative (-) → Terminal 5 (MV)	Turns downward (B)
Battery positive (+) → Terminal 3 (MH) Battery negative (-) → Terminal 4 (M+)	Turns left (C)
Battery positive (+) → Terminal 4 (M+) Battery negative (-) → Terminal 3 (MH)	Turns right (D)

If the result is not as specified, replace the mirror assy.

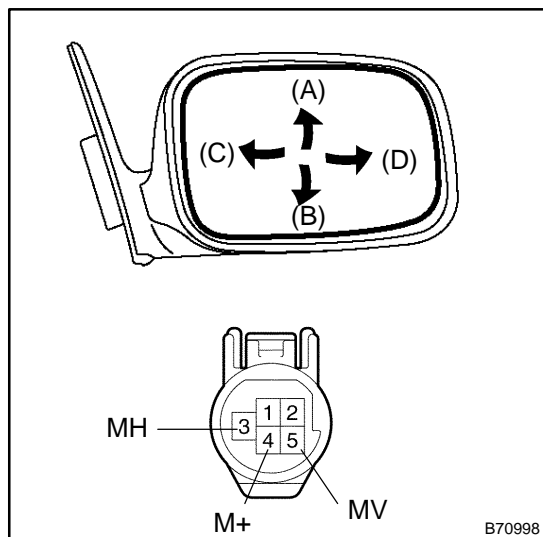

## 3. INSPECT OUTER REAR VIEW MIRROR ASSY RH

- (a) Disconnect the mirror connector.
- (b) Apply battery voltage to the mirror terminals and check operation of the mirror face, as shown in the table and illustration.

**OK:**

Measurement Condition	Mirror Operation
Battery positive (+) → Terminal 5 (MV) Battery negative (-) → Terminal 4 (M+)	Turns upward (A)
Battery positive (+) → Terminal 4 (M+) Battery negative (-) → Terminal 5 (MV)	Turns downward (B)
Battery positive (+) → Terminal 3 (MH) Battery negative (-) → Terminal 4 (M+)	Turns right (C)
Battery positive (+) → Terminal 4 (M+) Battery negative (-) → Terminal 3 (MH)	Turns left (D)

If the result is not as specified, replace the mirror assy.